

# **OMAKER**

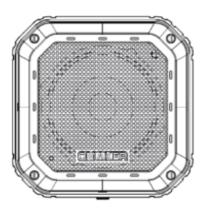


OMAKER Nature
Portable Waterproof Bluetooth Speaker
User Manual

# **Packing List**

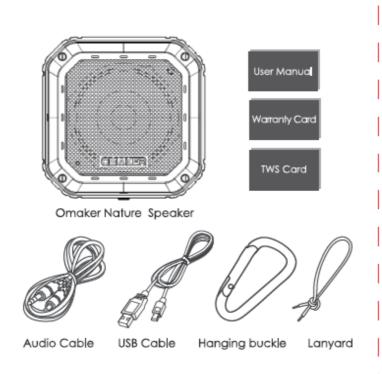

### **Button Instructions**

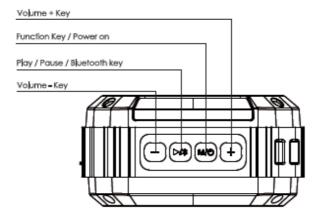

Volume-up key: Short press to increase volume/Long press for continuously increase volume/Double-Click to play next track.

**Power / Function key:** Short press to switch EQ/Long press for 3s to power on.

**Play/Pause Key/Bluetooth key:** Short press to play or pause/ Long press to disconnect Bluetooth/Double - Click to enter TWS mode.

when a call comes, short press to answer/long press to reject. When calling, short press to hang up the call.

**Volume-down key:** Short press to decrease volume/Long press for continuously decrease volume/Double-Click to play the previous track.

### **Operating Interactive Description**


### Power on/Function Key:

- Short Press: short press will switch to different Equalizer mode.
- Long Press: in state of power off,long press for 3s to power on. In state of working,long press for 3s to power off.
- In state of booting and no connection with any Bluetooth, turn on the Bluetooth of your phone/iPad/laptop or other Bluetooth-enabled devices and find Omaker Nature, click to connect. When Paring succeed, device will issue prompt"Ding".

### Play/Pause/Bluetooth Key:

- Short Press: short press to play the track or pause.
- Long Press:When speaker is connected with other device,long press the key to disconnect Bluetooth and re-enter the paring mode.
- Double-Clickin state of booting and no connection with any Bluetooth, use two Omaker Nature, double click one speaker will switch to True Wireless Stereo paring mode, you will hear a "Dong" and "Ding-Ding -Ding" prompt, when device issue" Ding -Ding "prompt, TWS paring succeed.

## Interface Specification

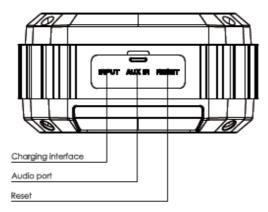

Input: Charge for this speaker. The charging interface support DC5V = 1.2A(max). Please use the same specifications of the adapter to charge. Ultra-standard charging cable will cause damage to the speaker, that not covered in warranty. Charging time is about 2 hours (current 1.2A). It depends on users different charging devices.

Aux In: Use 3.5mm aux cable to connect speaker with other playback to play track and outgoing audio.

Reset: Reset the speaker.

# FAQ

FAQ	solutions
fall to connect and pair for times	1.Check the speaker whether is in a state of "visible" and Bluetooth device whether connected with correct device, or reboot the speaker.     2.Too many Bluetooth devices around may cause difficulty to search the speaker. Please turn down other Bluetooth devices and re-pair it.
small volume or distortion	Check the volume of the Bluetooth device, and adjust the volume to a appropriate level.     Please charge the speaker when low battery.
intermittent sound	Please check whether it is out of the effective range,or there are obstacles between speakers and Bluetooth devices.
Bluetooth status indicator light is not bright	Indicates that the battery is low, please get it full charged and try again.     Reboot the speaker to check whether it works.
Bluetooth connection distance becomes shorter or connection unstable	Low battery will affect the Bluetooth distance or Bluetooth easily disconnect, please recharge it in time.
Battery charging precautions	1. The battery of speaker is polymer lithium, that can be recharged and reuse. Charging time must be more than 5 hours in the first few times. Please recharge the battery after run out of the battery to extend the Ifelime of battery.  2. After full charged please continue to charge for half an hour to ensure a longer playing time.  3. The lithium battery must be replaced by the customer service, the user can not replace if themselves. (Note: If the battery replacement improperly will increase the risk of explosive, can only use the same type or equivalent type of battery to replace): To protect the environment, waste batteries should be sent to professional institutions recycling.  4. The Ife of the battery may vary from different conditions of use and the time of production.

# Warranty Omaker offers a 13-month warranty, effective from the date of purchase. Attention: Any damage or malfunction resulting from improper use or unauthorized dissemble or repair will not covered by our warranty. We also take no responsibility for products purchased from unauthorized retailers. For detailed information, please contact our customer service at support@eomaker.com

### **FCC Warning**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: The micro USB port only support charging function, not support data transmission connect to PC.