 




Manufacturers: WEIYATOYS FACTORY
Address: Chenghai District, Shantou City, Guangdong Province, China
Importer: Auchan France
Address: Snc oia 200,Rue de la,Recherche 59650 Vileneuve d’Ascq France
TOYS
Frequency Bands: 2425MHz-2461MHz
Maximum output power: -11.16dBm

FOR AGES
3+

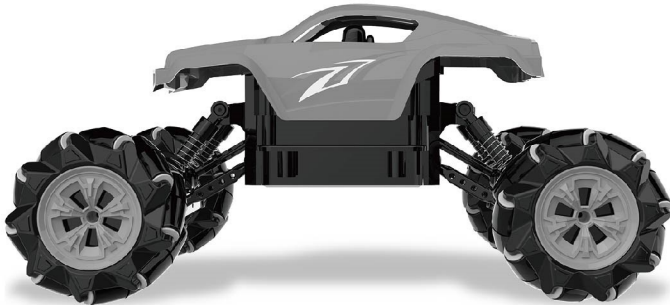

INSTRUCTION MANUAL

Please read all instructions carefully and retain for future use

Note: Physical damage to the product or its parts, caused due to operational reasons is not covered in the warranty. Manufactures/distributors/retailers are not responsible and/or liable for any damage or loss of property caused due to use of this product.

Welcome!

Thank you for purchasing RC Drift Stunt Car. Please store this manual in a safe place for future reference.

GETTING STARTED

 
 
- Remove the unit from the box.
- Remove any packaging from the product.
- Please read all instructions and retain all packaging until you have checked and counted all of the parts.

PACKAGE CONTENTS

- RC Drift Stunt Car
- Remote Controller
- USB Charger
- Removable Rechargeable battery
- Instruction Manual

DESCRIPTION OF PARTS

Remote Controller

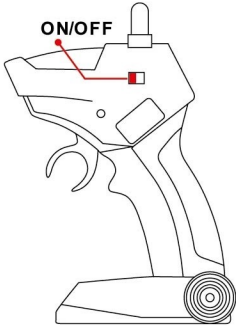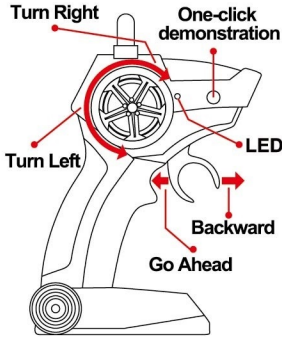


INSTRUCTIONS FOR USE

USB Charging of the 3.7V battery pack


- Inserting the USB charger into the computer USB port, connect the other end to the battery connector of the battery.
- The Red LED light on the USB will turn ON while charging. After the battery is fully charged, the Red LED light will turn ON. Charging time is around 120 minutes.
- Play time is about 30 minutes. Actual play time can vary based on individual handling and playing conditions.

Battery installation on the Drift Stunt Car

 Use a screwdriver to open the battery cover at the bottom of the drift stunt car. Connect the 3.7V battery pack to the connector inside the car as indicated below. Put back the battery cover and use the screwdriver to secure.

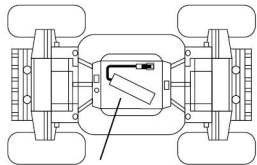

 3.7V battery pack

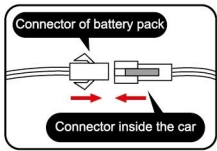

Caution:

- If the 3.7V battery pack needs to be recharged, allow 10-15 minutes to cool down before recharging.
- If the battery becomes too hot while charging then remove it from charging immediately and allow it to cool down.
- Do not reconstruct battery.
- Do not connect the battery to an electrical outlet.

Battery installation on the Remote Controller

Use a screwdriver to open the battery cover at the bottom of the remote controller. Install 2 x "AA" batteries (not included) in the battery compartment of the controller as indicated. Put back the battery cover and use the screwdriver to secure.

Notice:

- Install the batteries as per the indicated polarity.
- Do not mix new and old batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.

Note:

- Battery life / Running time may vary depending on playing conditions, handling, control range etc.
- The Li-battery is not replaceable.

SUITABLE PLAYING CONDITIONS

- Places with no or few obstacles are recommended.
- Do not play your car in strong winds as it may affect the remote-control system and interface with your control leading to a crash or damage it.
- Do not play in rain/damp conditions.

Caution:

- Never allow young children to use this product alone.
- Parental guidance is highly recommended during the use of this product.

PREPARE FOR PLAYING

- Slide the on/off switch at the bottom of the car to turn on, an indication tone would be heard and a Blue LED inside the middle of the car will flash.
- Place the car on flat surface.
- Recheck the area to make sure it is clear from people, pets, trees, buildings, and other obstructions.
- Slide the on/off switch on the remote controller to turn on, the red indicator on it will flash and then turn off, indicating that it is pairing to the car.

Caution: Always turn OFF the controller before you turn off the car.

CONTROL METHOD

 
Forward/Backward

When you push the controller knob down and up, the car will start to go forward and backward respectively.




Left side row / right side row

When you turn the controller wheel in counter-clockwise and clockwise direction, the car will start to row left side and right side respectively.

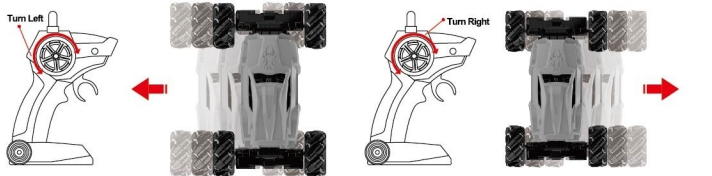

One-click demo

 When you press the one-click demonstration button to demonstrate, the car will start to perform wonderful actions.

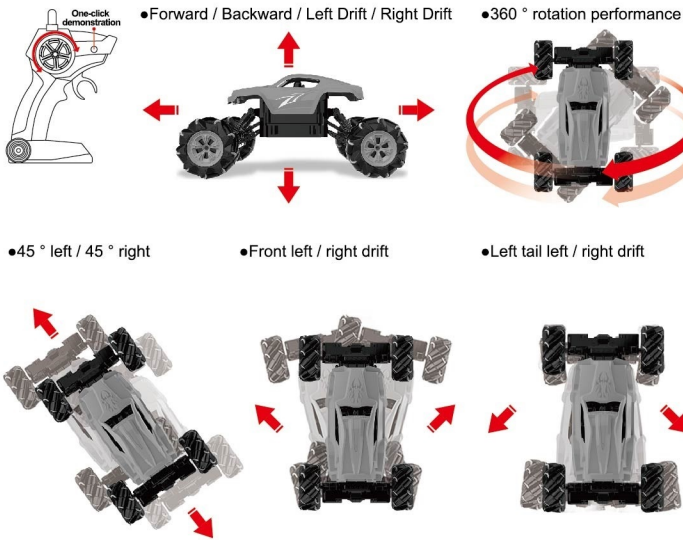

Caution: Always turn OFF the controller before you turn off the car.

Troubleshooting guide

Problem	Possible Cause	Solution
The controller indicator doesn't work	Batteries installed with incorrect polarity.	Check and make sure that the batteries are installed as per correct polarity.
	Batteries are drained.	Install new batteries.
No control	Windy Environment	Do not play in windy environment. As it will limit or disturb your running control.
Car is not moving/running enough	Motor speed is too slow.	Pushing the controller knob.
	Car is not fully charged.	Fully charge your car.

Additional information

- The control distance will get shortened when the car is under low power condition.
- Windy environment may reduce the remote controlling capacity.
- Following practices can help enhance car's performance:
 - If the car has not been used for a long period of time, fully charge the batteries before running the car.
 - If the car gets damaged or deformed, refrain from using it until fully repaired.
 - If you don't intend to use the remote control for a long time, remove all batteries, in order to avoid battery leakage from damaging this device.
- Hard crashes of the car can lead to irreparable damage and/or shorten ca's life.

WARNING

- You are responsible for the using of the drift stunt car with necessary precautions to ensure that it doesn't harm or cause any injury to anyone or damage to any property.
- When you assemble and play the drift stunt car, you must operate it accordingly to the instruction manual.
- The user is responsible completely for correct operation and use of this product. We and the dealer accept no responsibility or liability for damage and/or loss caused due to inappropriate usage and operation of this item.
- Not recommended for children under 3 years of age.

CARE AND MAINTENANCE

- Clean the unit with a soft, damp cloth. Never use chemicals or hard abrasives.
- Keep this unit away from wet or damp surroundings.
- The crossed out wheelie bin symbol on this item indicates that this product needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authorities for details of where to take the item for re-cycling.
- Do not dispose of batteries in a fire. They may explode.
- Do not dispose of battery packs in a fire, throw them in a trash receptacle. They need to be disposed of in an environmentally friendly way when it becomes of no further use. Contact your local authorities for details of where to take them for re-cycling.

FCC INSTRUCTIONS

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

LIMITED WARRANTY

This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warrantor of this manufacturer warranty.

WARRANTY DURATION: All materials and workmanship are warranted to the original consumer purchaser for a period of thirty (30) days from the original purchase date.

WARRANTY COVERAGE: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty doesn't cover the following which may be supplied with this product, including but not limited to: LCD Screens, glass parts, lenses, etc. This warranty is effective only if the product is purchased and operated in USA, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

WARRANTY DISCLAIMERS: This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with the sale of our products. There shall be no claims for defects or failure under any theory of tort, contractor commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract. Under no circumstances will Manufacturer's / Distributor's maximum liability exceed the retail value of the product.

WARRANTY PERFORMANCE: During the above 30 day warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the 30 day warranty period and an additional one-month period. No charge will be applicable for such repair or replacement.

SERVICE AND REPAIR: If service is required for this product, you should first contact Midwest Trading Group Customer Service at info@mttradinggroup.com or by calling 1 (866) 815-4714, Monday to Friday 10am to 6pm EST.

NOTE: Manufacturer cannot assume responsibility for loss or damage during incoming shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to enclose the following details with the product: your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.