

LED STRING LIGHT INSTALLATION INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS

WARNING: When using electrical products, basic precautions should always be followed including the following:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS. SAVE THESE INSTRUCTIONS

Do not use these products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting(GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.

Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.

Do not let lamps rest on the supply cord or on any wire.

Do not use this product for other than its intended use.

Do not hang objects from cord, wire, or light string.

Do not close doors or windows on the product or extension cords as this may damage the wire insulation.

Do not cover the product with cloth, paper or any material not part of the product when in use. This product is equipped with push-in type lamps. Do not twist lamps. It is acceptable to omit this item if the product does not contain push-in type lamps. This product employs overload protection(fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Also unplug any additional strings or products that maybe attached to the product. Replace the fuse as per the user servicing instructions(follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded. It is acceptable to omit this item if the fuse is not replaceable or where overload protection is not required.

POWER SUPPLY

CAUTION: Risk of electric shock. Avoid making connections or disconnections when the equipment is wet.

Do not use with extension cord near water or where water may accumulate. Do not submerge.

CAUTION - To reduce the risk of fire, electric shock or injury to persons:


1. SUNBEAM Electric String Lights are intended for installation indoor or outdoor.
2. String Lights must be supported by steel guide cables or other suitable supporting hardware such as s-hooks,screw hooks or zip ties(not included) whenever span distances exceed twenty four feet. See Installation Methods on page 4.

WARNING: - RISK OF ELECTRIC SHOCK!!


Disconnect power supply at source prior to wiring, replacing light bulbs or servicing in any way.


BULB REPLACEMENT

- 1.Unscrew fixture nut counter clock-wise
- 2.Insert new bulb aligning guide on module to groove inside socket.
- 3.Screw in fixture nut clock-wise.

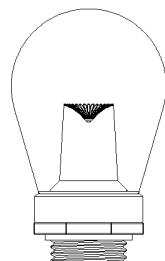

Includes two extra bulbs.
Bulbs last up to 25,000 hours.
Additional bulbs available at
WWW.SUNBEAM.COM

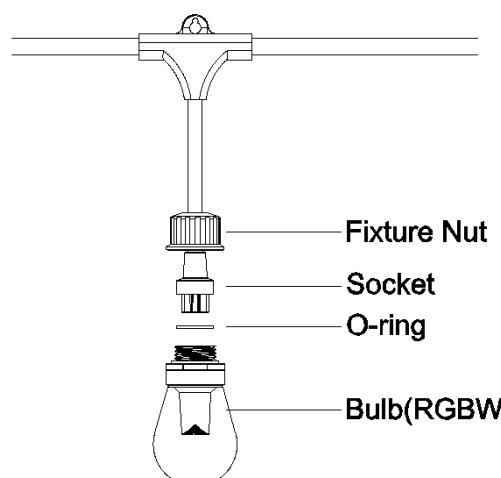


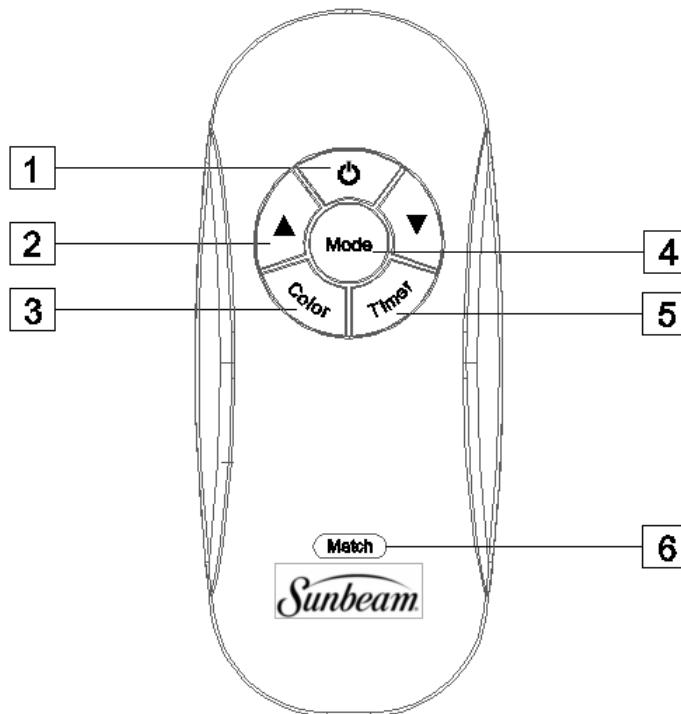

REMOTE CONTROL

(See illustration)

1. Turns the lights ON/OFF.
2. Increase/Decrease brightness/speed:Press($\blacktriangle/\blacktriangledown$)to choose brightness level.(Only work in single color mode) Press($\blacktriangle/\blacktriangledown$)to decrease or increase the color changing speed.(Only work in color combination mode)
3. Color: Press to change string light color to Red/Green /Bule/White.
4. Mode:Press button to select one of the 9 color combination Modes.(see chart to right)
5. Timer: (1)Press button for the 1st time ,the red lights fashing 3 times,automatic shut down after 2 hours; (2)press button for the 2nd time,the green light fashing 3 times,automatic shut down after 4 hours; (3) press button for the 3rd time,the bule lights fashing 3 times,automatic shut down after 6 hours; (4)press button for the 4th time,the white light fashing 3 times, automatic shut down fater 8 hours;
To exit the timer mode, press the ON/OFF key to turn off the power.
6. Match: After the controller and light string are connected, turn on the power and the red light flashes quickly into the code mode. Press Match button within 10 seconds. The red light stops flashing to indicate the success of the code. The controller can be code 10 remote controls.

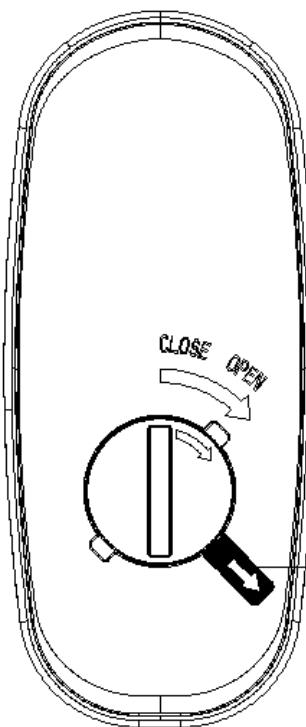


PULL OUT
TAB TO
ACTIVATE
BATTERY

3 Volt,CR2025 battery included

MODE BUTTON FUNCTIONS

1. Red to green
2. Red to blue
3. Red to white
4. Green to blue
5. Green to white
6. Blue to white
7. Red to green to blue
8. Red to white to blue
9. Red to green to blue to white

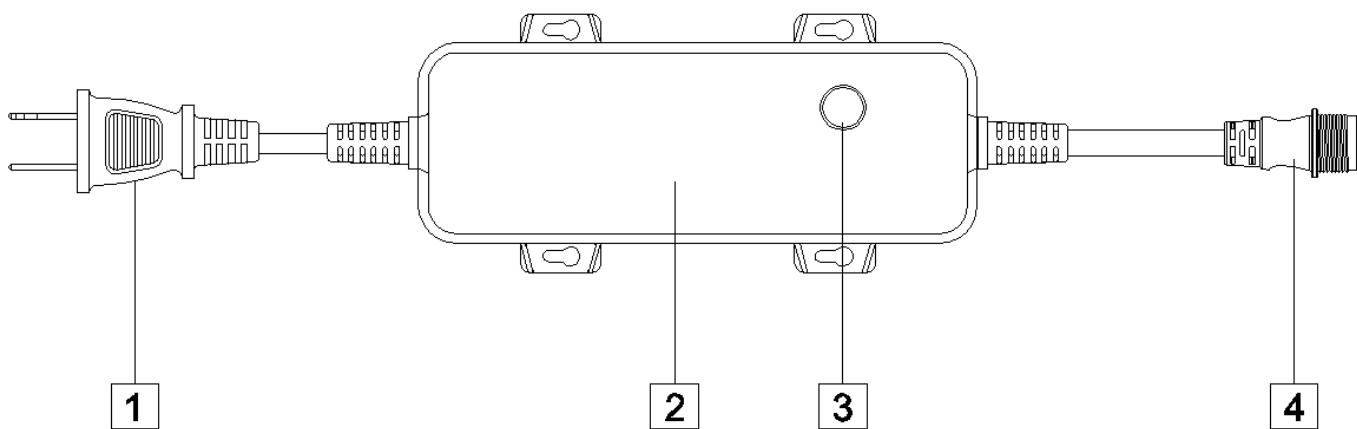

The controller function button controls all color changing functions except the brightness and the color changing speed. Press and hold button to turn off. In the event that the remote control is lost, the controller function button can be instead of the remote control.

1. Power supply
2. Controller
3. Controller Function BUTTON: Press button to select one of the 13 color combination modes.(see chart to right)
Press and hold button to turn off.
4. String light connection adapter.

When unit is turned on, it will start at the last mode.

CONTROLLER FUNCTION BUTTON

1. Red
2. Green
3. Blue
4. White
5. Red to green
6. Red to blue
7. Red to white
8. Green to blue
9. Green to white
10. Blue to white
11. Red to green to blue
12. Red to white to blue
13. Red to green to blue to white

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1)This device may not cause harmful interference, and (2)this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This product contains a button battery. If swallowed, it could cause severe injury or death in just 2 hours. Seek medical attention immediately.

Cet article contient une pile bouton EN cas d'ingestion, cette pile pourrait Causer de graves blessures ou la mort En deux heures. Demandez l'aide d'un professionnel la santé immédiatement .


Este producto contiene una pila de botón. En caso de ingestión, puede provocar lesiones graves o la muerte en tan sólo 2 horas. Busque atención médica de inmediato.

CONECTING STRING LIGHTS

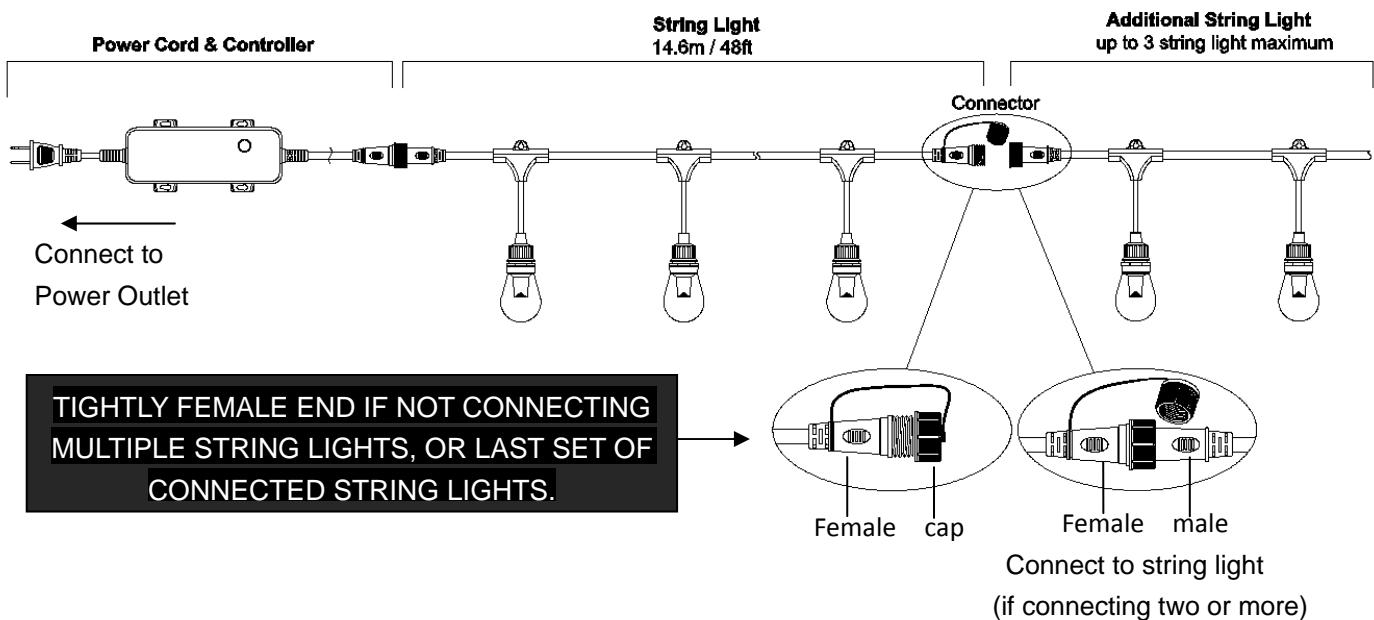


INSTALLATION METHODS

1. Using a guide wire with S-hooks or zip ties(not included)

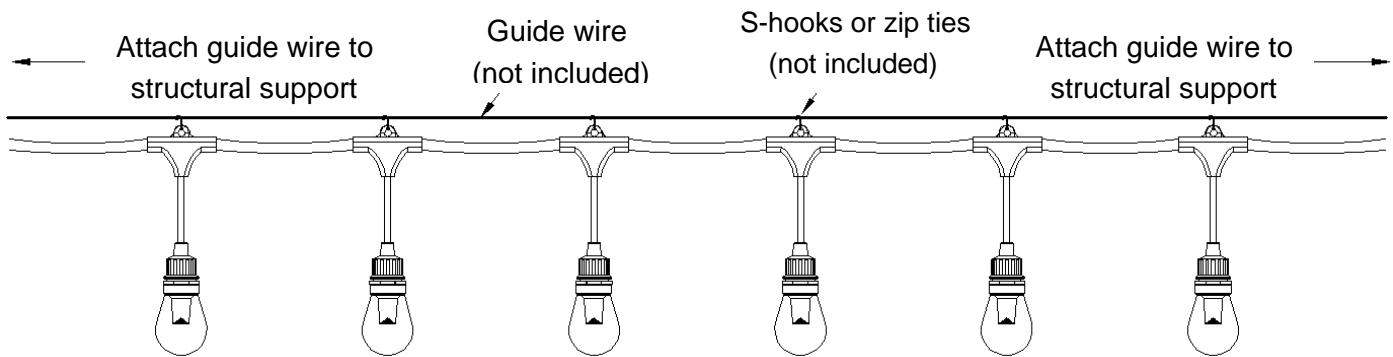

2. Attached to a structure

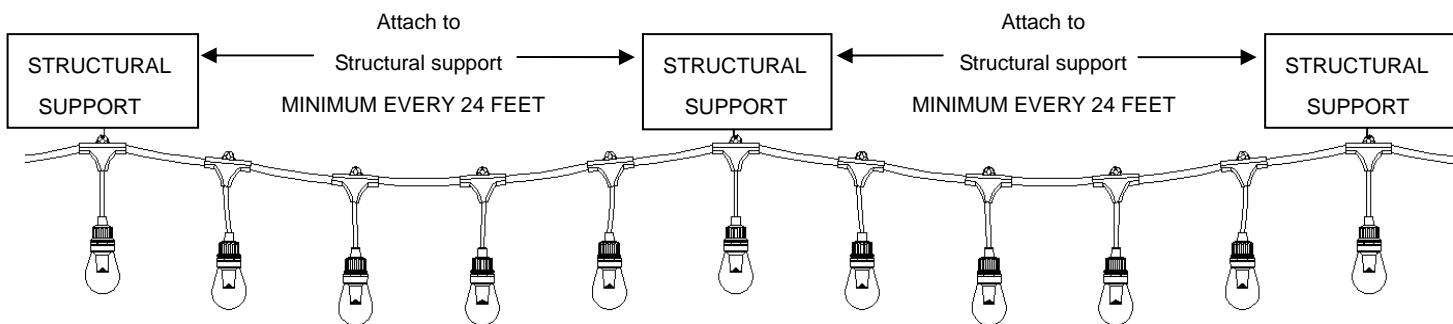

LIMITED WARRANTY

This product is warranted to be free from defects in workmanship and Materials for up to 2 years from date of purchase.

SAVE THESE INSTRUCTIONS

