



KODAK TAB

User Manual



The Kodak trademark, logo and trade dress are used under license from Kodak. ©2025 Maxtalent Industrial Limited.
All rights reserved, all information contained in this document is subject to change without notice.

Made In China

FC CE RoHS

EN

K12

Technical Support:

If you need further assistance, please contact the support department
E-mail: support@maxtdigital.com
Web: www.maxtdigital.com/kodak
All information contained in this document is subject to change without prior notice.

Radio and TV Interference Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and(2) This device must accept any interference received, including interference that may cause undesired operation.Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
☐ Reorient or relocate the receiving antenna.
☐ Increase the separation between the equipment and receiver.
☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
☐ Consult the dealer or an experienced radio/TV technician for help.ct.
The device has been evaluated to meet general RF exposure requirement

Warranty

Maxtalent warrants this product against defect in material or workmanship for 1 YEAR from the date of purchase.
This warranty becomes invalid if the factory-supplied serial number or "warranty void" sticker has been removed or altered on the product.
This warranty does not cover :
A) Appearance damage or damage cause by natural disaters.
B) Accident misuse, abuse, negligence or modification of any part of the product.
C) Damage due to improper operation or maintenance, connection to improper equipment or attempted repair by anyone other than Maxtalent or appointed.

IN NO EVENT SHALL MAXTALENT LIABILITY EXCEED THE PRICE PAID FOR THE PRODUCT FROM DIRECT INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THE PRODUCT, IT'S ACCOMPANYING SOFTWARE, OR IT'S DOCUMENTATION

Maxtalent makes no warranty or representation, expressed, implied, or statutory, with respect to products, contents or use of this documentation and all accompanying software, and specifically disclaims it's quality, performance, merchantability, or fitness for any particular purpose

For more information, please visit:
www.maxtdigital.com/kodak
All information contained in this document is subject to change without prior notice.
version: V1.1

TABLE OF CONTENT


Hexahedral Diagram of the Product



1. Speakers *4
2. Power button / Screensaver button
3. Volume+
4. Volume-
5. Front Camera
6. TF card
7. TYPE-C port: Connecting USB devices/power ports
8. Rear Camera
9. Flash Lamp

1.Turning the tablet on and off

- 1) Press the power button for 3 seconds until the LCD screen turns on. The tablet can be used when the home screen appears.

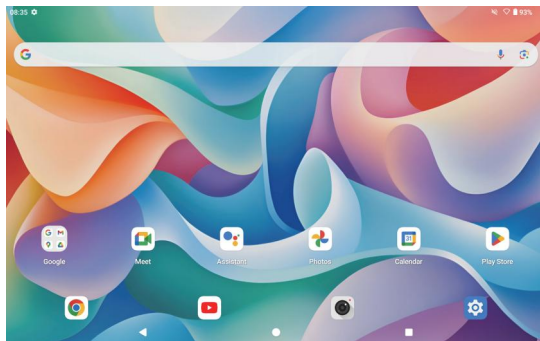

- 2) Press and hold the power button until the Device Options menu appears. Click "OK" to turn off the tablet.

2.Turning the screen on/off (sleep mode)


- 1) When the tablet is on, you can turn off the screen to save battery power. Press the power button once to turn the screen off. Press the power button again to turn the screen back on.
- 2) To save battery power, the screen can be set to turn off automatically when the tablet is not in use (between 1 and 30 minutes). This screen timeout option can be found in the Display menu.

3.Home Screen

- ① Back: Press this key to view the previous operation display.
- ② Home: Press to go to the Home Screen.
- ③ Background: Press this key to view applications running in the background. Existing idle applications may provide better performance.
- ④ Application Panel: Press this button to view all available applications.

Screen Lock

Here is the way to set it: Tap- Settings- Security - Screen security- select Screen Lock and then select a pattern from None, Swipe, Pattern, PIN and Password. You can create a backup PIN as a security measure in case you forget your password.

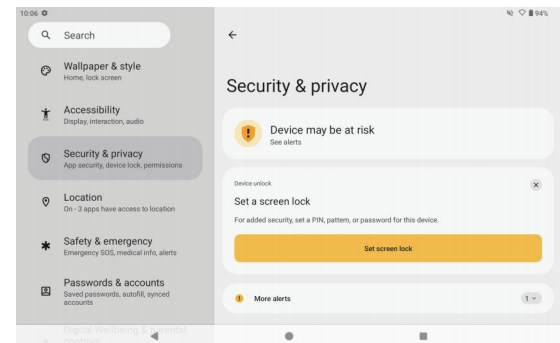


Screenshot

Press and hold the power button and volume "-" at the same time to take a screenshot. The screenshot will be saved in a photo file.

4.Applications

To start an application, tap the application icon on the home screen or in the launcher, you can tap the icon at the top of the home screen to go to the launcher screen, which is shown below for illustrative purposes only. We reserve the right to modify and improve the final list of applications available on the tablet.

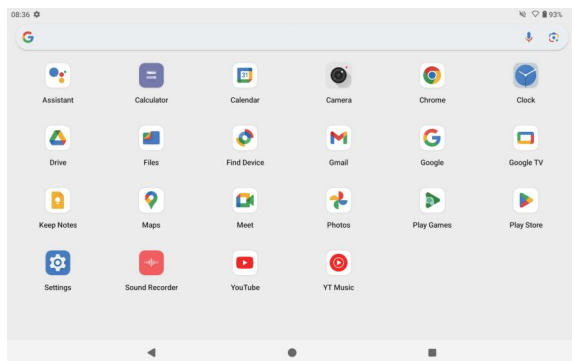

Installation of the application

You can also download and install additional applications from the device's application marketplace, web browser, or other sources. The tablet must be set to allow installation of applications from non-market sources. The Unknown Sources option can be set in the Application Settings menu.

Notes:

- 1)If there are fees for related applications, users shall bear all costs themselves.
- 2)The manufacturer/seller is not responsible for applications that are not compatible with the device.

3)In some cases, the application panel may not have an icon after the application is installed. Possible reasons for this may be that the application is not compatible with your operating system or the downloaded file is corrupted, so you may need to download the full version. If you install and use an operating system that is not supplied by the manufacturer, this may cause your device to malfunction and therefore your device will no longer be covered by the warranty in such cases.

5.Connect to WIFI

- 1) Click the "Settings" function icon to enter the setting list interface, click to select "Network and Internet" item enter the Wi-Fi settings menu;
- 2) Click "Internet" to open the WLAN switch, turn on the Wi-Fi function, and the system will automatically scan the attachment Wi-Fi hotspot signal.
- 3) Select the connected Wi-Fi signal, enter the corresponding password, and click "Connection".

Setting Up Your Browser

You can use the preinstalled browser or download another browser of your choice. Clicking on the icon in the upper right corner of the browser page opens a sub-menu for more detailed settings.

Connecting to Bluetooth devices

1.Turn on Bluetooth

You must pair your device with another device before you can transfer files between them. Under "Settings", select "Bluetooth". Tap Bluetooth to "ON" and the Bluetooth indicator will light up in the status bar. It will start searching for available devices nearby. If you need to re-scan, click on the menu in the upper right corner and then click "Refresh".

2.Pairing with Bluetooth devices

Click on "K12" to pair with the name of an available Bluetooth device. On the target device, you will see the "Bluetooth Pairing Request" dialog box. Click "Pairing" and it will show you the paired devices.

Device reset

You can reset your tablet if necessary. For example, if you have forgotten your tablet's password or PIN, you can reset your tablet. This will erase all information from your tablet and return your device to factory mode.

Warning!

If you perform a hard reset, all user applications and user data will be deleted. Please remember to back up all important data before performing a hard reset.

Connecting to computer

Connect your tablet to a computer to transfer files:

- 1) Connect your tablet to the computer. Use the supplied USB cable: Plug the small end of the cable into the USB 2.0 Hi-Speed connector on your tablet.
- 2) With the tablet connected, slide the USB icon down and tap the USB Connected icon.
- 3) Install the storage. Tap the button Transfer Files (MTP) to install the tablet's built-in storage. Once installed, you can copy files to and from the tablet.
- 4) Install Storage. Tap the button Transfer File (MTP) to install the tablet's built-in storage. After installation, you can copy files to or from the tablet.

Product Specification

Specification		Description
HW	CPU	Spreadtrum T616 Dual-core A75 2.0Ghz + Six-core A55 1.8GHz
	RAM	6GB DDR
	Memory	128GB
	Monitor	11.97 inch 1200*2000
	Touch Screen	Incell Multi-Touch
	Camera	Front 5MP, Rear 13.0MP+2.0MP

HW	Battery	3.8V/8000mAh
	Power	DC 5V/2A Type-C Recharge
	Jack	Type-C
	Button	Power Supply/Volume+/Volume-
	G-Sensor	Supports 3D G-SENSOR games and application software
	WIFI/Bluetooth	802.11b/g/n 2.4G/5G + BT
	Outer Shell	Metal
SPEC	OS(Operating system)	Supports Android 15 smart operating system
	Music	MP3,WMA,MP2,OGG,AAC,M4A,FLAC,3GP,WAV
	Video Decode	Supports 1080P FHD and 1080P high-definition v ideo decoding, H. 264/H.265 MPEG4, VP8, V P9 and other formats
	Video Coding	H.264/H.265/VP9/1080p60 H.265
	Pictures	JPG, JPEG, GIF, BMP, PNG
	eBook	TXT, EPUB, PDF,WORD,EXCEL, POWERPOINTS
	Internet connection	2.4G+5G WIFI
	Language	Supports Multi-language
PK	Game	Smoothly experience DNF and other super-large 3D accelerated games.
	Packing List	Tablet / User Manual / Type-C cable/Holster
	Packing box	Box

Troubleshooting:

1. The device could not turn on.

- Reboot the device after 10 minutes of charging.
- If your device is in sleep mode, press the power button briefly to check if it lights up.
- Press and hold the power button for 10 seconds.
- If there is a reset button on your actual device, press the reset button with a thumbtack to initiate a hard reset.

2. The device is not charging.

- If the device is completely drained, leave the device powered on for 30 minutes.
- Check and make sure the charger is properly plugged into the charging port.
- Try another outlet or compatible charger.

3. An error message appears during operation.

- Uninstall the application with the error message and download and install it again. You can also update certain applications that have errors.
- Delete the system through system reset and clear it to factory mode.

4. PC cannot detect the device.

- Make sure your device is "on".
- Try using another USB cable.
- Connecting your device to a different port on the PC

5. The device cannot connect to Wi-Fi.

- Ensure that Wi-Fi is set to "ON".
- Unplug the Wi-Fi router, wait 2 minutes, and then plug it back in.
- Select "Show Password" when entering the password to ensure that the correct password is entered.
- Check to make sure there are no filter settings or device connection restrictions on your device.

Router settings.

- Forget the original Wi-Fi connection, reset the Wi-Fi router and reconnect.

6. Not enough storage space.

- Delete infrequently used apps to save some space.
- Clean device cache regularly: Settings--Applications--Click Apps and clear cache or data.
- Install a third-party system cleaner program.
- Restore the tablet to factory settings to clear all data.
- Get an expansion memory card to expand.