



Caution:
1. Please be sure to read this user manual before use of the device. 2. While using the device, all operation should strictly follow the instructions in this manual. 3. Keep device in place with enough air flow, and be left 5-10 centimeters distance away from other items. 4. Avoid placing the device near any heat source, like radiator, heater, cooker, or other heating device. 5. Avoid the power cable being stamped or squeezed, especially connector tip and corner position. 6. Please use the supplied accessories for safety concern. 7. In case of extreme weather or left unused for a long time, please unplug the power. 8. All maintenance work should be conducted by qualified technician. If any damage causing the device unable to work normally, please be sure to repair it in time. 9. Avoid locations subject to extreme heat, fire or moisture. 10. Do not place any danger source on top of the device, like item containing fluid.
Warning:
Do not disassemble the device. Do not place device on top of other electronic items. Do not look directly at the laser beam inside the device.
NOTE:
Any operation or adjustment against the product manual may cause serious laser radiation or other danger situation.
CLASS 1 LASER PRODUCT
This device is classified as Class I laser product. While using the device, please strictly follow this user manual, otherwise laser radiation may be caused.
This device is manufactured strictly in compliance with the China Compulsory Certification standard, and has obtained CCC mark.

Specifications
Model FOCUS-D200
Frequency response 60Hz-16kHz, ±3dB
Signal to Noise Ratio >57dB
Total Harmonic Distortion <1.5%
MP3, link input 650mV
Rated Voltage 5V-2A
Tuning range 87.5-108MHz
Power 10W
Material PC+ABS
Dimension 168x168x40mm
Weight 1.2kg

| **Kind Reminder:** |
| 1. When reading files from multiple directories (such as MP3, AVI, USB flash drive): a) By default, this device would only show the directory after files successfully read, and unsupported format would not be displayed; b) This device allow you play audio and video file. When playing audio file, use Direction button on remote control and move the cursor to the directory of playlist to back to parent folder; c) When playing video file, use RETURN or STOP button to back to the menu interface. (Please refer to step 2 mentioned above for detailed operation). 2. Turn page function when reading mp3 file a) As auto turn page function is void in case of folder delamination, press EDIT button to cancel folder delamination. b) In case of folder delamination, press STOP button first, then press "PREV"/"NEXT" button to turn page. |
| **Remote Control** |
| 1. The sensitivity of remote control can be influenced by light and environment. 2. Please take out the battery inside remote control in case of unused for a long time, to avoid the battery's unexpected leakage and corroding the remote control. 3. Normally, the included battery can last one year's usage, but it also depends on your using frequency. In case of remote control not working within a short distance, please replace the battery. |

Remote Control
Illustration
Quick Start Insert the included power adapter into power outlet, connect the TYPE C power cable to the power adapter. Put a CD or storage device into the DVD player, keep the "Power ON/OFF" button about 3s to power on the device, you can see power indicator light on and CD rotate. After CD rotating for 10-20 seconds, the built-in speaker would start playing video file. In case of switching audio device, press MODE button on the remote control or the topside MODE button on the device to switch mode. Keep the "Power ON/OFF" button about 3s again to turn off the device.
1: POWER a) Before power on, please check whether the player is properly connected with other audio device. Plug the power adapter to 220V power outlet. b) Put CD into the player with cover side facing upwards.
2: TIME Set time duration
3: Sub-Title Sub-title button apply for DVD and Super video CD: When pressing it for the first time, it would display current sub-title language mode; For DVD and Super video CD with multiple sub-titles, press this button to switch to language you prefer; TV screen would display the selected language code, like "language: 1 English or open".
4: DVD/USB In case of USB flash drive, press MODE button on remote control or topside MODE button on the device to switch to USB mode, the device would automatically read files from USB flash drive.
5: SET Press SET button to go into system set up menu
6: PROG PROG button apply for DVD, super video CD, VCD, CD, HD-CD, WMA, AVI: this function allow you randomly assign 20 songs(max) and play it in order.
Note: 1. In case "PBC" is on, this operation would turn on/off PBC while programming. 2. Enter number according to the prompt of cursor, press PAUSE/PLAY button to play. 3. At most 20 titles, chapters or songs can be assigned while programming.
7: Bluetooth 1 (BT1) 1) Press "MODE" button or "M" button(on the device) to switch to BT1 mode, the bluetooth icon will appear on the screen. 2) enable Bluetooth on your phone, search and connect to DVD player.
8: Bluetooth 2 (BT2) 1) When stay on BT1 mode, keep press "Play/Pause" button on the remote or "Next" button(on the device) about 2s to switch to BT2 mode. Then the DVD player will be ready to pair with other bluetooth devices, such as bluetooth Earphone or bluetooth speaker. 2) Activate the other bluetooth devices, the DVD player will be connected to other bluetooth devices in a few seconds, it will automatically enter DVD mode, you also can switch to USB/FM mode, the sound will be transmitted to the bluetooth device through bluetooth.
Note: If the bluetooth device is off, you want to connect to other bluetooth device, first you need switch back to BT1 mode, then switch to BT2 mode. The DVD player will automatically pair other bluetooth devices.

9: Direction key Press Direction button to choose file, zoom picture, or rotate picture when reading Picture-CD.
10: SYS System button apply for DVD, Super video CD, VCD, CD, CD-G, HD-CD, WMA, AVI, MP3, J PEG: For pressing for the first time, it would display current system. Three systems are available; press SYS button to switch video output system. Note: This device offer TV AUTO system, and automatically choose optimized resolution depending on different disks (Note: full screen is not available for wide screen format); In order to adapt to the different system setting of PAL and NTSC TV, press SYS button to choose video mode in case it does not show full screen or no color. When some function of the disk are unable to fully displayed in certain system, "AUTO" is recommended.
11: FWD/REW Press FWD button to fast forward, no sound output during this period; Press REW button to rewind, no sound output during this period.
12: Audio/Channel Choose Left/Right channel, this button apply for DVD, VCD, VCD, CD, CD-G, HD-CD, WMA, AVI, MP3/JPEG disk.
Note: a) For pressing the first time, it would display current channel. b) Press AUDIO button to switch channel. c) For disk with dual language, press AUDIO button to switch language.
13: Number button
14: OK/Enter: Press OK button to choose the file or enter into next catalog.
15: MENU a) MENU button apply for DVD. b) Press MENU button to display main menu of DVD disk, use Direction button to move cursor and choose file.
16: RETURN While playing DVD disk, press RETURN button to back to main menu. Note: RETURN button is void while playing MP3, CA and VCD1.1 disk.
17: PLAY/PAUSE PLAY/PAUSE button apply for DVD, Super Video CD, VCD, CD, CD-G, HD-CD, WMA, AVI, MP3 and J PEG. Press PAUSE button to stop; Press again to back to playing status.

18: OSD OSD: on-screen display, OSD is on by default, displaying current playing time and mode.
19: PREV/NEXT PREV/NEXT button apply for DVD, Super Video CD, VCD, CD, CD-G, HD-CD, WMA, AVI and MP3/JPEG. a) Press NEXT button to skip next file. b) Press PREV button to skip previous file.
20: VOL+/VOL- VOL+/VOL- button apply for DVD, Super Video CD, VCD, CD, CD-G, HD-CD, WMA, AVI, and MP3/JPEG. Note: a) You can also adjust volume via Volume button on TV or Amplifier. b) Press VOL+ to volume up, press VOL- to volume down. c) Volume is non-adjustable when playing DVD disk source code output.
21: MUTE MUTE button apply for DVD, Super Video CD, VCD, CD, CD-G, HD-CD, WMA, AVI and MP3/JPEG. Press MUTE button to close sound output, TV screen display MUTE; Press MUTE button again or VOL+/VOL- button to open sound output.
22: SLEEP Press SLEEP button to enable Sleep mode, LCD screen on the device would light off; Press SLEEP button again to restore to normal working status.
23: REPEAT Press REPEAT button for the first time to repeat current chapter. b) Repeat ALL Press REPEAT button for the second time to repeat the whole disk. c) Shuffle Play Press REPEAT button for the third time to Shuffle Play the chapter. d) Normal Play Press REPEAT button for the fourth time to end repeat.
24 : FM Press MODE button on the remote control or the topside MODE button on the device to switch to FM mode when the device is on; Press PLAY/PAUSE button or keep press "NEXT" button(on the device) about 2s to search video channel, and once searching out, it would stop at current channel
25: CD COPY/Transcription Connect the DVD player to the TV or LED Display. Press SUB-T button, then choose the TRACKS, select the Track number. After selected, choose the START, will start to copy the CD music into the USB, you can see progress bar, when you finish the copy, please choose the CANCEL to end the copy. Final choose the QUIT to quit the Copy Mode.
26: MP3 This device is compatible with CD-R, CD-RW, DVD-R, DVD-RW, DVD+R and RWD+R with MP3/WMA file, and support disk with multiple catalogs. Other functions: When playing MP3 disk, MUTE, VOL+/VOL-, PLAY/PAUSE and PREV/NEXT button work the same way as playing other disks.
27: AVI, XVID Put a disk containing AVI or XVID file, the device would auto search and enter into option interface. a) Press UP/DOWN button to choose catalog or file name; Press OK button or PLAY/PAUSE button to enter into selected catalog and play selected file. b) In normal playing state, press STOP/RETURN button to stop playing and return from catalog option interface.
28: Setting Regular setting: Press SET button to go into system setting interface Press UP/DOWN button to choose and OK button to confirm; Press again to return from system setting. a) TV system Normal/Full screen: When connect to normal TV, it would display wide screen with part of screen automatically cut(auto system is recommended). Screen Protect: Screen protect function is available and recommended to enable. High resolution output: HDMI output is optional. b) Screen aspect ratio Choose screen aspect ratio depending on different TV size. c) Memory function Memory function is on by default; When player is under normal playing state, in case of power down, it would restore to its last stop position and play when power on again. This function can be turned on/off.
29: TIMER When device is on, LCD screen would display 00:00 when pressing TIME button. For example, set to 07:30: TIME 00:00 OK↑ 07→ 30 OK.
30: TIMER a) ON Timer

Troubleshooting																								
<table border="1"> <tr> <td>Malfunction</td> <td>Possible reason</td> <td>Solution</td> </tr> <tr> <td>Device not working</td> <td>Device plug not fully inserted into power outlet/ inserted into power outlet</td> <td>Fully insert device plug into power outlet</td> </tr> <tr> <td>Unable to play</td> <td>Disk not properly placed</td> <td>Keep cover side upwards and place the disk again</td> </tr> <tr> <td>No sound output</td> <td>Incompatibility issue</td> <td>Replace to other compatible disk</td> </tr> <tr> <td>Sound stuck</td> <td>Wrong operation</td> <td>Follow instruction on the user manual when operating</td> </tr> <tr> <td></td> <td>Volume setting low/def</td> <td>Volume up</td> </tr> <tr> <td></td> <td>Disk or laser lenses get dirty</td> <td>Clean disk or laser</td> </tr> <tr> <td></td> <td>Disk got scratched or curved</td> <td>Replace the disk</td> </tr> </table>	Malfunction	Possible reason	Solution	Device not working	Device plug not fully inserted into power outlet/ inserted into power outlet	Fully insert device plug into power outlet	Unable to play	Disk not properly placed	Keep cover side upwards and place the disk again	No sound output	Incompatibility issue	Replace to other compatible disk	Sound stuck	Wrong operation	Follow instruction on the user manual when operating		Volume setting low/def	Volume up		Disk or laser lenses get dirty	Clean disk or laser		Disk got scratched or curved	Replace the disk
Malfunction	Possible reason	Solution																						
Device not working	Device plug not fully inserted into power outlet/ inserted into power outlet	Fully insert device plug into power outlet																						
Unable to play	Disk not properly placed	Keep cover side upwards and place the disk again																						
No sound output	Incompatibility issue	Replace to other compatible disk																						
Sound stuck	Wrong operation	Follow instruction on the user manual when operating																						
	Volume setting low/def	Volume up																						
	Disk or laser lenses get dirty	Clean disk or laser																						
	Disk got scratched or curved	Replace the disk																						
Product Warranty																								
Product name/serial number: _____																								
Order number: _____																								
User address: _____																								
Malfunction description: _____																								
Date of Purchase: _____																								
Telephone: _____																								
Maintenance log: _____																								

FCC Caution.

(1) § 15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

§ 15.21 Changes or modification warning

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

§ 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the

instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of

the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

RF warning for Mobile device:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.