

## All Tracker User Manual

Thank you for purchasing our key finder(All Tracker). Before using this product, please kindly read the user manual to learn more about the functions and usage methods. All Tracker works with Bluetooth 4.0 ready smart mobile phone and tablet, can compatible with all smart devices with iOS 8.0+ and Android 4.3+ system. It can be used as a key finder, anti-lost alarm and selfie remote shutter.

All Tracker Box contained

1. Key Finder(with one battery inside)
2. Keychain
3. User Manual
4. One Spare CR battery



iOS

Android

### How to set up the All Tracker

1. Open the mobile phone(or tablet) Bluetooth (to ensure that the phone Bluetooth opened).
2. Download and install the app from Apple App store or Google Play by searching "All Tracker".
3. Press the button 3 seconds to activate the key finder when use it each time. Buzzer will beep two times and blue LED indicator will flash two times.
4. Open the App.
5. Click the searching icon in the application to add a new key finder.
6. Mobile phone(or tablet) will match and connect the key finder.
7. Press the button 3 seconds again to turn off the key finder when don't use it. Buzzer will beep one time and blue LED indicator will continue flashing to turn off.

### Using New Key Finder—All Tracker

Attach the new Key Finder to your key or any other valuable items you don't want to lose.

1. Open the App—All Tracker.
2. Tap the icon in the app to enter the interface of device list, then tap icon to search.
3. The name " All Tracker" shows on the device list, tap "All Tracker" to connect, and then key finder and app will connect automatically.
4. When connect with key finder, your phone will remind you with sound "beep", and then app will enter into the main interface.
5. Enter camera function by tapping the left side icon of "All Tracker" in device list, then take a picture for your valuables attached with key finder. After that, the picture you taken will replace icon and show to main interface of app so that you know what product is attached on key finder.
6. For iOS system: Tap icon at the top-right corner in device list, then you edit the name of "All Tracker".

For Android system: Tap the name "All tracker" with long press, it will show "edit" or "delete" two options, then choose left side to edit the name of "All Tracker".

For example, when key finder is attached on your bag, you can edit the name from "All Tracker" to "Bag".

7. Tap icon on the app interface to enter the settings, then set the app functions.

### Functions of All Tracker Key finder

#### 1. Anti-lost alarm

When the product is out of range of your mobile phone (from about 0-20 meters, which you can set on the APP), both of the product and your mobile will alarm to alert you, so that you will not lose your things and phone any more. Click on the product button or flashing button on the mobile phone main interface to turn off the alarm.

## 2. Bidirectional finding things

You can use your phone to find your things attached with the product and you can also use the product to find where is your mobile phone. By clicking on this button  in the mobile phone APP main interface, to alarm the product in 1-3 seconds, then find the product. By pressing the button of the product at the same time, mobile phone alarms, then find the mobile phone.

## 3. Taking pictures

Use the product and the app to take pictures by your mobile, which is very easy and useful. Click the camera button  on the APP main interface to access the photo interface, press the button of All Tracker key finder and your mobile phones can take pictures.

## 4. Record Lost History Location

Our app is with AMAP, Apple and Google map, which can record the product's lost history location to help you know when and where you have lost your things. Tap the map icon  in the app, and enter the lost history location map interface, then you can check the lost history location.

## 5. Anti Lost and Mute Function

If you do not want the product and your phone ring when disconnected at some time or in some places, you can tap the settings icon in the app interface to set as following.

- A. When turn off "Disconnecting Notification" in the settings, both your phone and the product will not alarm when disconnected no matter when and where you are.
- B. Turn on "Quite Zone" in the settings, and your phone is in WIFI areas: when mobile and the product is disconnected, your phone will not alarm in these places, while the product will alarm. When you leave these WiFi areas or WiFi is disconnected, both your phone and the product will alarm when they disconnected.

## Product Specifications

Bluetooth version: 4.0

Working distance: 0-20meters (Depend on environment and setting in APP)

Buzzer: 80dB

Indicator light: blue LED light

Battery: Button Battery

Battery working time: (Continued alarm sound has an impact on working hours)

- 1) disconnected with smart phone and can be found: over 12 months
- 2) connected with smart phone all the time: over 5 months

Working temperature: -20°C-70°C (-4°F-158°F)

## Battery Replacement

1. Unscrew the shell;
2. Replace the button battery (Please pay attention to the polarity of the battery);
3. Cover and press the shell.
4. In order to save the battery power, the device will turn off automatically if you don't use it within 7 days. Please open it on time when reuse it.

## Safety instructions

1. The key finder can't be used until the All Tracker application is installed and running on the phone.
2. Please keep the key finder dry and away from water and corrosive.
3. Please don't disassemble and modify by yourself.
4. Button battery and spare battery both are included in the packing. They are small and dangerous for children.

This product must be used in case of adult surveillance. When you accidentally swallow any part of the equipment, please consult a doctor immediately.

5. This product has passed strict quality testing. Please rest assured to use.
6. Please send the waste button battery to the local battery recycling center.

### **§ 15.19 Labelling requirements.**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### **§ 15.21 Information to user.**

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### **§ 15.105 Information to the user.**

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### **\* RF warning for Portable device:**

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.