


Staaker 1

User manual

Draft20170721

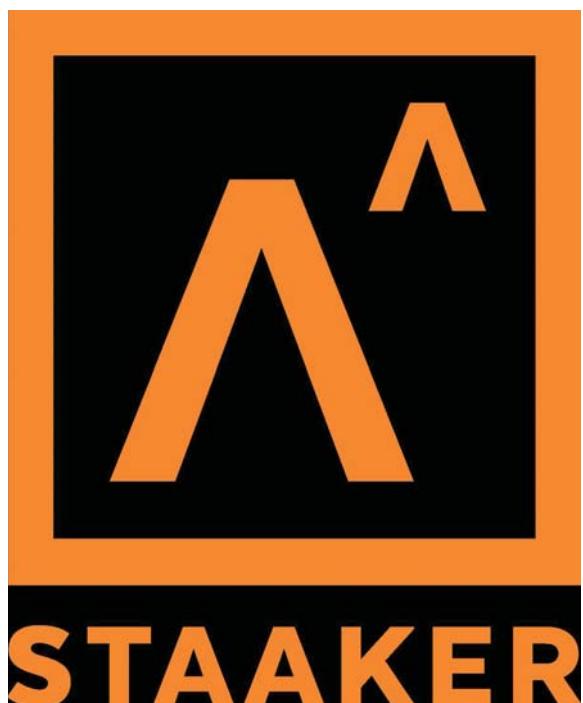

Using this manual

Read the Staaker 1 user manual before flying the drone for the first time. Before flight, learn how to operate the drone and be aware of any local laws regarding flight of drones in your area.

Document revision: 1.0 (12.07.2017)

This document is subject to change. Download the latest digital version of the document at www.staaker.com.

Legend

- **Warning**

Explains something that, if not obeyed, could cause serious injury to people or damage to equipment.

- ⚠ **Important**

Describes extra important information that you should take note of when using the product.

- **Hints and Tips**

Information that can improve user experience and improved video footage.

Introduction

We have tailored this autonomous follow drone to capture all your activities, moments and beautiful places in the best possible way.

It consist of a tracker that is placed on your wrist and a quadcopter with a camera (camera not included). With the touch of a button, it follows and films you automatically.

The Staaker drone follows whomever or whatever is wearing the tracker by itself. Using the tracker, Staaker follows you and takes care of the filming automatically, even if you are alone. Choose from 4 different tracking modes as well as Scenery mode. By using the tracker you can always adjust the angle, height and distance of your Staaker relative to you.

Terminology

Emergency Landing: When the drone automatically lands due to low battery, sensor failure or an abnormal system error.

Barometer: A sensor device that measures air pressure. Can be used for determining altitude above average sea level. Both the Staaker drone and Tracker are equipped with this sensor.

GPS: Abbreviation for Global Positioning System. Both the Tracker and Staaker drone use GPS for navigation and positioning. The system uses in reality multiple GNSS systems¹, but in this document this is referred to as just GPS for simplicity.

Gimbal: Camera stabilization module for improved video footage and framing.

LED: Abbreviation for light-emitting-diode, a lamp located on the bottom of the Staaker drone.

Locate Staaker: A menu option on the Tracker for locating the Staaker drone. Requires GPS on the Tracker.

Return to Home: A procedure where the drone flies back to a designated location and lands.

RTH: Abbreviation for *Return to Home*. (See *Return to Home*)

Smart Battery: The Staaker is equipped with an intelligent battery that measures voltage, current and temperature on all 4 cells.

Staaker Drone: Auto-follow drone equipped with 3-axis gimbal and camera.

Takeoff Mode: One of three ways to make the drone takeoff and begin flight: Quick Staak (normal use), Water Staak (use in watersports) and Pro Staak (for expert users).

Tracking Mode: Autonomous follow modes, *Follow*, *Compass*, *Hover*, *Circle* and *Scenery*

Tracker: Handheld wrist device which is used to remotely control the Staaker drone.

¹ Staaker utilizes American GPS, Russian GLONASS, Chinese BeiDou-2 and SBAS such as EGNOS and WAAS

Table of Contents

Using this manual	3
Legend	3
Introduction	4
Terminology	5
Table of Contents	6
Safety and disclaimer	10
Staaker Drone	11
Status LED	12
Unfolding the drone	13
Gimbal	14
Camera protection	14
Camera installation guide	14
Battery insertion and removal	17
Warning	18
Tracker	19
Emergency kill switch	20
Tracker Radio Signals	20
User Interface	21
Navigating the Main Menu	22
Quick Staak	22
Water Staak	22
Pro Staak	23
Calibrate Altitude	23
Locate Staaker	23
Pairing	24
About	24
Pro Staak Settings	25
Return to Home (RTH)	25
Track Altitude	26
Responsivity	26
Fuse GPS Alt	26
Faster Altitude	27
Takeoff	27
Tracking	29
Landing	31
Land now	31
Return To Home (RTH)	32
Pause/ Unpause	33
Mounting the Tracker	33
Attaching the strap	34
Charging the Tracker	34
How to use the Staaker	35
Before use	35

Check list	35
Things to be aware of while flying	35
Flying above water	36
What is a safe Takeoff location?	36
Takeoff	37
Flight	37
Tracking modes	38
Compass	38
Follow	38
Circle	39
Scenery	39
Hover	40
Drone Smart Battery	41
To turn the power on	41
To turn the power off	41
To check the capacity	41
Charging	42
Battery failure	43
Storage	43
Battery Warnings	43
Maintenance and repairs	44
After flight	44
Warranty warning	44
Replacing arms	44
Replacing Gimbal	44
Replacing landing gear	45
Motors	45
Propellers	46
Staaker tips	47
Camera tips	47
Drone Tips	47
Troubleshooting	48
Error Messages	48
Before or during takeoff	48
Under Flight	50
Land reasons	51
Return to home (RTH) reasons	52
Tracker cannot connect to the drone	53
Staaker Assist problems	53
System cannot get GPS reception	53
Tracker loses connection to the drone often	55
The drone landed or crashed and I cannot find it	55
The drone changes altitude too much	55
The drone does not always respond to my button presses	55
The drone crashed for unexpected reasons	55
Staaker Assist	56
Flight logs	56
Firmware update	57

Terms & Warranties	58
Assumption of risks	58
Product warranty and return	59
Limited One-Year Warranty	59
Warranty Exclusions	59
Return of products	60
Indemnity	60
Limitations of Liability	60
Software License	61
Dispute Resolution	61
General Terms	64
Technical Specifications	65
PRODUCT FEATURES	65
Staaker Drone	66
Tracker	67
Smart Battery	67
Smart Battery Charger	67
CE, FCC and IC compliance	68
CE	68
FCC Compliance Statement	68
FCC Modification Statement	68
FCC Interference Statement	68
Industry Canada Notes	69
About Staaker	70
Customer Support	70


Safety and disclaimer

1. Read the complete manual before using the product.
2. The user holding the *tracker* controlling the drone is legally the pilot of the drone. The pilot is responsible for safe usage and consequences of unsafe usage of the drone. The Staaker Company is not responsible for any injury, damage of property or harm caused by usage of the drone.
3. Always check and follow all local regulations and laws for flying unmanned aerial vehicle when using the Staaker.
4. Do not use the drone within designated No-Fly zones like areas close to airports and heliports.
5. Do not use the drone close to obstacles.
6. Do not use close to man-made structures (e.g vehicles, buildings, power lines) and areas with high level of interference (e.g radio transmission towers).
7. Do not use the drone over people, animals, urban areas or trafficked roads.
8. Do not breach the bounds of privacy. Ask for permission before flying on private property.
9. Keep the drone in line of sight at all times.
10. Do not use the drone in weather or lighting conditions that result in reduced visibility.
11. Do not use the drone in wind conditions exceeding 10 m/s, or in other severe weather conditions.
12. Do not use the drone while under the influence of drugs or alcohol.
13. Make sure that the drone is in good condition when using it.
14. Only use genuine certified Staaker replacement parts.
15. The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

Staaker Drone

The Staaker drone is a quadcopter powered by a Smart Battery and carries a 3-axis stabilization gimbal equipped with a camera (camera not included). The drone is foldable and compact, designed to be durable and lightweight. The drone is equipped with an intelligent autopilot to aid you in flying the drone and keeping you always in the video frame.

The Staaker drone is pre-calibrated and tuned. This means no extra technical setup is required and the drone is ready to fly out of the box!

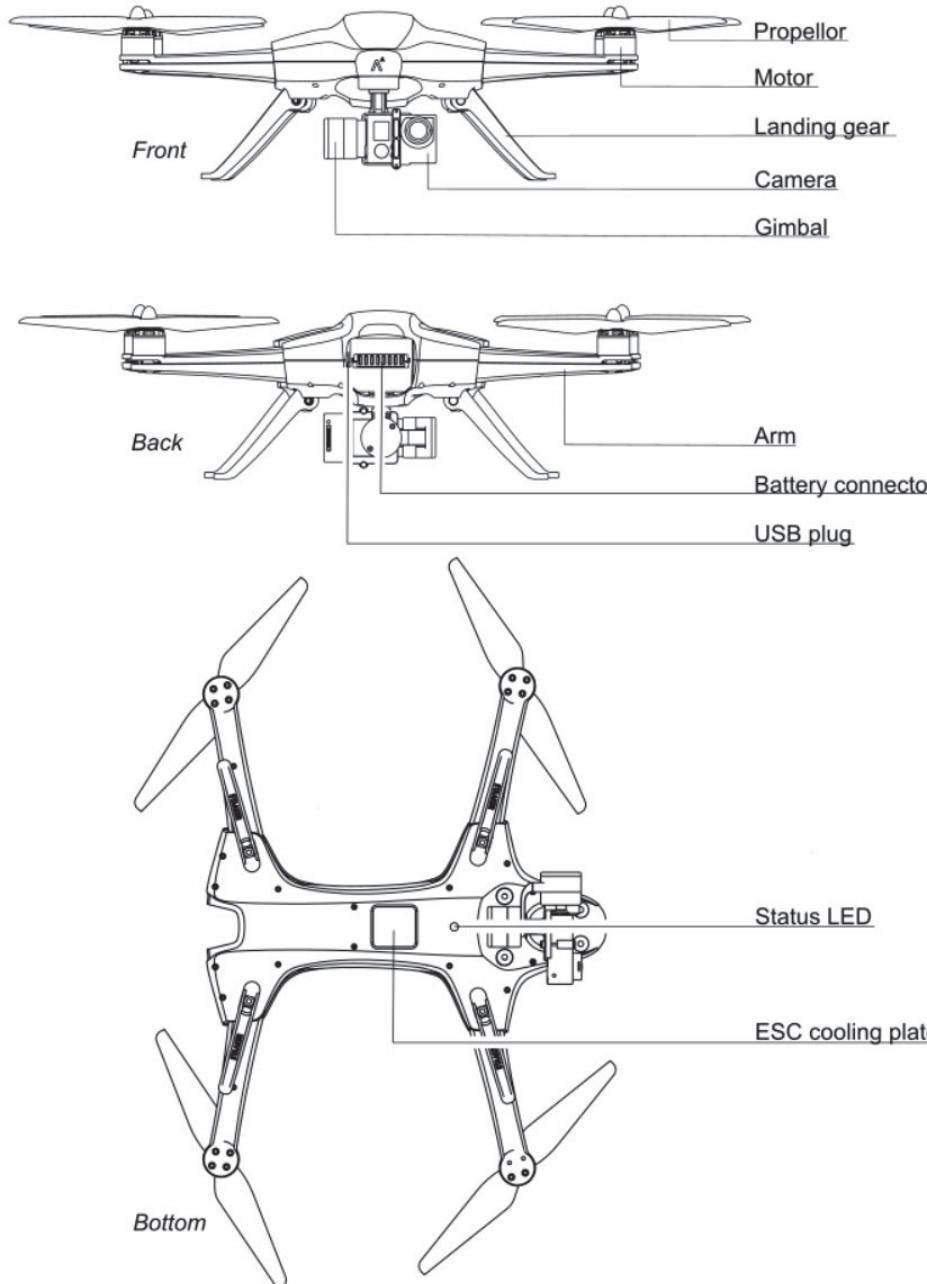

Caution! The ESC cooling plate may be hot after flight.

Status LED





The multi-coloured status LED is located on the bottom of the Staaker drone. The LED indicates if the drone is ready to fly or not. The led is only on when the drone is powered.

Status light	Description
Blinking yellow light	Drone is powered on and searching for GPS
Blinking green light	Drone has sufficient GPS and ready for takeoff
Blinking red light	Drone has an error, check tracker for message

Status light during flight	Description
Steady yellow light	Drone has lost GPS and is landing
Steady green light	Everything ok
Blinking red light	Drone has a problem or is running low on battery, check message on tracker


Unfolding the drone

Unfold all arms first and then secure them by pulling out the landing gear. It is important that all arms are unfolded completely (reaching endpoint) before the landing gear is pulled out. This will ensure the arms are completely locked and prevent vibrations which degrade flight performance and video quality. Check that all arms are tightly locked in extended position before flight.

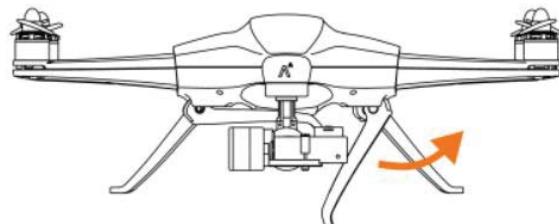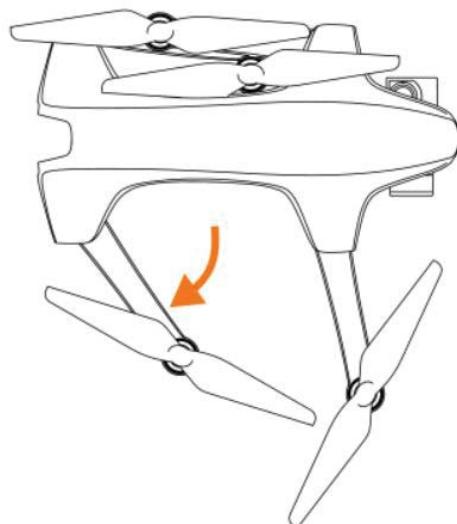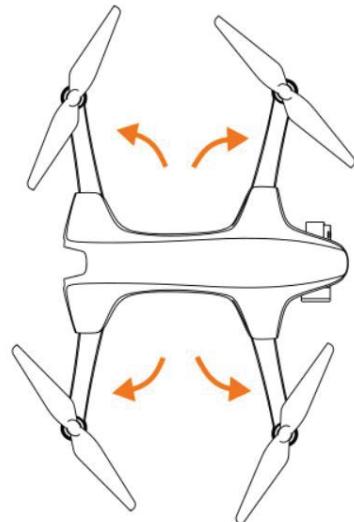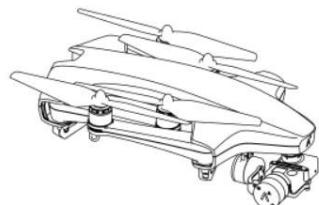

Camera protection

We always recommend to use the protective Staaker camera cover on Gopro 3 and 4 to make the camera water and dust resistant.

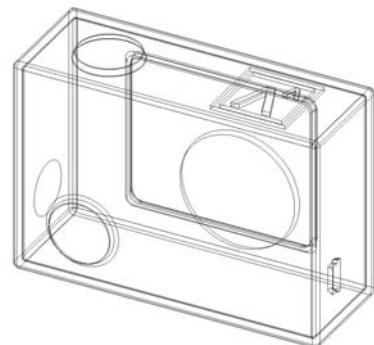



Gimbal

The gimbal eliminates vibrations and makes a steady video footage. The Staaker 3-axis gimbal supports the following cameras:


- GoPro Hero 3 (all versions).
- GoPro Hero 4 (all versions).
- GoPro Hero 5 black.
- Garmin VIRB ultra 30

Camera installation guide

1. Make sure the drone is powered off
2. Place the gimbal in the right orientation, logo on the gimbal should be on the drone's right side.
3. Loosen the two screws on the camera holder so the camera fits in the holder.

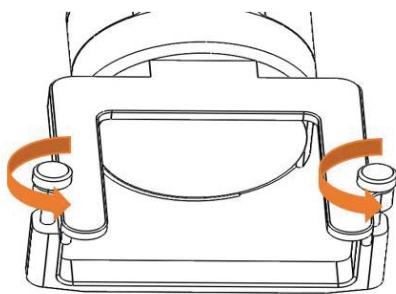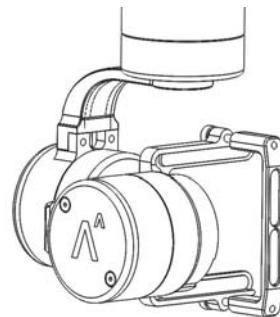


4. Insert the camera in the middle of the holder.

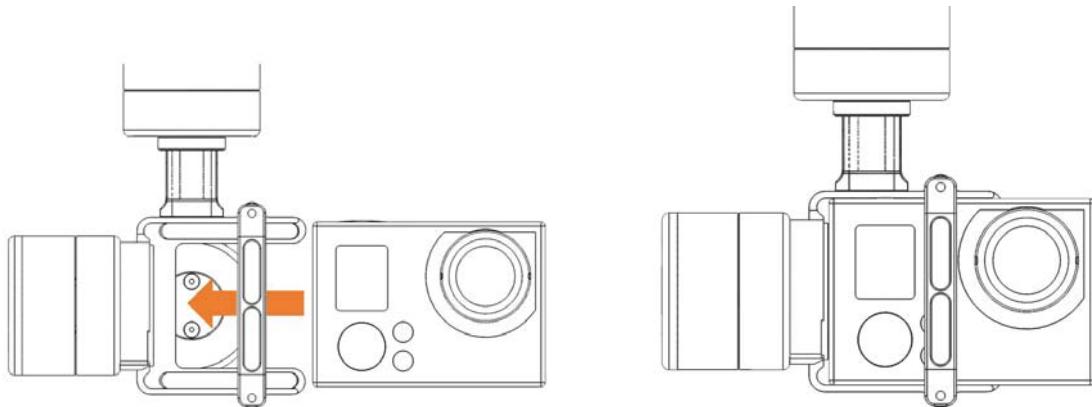


NB! Be sure it's inserted all the way in and is aligned with the edge where it stops.


5. Tighten the two screws on the camera holder and check if the camera is not loose.

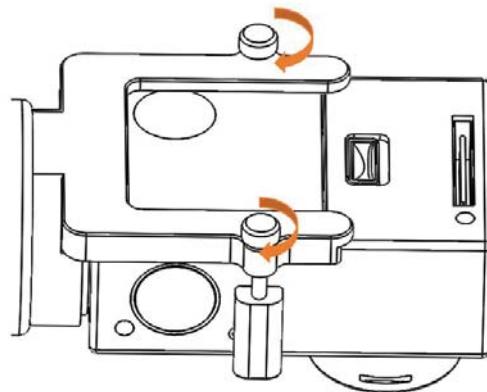

6. Insert the power cable to the Gimbal and the camera(only for GoPro 3 and 4).

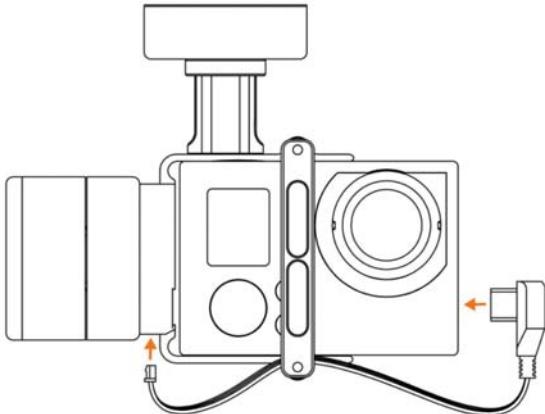




- Tip: Lead the charging cable between the camera and the screw before inserting the camera to better secure the cable.**

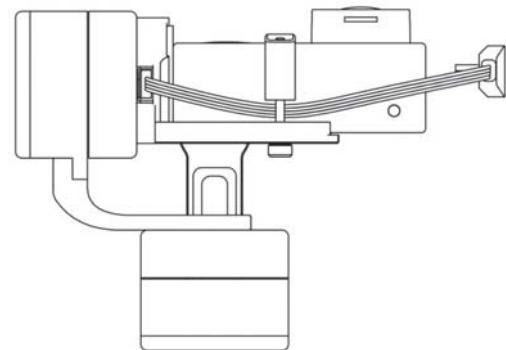

Battery insertion and removal

The battery is inserted in the back of the drone. Push the battery all the way in so it is secured by the battery lock.

To take it out, pull the battery while pressing the battery lock button.

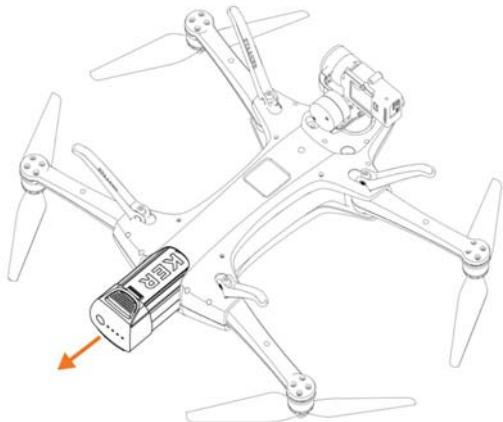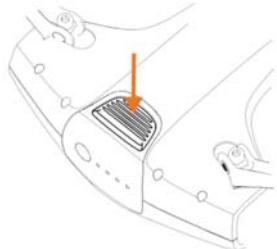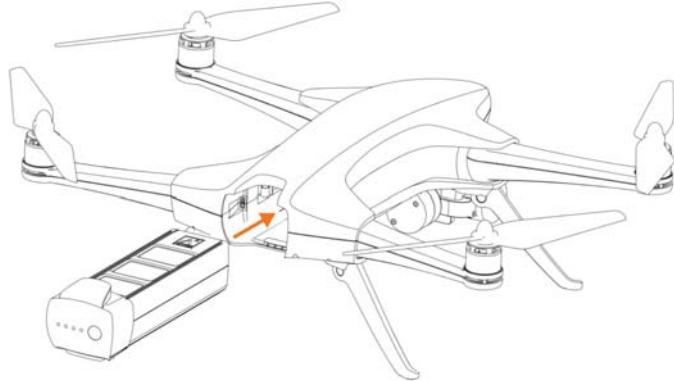

- **If the battery is not properly secured, there's a risk that it may fall out during flight. This can happen if the battery is not fully inserted or damaged. Always be sure it is locked as this affects your and others' safety.**

Warning

- If drone is unfolded incorrectly, battery not inserted properly or the camera is not secured it may cause unsafe flights, damages, bad video quality and uncontrolled crash landings.




Do not power on the drone without a camera mounted in the gimbal. The gimbal will spin erratically without the counter-weight from the camera and can damage your equipment.

- Do not modify or tamper with the drone or attempt to use non-authorized Staaker replacement parts. Attempting such modifications can interfere with on board sensors and severely degrade flight stability. Do not attach other modules on the drone, such as additional cameras, magnetic materials or radio-emitting telemetry.

Tracker

The *Tracker* is the technology that replaces an ordinary remote-control. It has multiple buttons for navigating the menus and controlling the Staaker in flight. The screen displays the current state of the drone and tracker.

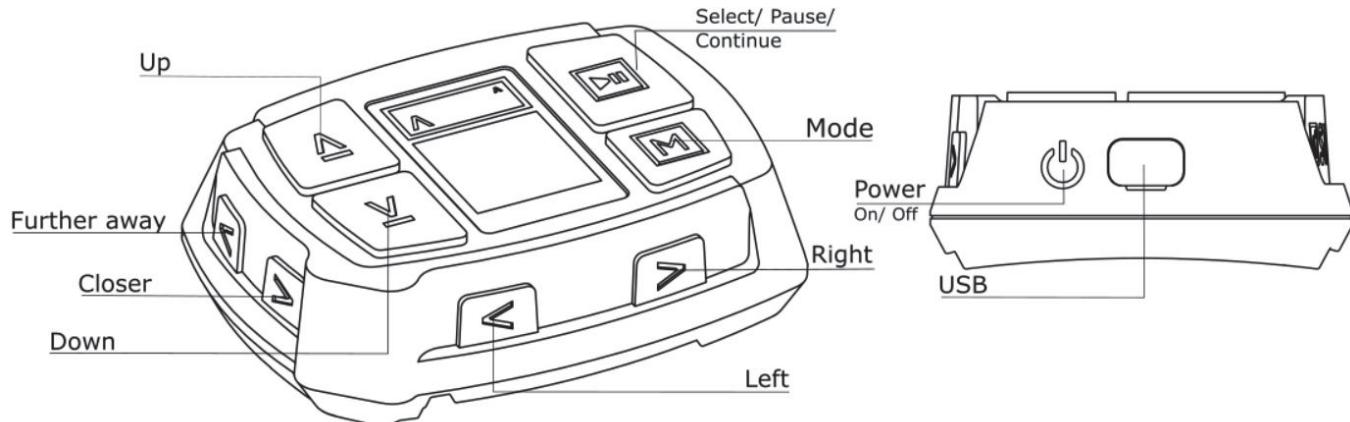

△ ▽ Up/Down: Used to navigate menus or increase/decrease altitude of the drone.

Λ √ Further away/Closer: Two buttons located on the left side of the tracker. Used for placing the drone closer or further away from the tracker.

< > Left/Right: Two buttons located on the face pointing against you. Used for orbiting the drone left or right around the tracker.

□ Mode: Used for navigating menus (same as up/down) and changing tracking modes. It is also used for going back to the previous menu.

 On/Off: A single button located on the right side of the tracker. Pressing this button will instantly turn the power on or off.

- Select/Pause/Continue: This button confirms a selection. A single press during flight will pause the drone instantly and resume movement when pressed again. Holding this button down under flight will display the land menu.

Emergency kill switch

There is a “Kill switch” functionality that instantly cuts the power from the drone motors, for use in dangerous situations as a last resort. To execute the “Emergency kill switch” press and hold **△ (up)** and **▽ (down)** at the same time for 3 seconds. This will make the drone cut all power from the engines.

 **By activating the *Kill Switch*, the motors will instantly power off and the drone will fall to the ground if it is in the air.**

- If the drone detects that it has crashed, it will automatically turn off the motors to reduce damage.**

Tracker Radio Signals

The tracker has multiple sensors inside to read your movements, the GPS is the most important one. Illustration shows where on the tracker that the wireless signals to the Staaker is being sent from and the GPS location. These locations should be unobstructed while flying the drone.




 **Loss of radio link will make the drone hold its current position until radio link is recovered. If the battery level on the drone is too low, the drone will land on its current position. If the drone is in *Water Staak* mode or *Pro Staak* mode with *Return to Home* enabled it will *Return to Home* instead. If you fly the drone out of range in *Scenery* mode, the drone will engage *Return to Home*.**

 **If the tracker loses GPS signal the drone will stop following you and the drone will enter *Scenery* mode under your control.**

- For optimal radio link range between drone and tracker, the wireless link on the tracker should have clear line of sight to the drone.**

User Interface

This section describes how to use the user interface on the tracker and explains how to navigate through the different screens that are available. When you power on the tracker, the following screen should appear:

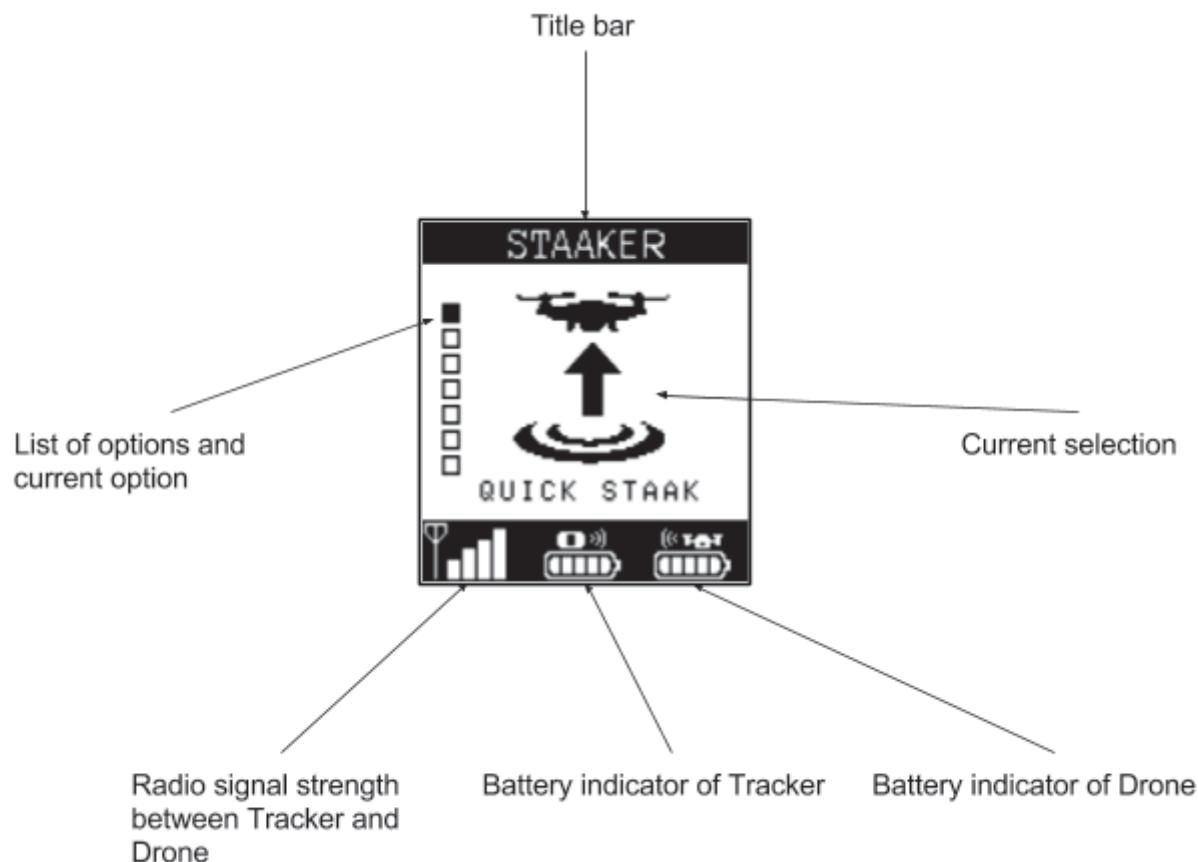

- If the Tracker has no connection with the drone (as shown by the *radio signal strength indicator* on the bottom left on the screen), the tracker does not know the current battery status of the drone. Note the status bar on the bottom of the screen:



Navigating the Main Menu

The main menu is the initial screen state on the tracker. You can navigate through the menu by either pressing the Δ or ∇ buttons or the \square button. Pressing \bullet will open the current selection.

Quick Staak

Quick Staak is a default and easy preset that fits most use scenarios on land. It is the fastest way to get your camera tool up in the air ready to film your adventure. If this is your first time using Staaker we recommend to use *Quick Staak* on land the first times to get use to the drone and using the tracker. Do not use this mode when the tracker is used for water sports.



Water Staak

Water Staak is made for flying over water or other places where you do not need the drone to follow your vertical movements. In this mode the drone will not change altitude when the tracker changes altitude. The drone will automatically *Return to Home* (RTH) when battery is low. The drone will also *Return to Home* if it loses connection with the tracker. This mode should be used when doing watersports.



⚠ NB! In *Water Staak* the drone automatically engages *Return to Home* at 40% battery level. This means that if you discharge 60% of the battery by moving directly away from the takeoff location, the drone might not have enough battery to fly completely back to home and will land on its current location when battery reaches 0%. You can abort any *Return to Home* at any time as long as the tracker has radio connection with the drone.


Pro Staak

Pro Staak is an expert mode where you can tailor advanced settings to fit your specific needs. The default settings in *Quick Staak* and *Water Staak* are our recommended settings for stable flight performance and good video output. See the *Pro Staak Settings* for more information about *Pro Staak* and the various expert user settings.



Calibrate Altitude

The drone uses barometers to track vertical movements. The sensor operates differently based on temperature and local weather variations.

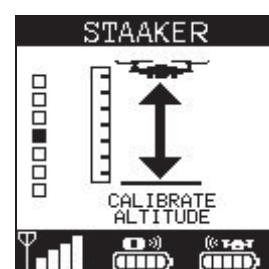

Therefore, to ensure optimal altitude tracking accuracy, the Staaker drone and the tracker can be calibrated to improve altitude accuracy. This process takes about 10 seconds and can improve camera framing significantly.

Altitude calibration needs to be performed outside and on the location, at the time, you are going to fly. We recommend to always calibrate altitude before flight.

To start calibration, make sure the drone is powered on and has connection with the tracker. Select the *Calibrate Altitude* option in the main menu, place the tracker on the drone and press • •

 **Do not touch the devices when calibrating. This might interfere with the calibration process and cause degraded tracking performance.**

Locate Staaker

The *Locate Staaker* feature allows the tracker to determine the current location of the drone. It will point you towards the last known location of the drone. The tracker needs a GPS fix for this functionality to work.




You can use *Locate Staaker* before takeoff to determine the GPS and altitude accuracy.

Press • • while in *Locate Staaker* and the drone will respond with an audio beep if it has connection.

Pairing

After uploading new software or replacing tracker/drone, you might need to pair the tracker and drone.

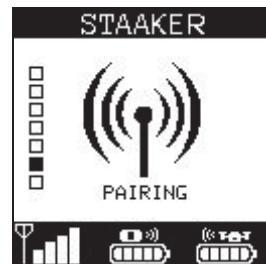

1. Make sure the drone is *not* powered.
2. Select the *Pairing* option in the main menu, the tracker will now begin beeping, signaling that it is looking for drones to pair with nearby.
3. Place the tracker on top of the drone you want to pair with.
4. Turn on the drone battery, and wait for the drone to start beeping repeatedly.
5. The tracker screen will now show that it has found a drone to connect to.
6. Push the • • button as instructed by the tracker, and the drone and tracker will start pairing.
7. Pairing is finished when the loading bar has completed.

 **Do not touch the devices while pairing. This might interfere with the calibration process and cause degraded tracking performance.**

You can only pair two devices that are running the same software version (the tracker will tell you if this fails). You can determine which version the tracker and drone are running in the *About* screen.


About

This screen displays the firmware version running on the tracker and if connected, the drone firmware version as well.



Pro Staak Settings

The *Pro Staak* settings screen will appear when selecting the *Pro Staak* takeoff mode in the main menu:

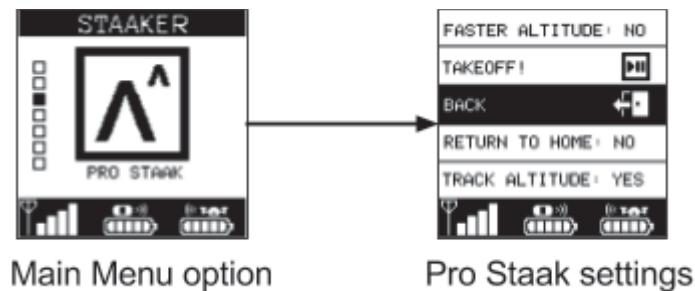

In this screen you can configure various settings that will change how the drone behaves and follows you after takeoff. The *Pro Staak* option is only recommended for expert users. Use *Quick Staak* or *Water Staak* for an easier and safe default setup. Navigate the *Pro Staak* settings by using either Δ/∇ or the \square buttons and press \bullet to modify the selected setting.

The tracker will remember your Pro Staak settings from previous session, even if the tracker is powered off. This allows you to find a good configuration that fits your usage and quickly takeoff using these settings.

SETTING	Quick Staak Default settings	Water Staak Default settings	Pro Staak Optional settings
Return to Home	Off	On	On/Off
Track Altitude	On	Off	On/Off
Responsivity	Balanced	Balanced	Smooth/Balanced/Aggressive
Fuse GPS Alt	Off	Off	On/Off
Faster Altitude	Off	Off	On/Off

 **Note that it is not possible to change these settings after takeoff.**

Return to Home (RTH)

With this setting enabled, the drone will automatically engage RTH if it reaches low battery or loses connection with the tracker. It will also engage RTH if it detects a temperature problem with the battery instead of doing an emergency landing in its current position. Note that it is possible to abort an automatic RTH using the tracker. However if you choose to do so, the

automatic RTH option will be disabled for the rest of the flight. This setting is useful when flying in areas where the drone should not land on its current position and should instead fly back towards takeoff location (flying above water for example).

NB! The drone automatically does Return to Home at 40% battery level. This means that if you discharge 60% of the battery by moving directly away from the takeoff location, the drone will *not* have enough battery to return completely back to home and will land on its current location when battery reaches 0%.

Track Altitude

If *Track Altitude* is enabled, the drone will follow your vertical movement. This is good for activity's that's going downhill or uphill. When you are flying over flat grounds, e.g. water, the Track Altitude is not necessary and can be deactivated for smoother shots. The drone will assume that the tracker keeps same elevation as the takeoff location at all times, so if the tracker changes elevation while *Track Altitude* is OFF, the camera framing will be wrong. Do not enable this setting when tracker has significant altitude changes.

- **When using *Pro Staak* in watersports, this option should be *always* disabled. Else the drone will rapidly fall in altitude and crash if the tracker barometer connects with water.**

Responsivity

There are three kinds of responsivity options: Smooth, Balanced and Aggressive. This option changes how responsive the drone should be when tracking the position and movements of the Tracker. As the name indicates, Smooth responsivity will generate calmer and slower movements while Aggressive will make the drone accelerate and decelerate more quickly for tighter tracking performance. Balanced is the default setting for a best-of-both-worlds responsivity which is good for most use cases.

Fuse GPS Alt

With this option enabled, the altitude tracking is improved by combining both GPS and barometer. This is an experimental option and is disabled by default. This setting only has any effect when *Track Altitude* is enabled.

This option is upon release (firmware version 1.0.0) disabled by default and marked as experimental due to insufficient testing and usage statistics. Initial testing indicates however, that using GPS adds major improvements to the altitude tracking performance. With this option enabled, the system should provide a more accurate, responsive and stable altitude tracking.

Faster Altitude

When *Faster Altitude* is activated the drone will ascend and descend faster. This can significantly improve the altitude position of the drone when *Track Altitude* is enabled. This is an experimental option and is disabled by default.

This option is upon release (firmware version 1.0.0) disabled by default and marked as experimental due to insufficient testing and usage statistics. Initial testing indicates that this option improves altitude tracking performance when tracker rapidly descends in elevation.

Takeoff


After selecting a takeoff mode (*Quick Staak*, *Water Staak* or *Pro Staak*), the system prepares for liftoff. Initially both the tracker and the drone require a good GPS fix before they can takeoff. This can take minutes depending on the location and weather conditions.



In the screen shown above, the Staaker drone needs to improve its GPS signal and has an estimated error of radius 1.25 meters. Both tracker and drone needs an estimated error less than 5 meters before takeoff can be engaged.

 **Note that the GPS position error estimate is a best-effort estimate and might not be correct.**

A message will appear if the drone is unable to takeoff for some reason. The most common and easily fixable is when the drone detects a nearby magnetic disturbance interfering with the compass sensor:

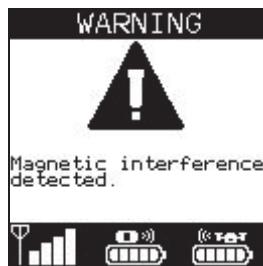


Refer to the *Troubleshooting* section on how to interpret and solve warnings displayed on the tracker.

If both the tracker and drone is ready for takeoff, the following screen will appear:




Press and hold • ⌂ to start the takeoff procedure. Once the takeoff procedure has started, a countdown will appear on the screen:

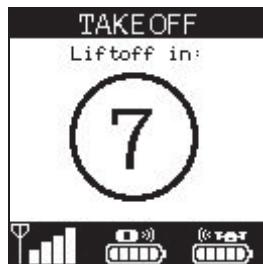

The system will countdown from 10 and at 5 seconds the motors will engage and begin spinup. Liftoff will begin once the countdown reaches 0. If any button is pressed while countdown is in progress, the takeoff will be aborted.

Tracking

After takeoff is complete, the drone will begin tracking your movements and following you.

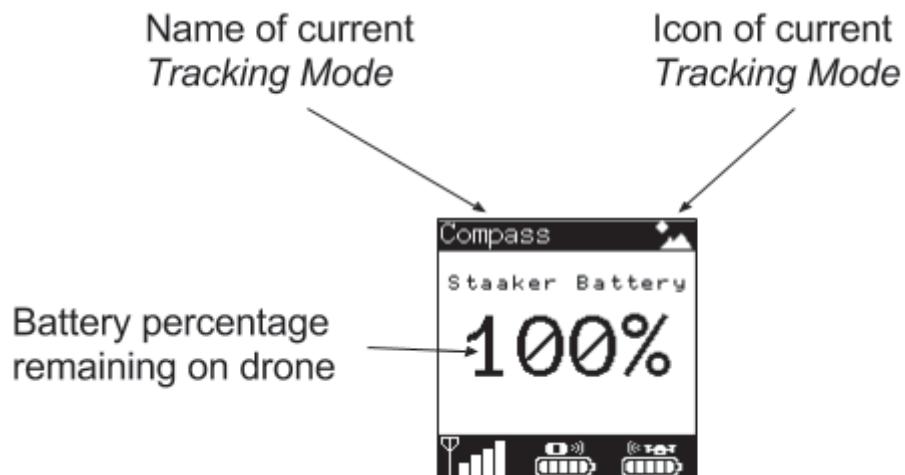

⚠ The battery usage indicator on the tracker has a safety margin built into it. This means there is still a tiny reserve of power left at 0% which will be used for emergency landing. This means it is not unsafe or damaging to drain your battery to 0%.

□ After takeoff is complete, the drone will by default enter the **Compass Tracking Mode** and is instantly ready to track your movements.


You can now use the navigation buttons to reposition the drone:

△ ▽ Increase/Decrease altitude
Λ V Further away/Closer
< > Left/Right (controls orbit velocity in *Circle* mode and heading in *Scenery*)

While tracking or paused, you can perform the following actions to change tracking mode or engage landing:

Press **•** once to pause or unpause the drone.
Press and hold **•** to open land menu.
Press **□** to open the tracking mode selection menu.

The mode selection menu (opened by pressing \square) looks like this:

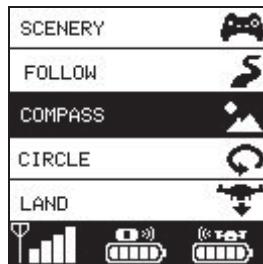

The current selection is highlighted in black. Navigate the menu by pressing Δ , ∇ or \square . Pressing \bullet will confirm your current selection and activate the selected mode. There are two options in this menu that are not tracking modes, *Land* and *Back*:



Back Returns to the previous state without changing anything.
Land Opens the *Land Menu*

See section *Tracking Modes* on how each of the tracking modes work.


If you do not select an action within 10 seconds after opening the \square mode menu, the tracker will automatically resume previous state.

 Note that while in the \square mode menu, the Δ/∇ buttons do not control altitude, but instead navigates the menu up and down. You can still change altitude by pressing and holding down Δ or ∇ .

 When the battery reaches 15% or less, the tracker will begin to beep to warn the user that the battery charge is getting low and that the drone will land soon.


Landing

Open the land menu by either pressing and holding the • • button or select *Land* in the ☐ mode menu. You can choose between *Land Now* or *Return to Home*. When a landing option is selected, the drone engages the selected landing mode.

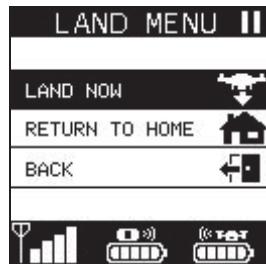

⚠ For safety reasons, the drone will automatically engage Pause while in the land menu.

☐ If the drone lands by itself, the reason for landing is shown on the bottom of the land screen:

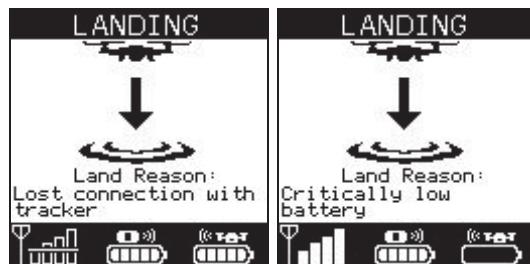

Land now

The drone will execute landing in its current position and start the descent when *Land Now* is activated. You can abort landing anytime by holding the • • or Δ button.

⚠ Emergency landings due to critical low battery (0%), GPS loss on the drone or a system error cannot be aborted.

☐ The gimbal will tilt upwards while landing so that the camera lens is pointing upwards for protection.

Return To Home (RTH)

When *Return to Home* is activated the drone ascends 10 m above the highest point of the flight. When it achieves its altitude, it will fly back to its last takeoff position and land there. The landing accuracy is about 5m which needs to be taken in consideration when choosing takeoff/landing location. While flying towards home, the drone will keep pointing its camera towards the tracker until it starts the descent. If the drone runs out of battery while flying towards home, it will land at its current position.




You can abort *Return to Home* at any time as long as you have connection by pressing and holding • •

⚠ The landing accuracy during automatic *Return to Home* landing is in the worst case about 5m. This needs to be taken into consideration when choosing takeoff/landing location.

- If the drone reaches 0% battery while *Return to Home* is engaged, it will land at its current position.
- ● For your own safety, wait for the propellers to stop before approaching the drone after it has landed.

Pause/ Unpause

While the drone is tracking you, you can pause the drone by pressing • • once. Pressing • • again unpauses the drone.

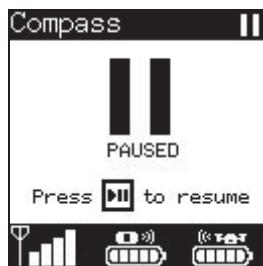

While in pause mode the drone will hold its current position but still point the camera towards the tracker. You can change mode or land the drone while it is paused. The drone can also be controlled using the movement buttons:

△ ▽ Increase/Decrease altitude
Λ V Further away/Closer
< > Left/Right

 **In a stressed situation, the pause function is a good solution for stopping the drone in the air.**

Mounting the Tracker

The tracker comes with two straps in different lengths, short and long.


1. Short strap, designed for sizes between 6 and 10 inches (15 to 26cm) in circumference.
2. Long long strap, designed for sizes between 10 and 15 inches (24 and 38cm) in circumference.

We recommend to mount the Tracker on either wrist, lower arm or your overarm, but it may be mounted anywhere it's possible. In general, the drone will perform better the less vibrations the tracker senses.

 **NB: Remember that the signal strength will be reduced if you cover the areas of the wireless link or the GPS, and in worst case make the drone do an emergency landing or crash.**


Attaching the strap

1. Place the tracker upside down
2. Lead the strap through the slots with the logo on the strap pointing up.
3. Pull the strap all the way in

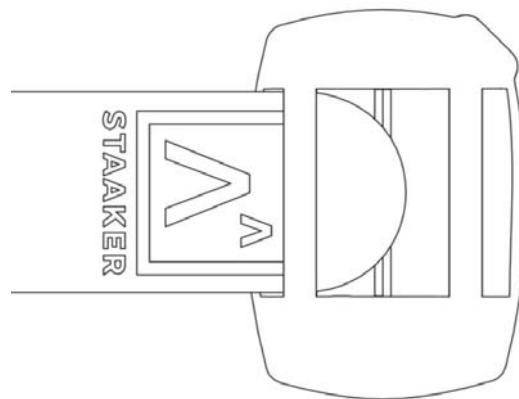

Charging the Tracker

Charge the battery before using it for the first time or when it has been unused for extended periods. Connect the USB cable to a power supply and then plug the end of the USB into the tracker USB port. Once connected, the tracker will display that it is charging:

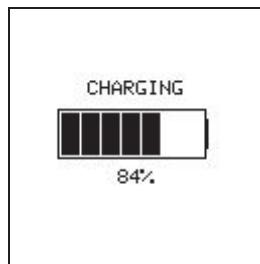

Only use the accompanying orange *Micro-B USB* cable to charge the tracker. Using unapproved charging equipment might damage the tracker and can cause the battery to explode.

 **Connecting the charger improperly may cause serious damage to the device. Any damage caused by misuse is not covered by the warranty.**

How to use the Staaker

Before use

The Staaker drone is ready to fly out of the box. Still we recommend to do some preparations and make this a routine before every flight. Before takeoff, the drone and the tracker require connection with each other and a good GPS signal reception. When the system is ready, select takeoff mode to begin!

Check list

1. Check if you got the latest firmware update on your drone and tracker.
2. Make sure the drone and tracker is not damaged, the propellers are fastened tightly, arms are locked and the camera is properly secured.
3. Make sure the Tracker and the drone battery is fully charged for a longer and safer flight.
4. Check that the camera gets charged from the drone and the gimbal is working.
5. Make sure that you are not flying in a designated “no fly zone”, nearby airports, urban areas or in crowded areas such as public parks. Respect the safety and privacy of others.

Things to be aware of while flying

When takeoff is complete, the drone will instantly enter a follow mode and is ready to track your movements. If you move around, the drone will match your movements and try to keep you in the video frame at all times. The drone is not equipped with any anti-collision sensors and it is important that you takeoff and position it in a location free from obstacles.

While the autopilot will autonomously follow use according to your follow mode instructions, the person holding the tracker is still the pilot of the system and is responsible that the drone operates safely. Do not fly the drone close to people, animals or buildings. Remember that the drone uses GPS technology to track your position and movements, which under nominal usage has an error of 2.5 meters radius on average. In degraded conditions (for example obstructed sky due to rainfall or a mountain) the GPS error can be as large as 10 meters.



Due to variable GPS accuracy, it is good practice to place the drone at least 10 meters away from any people (including yourself) at all times.

When using *Quick Staak* or *Pro Staak* with *Altitude Tracking* enabled, you need to be aware that the drone is flying high enough above the ground. The drone will try to keep a fixed altitude above you in the Follow, Compass and Circle follow modes. This means that if the tracker descends 5 meters, the drone will also descend 5 meters. Be aware of this when positioning the drone, *the drone keeps fixed altitude above the tracker and not the ground*. It is generally good

practice to position the drone high above the ground to avoid any collisions with the ground and any obstacles such as trees or large rocks.



When using *Water Staak* the drone does not change its altitude based on tracker vertical movements.

Flying above water

When flying over water it is important that you use *Water Staak* or *Pro Staak* with *Track Altitude* disabled and *Return to Home* enabled. These options are automatically enabled in *Water Staak*.

- **By not using the proper settings, you can cause your drone to land or crash into the water!**

Disabling *Track Altitude* prevents the barometer from being used for altitude tracking. The barometer cannot measure altitude when in contact with water and will cause the drone to fall rapidly if enabled.

Enabling *Return to Home* will prevent the drone from emergency landing in the water (e.g due to low battery or link loss with tracker). Be sure to choose a takeoff spot that is safe to land in when flying is complete.

What is a safe Takeoff location?

First ensure that the area you intend to operate the drone in is not a designated “no fly zone”. This includes nearby airports, helipads, military installations and any local laws preventing you to fly in that area.

Do not fly in urban areas and in crowded areas such as public parks. Avoid trafficked roads and paths where people, animals or vehicles can suddenly appear.

Only fly outside in open spacious areas. Choose a location that is flat and has no grass or foliage that might interfere with the spinning propellers. The drone will refuse to takeoff if it detects nearby magnetic interference (e.g large bodies of metal such as a car or underground metal pipe) which might interfere with its flight stability. Move the drone to an area free from magnetic interferences.

Note that if *Water Staak* or *Pro Staak* with the *Return to Home* option is used, the drone will return to the takeoff location if it loses connection with the tracker or when it is running low on battery and needs to land soon. The landing accuracy is in worst case 5m which needs to be taken in consideration when choosing takeoff/landing location.

Respect the safety and privacy of others.

Takeoff

1. Make sure you are outside and the takeoff location is safe².
2. Fold out the arms to flight position then fold out the landing legs to lock the arms in this position.³
3. Place the drone on a flat ground and make sure the gimbal and Gopro isn't touching anything.
4. Turn on the tracker by pressing and the power button on the right side of the tracker.
5. Insert battery into the Staaker and turn it ON.
6. The tracker and the drone will connect and you will see the drone status on your tracker.
7. Keep at least 10 meters distance from the drone, make sure you have full line of sight of it at all times.
8. Select takeoff mode from the main menu on your tracker. You can choose between *Quick Staak*, *Water Staak* and *Pro Staak*⁴.
9. Wait for the drone and tracker to establish GPS signal. Drone LED will blink green when it is ready. Without a good GPS signal the drone will not fly for safety reasons.
10. This is a good time to turn on your camera and start recording. When the drone is ready for takeoff, use the tracker to confirm by pressing and holding the • •button.
11. Press and hold the • •button and the takeoff countdown starts, this takes 10 seconds and displayed on the tracker. The drone will liftoff when the countdown reaches 0.

If there is any reason that prevents the drone from takeoff, it will tell you on the tracker screen. You can abort a takeoff by pressing any button.

Flight

1. Takeoff is completed when the drone reaches 10 meters altitude and the GoPro is pointing at your tracker.
2. Staaker is now in compass mode and is ready to Staak, so when you are ready to go the drone will follow you in this position.
3. If you need to change tracking mode or reposition for a better camera angle you can change mode by pressing the □ button, find the desired tracking mode by pressing Δ and ∇ and select by pressing • • You can also press mode to scroll down in the menu. Use the arrows on the tracker to move the drone for the desired position. You can also do this while on the move.
4. The drone has a safety distance and will not move closer than 3m from the tracker. 
The safety distance is disabled in Scenery mode.

For safety reasons, it is good practice to power off the drone before picking it up.


² See section *What is a safe Takeoff location?*

³ See section *Unfolding the drone*

⁴ See section *Takeoff Modes*

Tracking modes

This section describes the five different interactive flight modes that can be engaged by the tracker. Under flight, pressing the Mode button at any time opens the tracking mode selection menu. Use the Δ , ∇ or \square button to navigate the menu and select the desired tracking mode. Press the \bullet button to confirm selection.

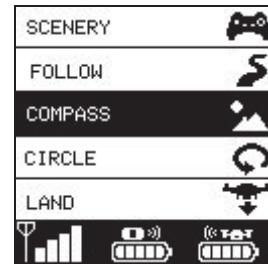

Compass

The drone will always keep a fixed angle relative to north while keeping distance from the current tracker position. It will also keep a fixed altitude above the current altitude of the tracker. This keeps the background for the shot the same no matter where you move. A perfect way to capture riding into the sunset.

Δ Up:	Increase altitude
∇ Down:	Decrease altitude
\wedge Increase Distance:	The drone will move further away from you.
\vee Decrease Distance:	The drone will move closer towards you.
< Left:	The drone will move to the left around you.
> Right:	The drone will move to the right around you.



Compass is the default mode the drone will start in after a takeoff.

Follow

The drone will keep a fixed distance away and altitude above the tracker position at all times. If the system detects movements, the drone will smoothly slide behind you and follow you from the rear instead of keeping a fixed angle. The controls are same as Compass mode:

Δ Up:	Increase altitude
∇ Down:	Decrease altitude
\wedge Increase Distance:	The drone will move further away from you.
\vee Decrease Distance:	The drone will move closer towards you.
< Left:	The drone will move to the left around you.
> Right:	The drone will move to the right around you.

⌚ Circle

As soon as you enter this mode, the drone will begin to circle clockwise around the tracker position. It will keep a fixed distance and altitude above the tracker while orbiting. You can control the circling speed by pressing and holding the < and > buttons. Pressing and holding the opposite direction will decrease speed and eventually change orbiting direction.

△ Up:	Increase altitude
▽ Down:	Decrease altitude
Λ Increase Distance:	The drone will move further away from you.
∨ Decrease Distance:	The drone will move closer towards you.
< Left:	Increase counter-clockwise orbit speed
> Right:	Increase clockwise orbit speed.

🎮 Scenery

In *Scenery* mode, the drone does not follow the tracker position. You gain full freedom of control and can fly the drone in a simple and user-friendly manner. If you do not press any buttons while in this mode, the drone will simply hover and hold its position. The camera will be angled at 30 degrees at all time while in *Scenery* mode.

△ Up:	Increase altitude
▽ Down:	Decrease altitude
Λ Forwards:	The drone will move forward.
∨ Backwards:	The drone will move backwards.
< Left:	The drone will look towards the left.
> Right:	The drone will look towards the right.



The safety distance is disabled in *Scenery* mode.

👤 Hover

In this mode the drone will keep its position and not follow your movements. It will look towards the tracker and pitch the camera to keep you in the video frame.

△ Up:	Increase altitude
▽ Down:	Decrease altitude
↖ Increase Distance:	The drone will move further away from you.
↘ Decrease Distance:	The drone will move closer towards you.
< Left:	The drone will move to the left around you.
> Right:	The drone will move to the right around you.

Drone Smart Battery



The battery is inserted at the back of the drone and secured by a locking mechanism. The drone has no power until the battery is turned on.

⚠️ Ensure that the battery is inserted properly. Failure to do so can lead to in flight power loss.

To turn the power on

1. Press the power button once.
2. Press and hold the circular button for 2 seconds until all four lights are on.

⚠️ Do not power the drone without a camera mounted in the gimbal. The gimbal will spin erratically without the counter-weight from the camera and can damage your equipment.

To turn the power off

1. Press the circular button once.
2. Press and hold the circular button for 2 seconds until all four lights are off.

□ For safety reasons, the battery will power off automatically if it is not used within 30 minutes.


To check the capacity

Press the circular button once. The number of leds will indicate the current charge level (four leds indicating full charge and one led indicating almost empty). When the charge goes below 10% the last led will start flashing once a second.

Charging

- Only charge the Staaker battery with the accompanying Staaker charger. Damage to the battery and fire can occur when using the wrong charging equipment.

To charge the battery, insert the Staaker battery charger jack into the charging plug on the battery.

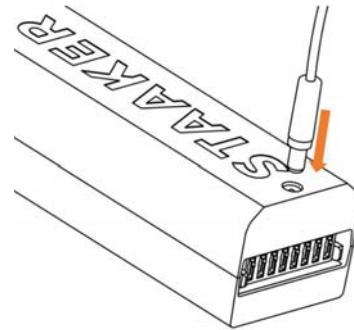

There are 2 indicators of a charging battery:

1. The 4 battery status LEDs will start flashing to indicate the charge progress.
2. The charger status light is red.

When the battery is finished charging, the 4 battery status LEDs will be off, and the battery charger status led will show green.

When the battery is fully charged and plugged into the charger, it is not possible to check the battery charge status or turn the battery on by pressing the circular button.

⚠️ Batteries are based on a chemical reaction and can not deliver power if they are frozen. When flying in freezing conditions, remember to keep the battery warm before you fly. After takeoff, the battery will heat itself because draining power generates internal heat. Our test pilots usually keep the batteries in their inner pockets while they are preparing to fly.

⚠️ Keep in mind that the drone will do a forced emergency landing if you reach 0% battery during flight which *cannot* be aborted.

Battery failure

If the battery detects a failure in its safety checks, it will signal a failure by flashing one of the 4 status LEDs 4 times per second. Use the table below to interpret the error:

Battery LED flash pattern	Description
LED1 flash 4Hz	Dangerously low voltage detected
LED2 flash 4Hz	Dangerously high voltage detected
LED3 flash 4Hz	Dangerously low temperature detected
LED4 flash 4Hz	Dangerously high temperature detected

Storage

All batteries deteriorate over time. The most important factors to battery degradation are the following:

- Too high storage temperature
- Freezing conditions
- Storing fully charged batteries
- Storing empty batteries

To make the most of your Staaker batteries, the batteries should be stored in a dry place at 5°C to 20°C degrees (41°F to 68°F), and be charged to 50%. This puts the minimal strain on the internal chemistry of the battery, preserving it longer.

To make your batteries 50% charged for storage, fly them in your drone until the tracker shows 50%, then land the drone, turn off the battery and store it. If the battery is below 50%, charge it until there are 2 solid LEDs, then store it.

Battery Warnings

1. Read the whole manual for Staaker 1 before using or charging the battery.
2. Never puncture, deform, disassemble, shock or short circuit the battery.
3. Stop using or charging the battery if it swells up, the temperature exceeds 60 C, it leaks or anything abnormal happens.
4. Keep battery out of reach of children.
5. Never use a wet battery.
6. Keep away from heat and fire.
7. Only use the original Staaker 1 charger.
8. The user takes the full responsibility of using this battery.

Maintenance and repairs

As all sports equipment, maintenance and repairs is important for optimal performance over long time and usage. Various replacements parts can be purchased from our homepage at www.staaker.com.

After flight

For a longer life we recommend to always:

- Rinse the tracker in fresh water if it has been exposed to water. Especially important after use in salt water to prevent corrosion on the USB port. Be careful to dry off the tracker after rinsing, especially the USB port.
- Use the casing when transporting.
- Charge the batteries after usage and do not store an empty or full battery for longer periods.
- Change propellers if damaged.
- Check for damages after hard landings.
- Always use the rubber USB protector on the tracker.

Warranty warning

 **We recommend that all repairs is done by personnel authorized by Staaker, if this is done by unauthorized personnel it will affect the warranty of the product. See “Terms & Warranties”.**

Replacing arms

1. Place the drone upside down, unfolded, on a table.
2. Loosen all set screw on all four legs.
3. Unscrew all four socket head cap screws for the legs and remove them.
4. Unscrew all torx on the bottom part of the main body.
5. Lift up the bottom part a few cm and unplug the LED.
6. Unplug the gimbal power and the gimbal signal cable.
7. Unplug the connectors for the motor and change the arm. Remember to match the colors of the connectors when replacing the new one.
8. Assembly by doing point 1-6 in reverse.

 **Ensure that no cables get squeezed when reassembling.**

Replacing Gimbal

1. Place the drone upside down, unfolded, on a table.
2. Loosen all set screw on all four legs.
3. Unscrew all four socket head cap screws for the legs and remove them.
4. Unscrew all torx on the bottom part of the main body.
5. Carefully lift up the bottom part and unplug the LED.
6. Unplug the gimbal power and the gimbal signal cable.
7. Unscrew the two unbrako screws on top of the gimbal, this will release the gimbal from the drone body.
8. Replace the gimbal.
9. Assembly by doing point 1-6 in reverse.



Ensure that no cables get squeezed when reassembling.

Replacing landing gear

1. Place the drone upside down, unfolded, on a table.
2. Loosen all set screw on all four legs.
3. Unscrew all four socket head cap screws for the legs and remove them.
4. Replace the broken parts
5. Assembly by doing point 1-3 in reverse.

Motors



1. Place the drone upside down, unfolded, on a table.
2. Loosen all set screw on all four legs.
3. Unscrew all four socket head cap screws for the legs and remove them.
4. Unscrew all torx on the bottom part of the main body.
5. Lift up the bottom part a few cm and unplug the LED.
6. Unplug the gimbal power and the gimbal signal cable.
7. Unplug the connectors for the motor take out the arms. Remember to match the colors of the connectors when replacing the new one.
8. Unscrew the middle hex screw and the four unbrako screws on the arm.
9. Replace the motor.
10. Assembly by doing point 1-8 in reverse.



Ensure that no cables get squeezed when reassembling.

Propellers

1. Unfold the arms.
2. Hold the motor and spin the propellor in the directed direction shown on the top of the propellor.
3. Use propellers with white lines around the nut if the motor has a white dot on top of the shaft. If the motor doesn't have a hvite dot, use the propellers with no white markings.
4. Spin the propellor in the directed direction shown on the top of the propellor to tight it.

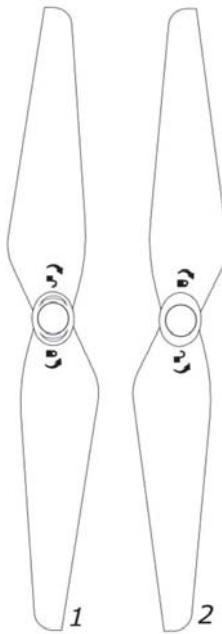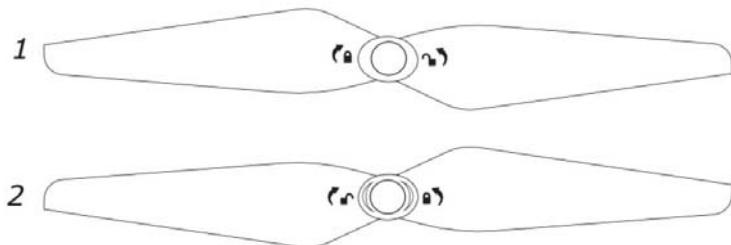

- Make sure the propeller sits tight. A loose propeller might detach under flight and make the drone crash.
- If you use wrong propellers on the motors the treads on the shaft and nut will not match.

Staaker tips

Camera tips

ISO: as low as possible considering the conditions.

FOV: Medium or narrow if possible.

Drone Tips



Improving tracking accuracy

By using *Locate Staaker* before takeoff, you can determine how accurate the current GPS fix is by looking at the estimated distance between drone and tracker. For example if you are standing next to the drone and *Locate Staaker* reports 5 meters distance, the GPS has currently an error of 5 meters which can adversely affect tracking performance and camera framing. For optimal conditions the error should be 2 meters or less. To reduce GPS position error, try waiting for more satellites to become visible or moving both the tracker and drone which has a clear unobstructed view of the sky in all directions.

Picking up the tracker and drone and walking around with them can also reduce GPS error significantly. While GPS fix will improve under normal flight movements, reducing GPS error before takeoff will make the drone perform optimally right after liftoff.




Improve altitude tracking

You can use *Locate Staaker* before takeoff to display the estimated altitude difference between the tracker and the drone. If you place the tracker on top of the drone, the altitude difference should display 0 meters. If this value is non-zero, there is an error in altitude estimation which can be removed by using the *Calibrate Altitude* option. A large error in altitude can cause incorrect framing and degraded tracking performance.

Troubleshooting

Error Messages

This section explains the various error messages that can be displayed on the tracker. An error message on the tracker looks like this:

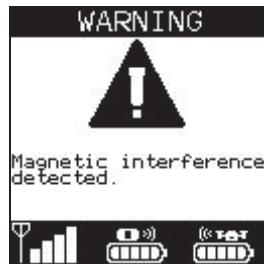

In this case, the drone cannot takeoff because it detects nearby magnetic interference. To solve the issue and enable takeoff, the drone needs to be moved away from the magnetic disturbance.

Before or during takeoff

Error Message:	Description:	What to do:
GPS interference detected	Unusual interference detected on Staaker's GPS	Change the drone location or try again later.
Magnetic interference detected	Magnetic disturbance interferes with the drone's compass.	Try to move the drone to another location. Magnetic objects can occur in the ground or nearby objects such as cars or power lines, reinforced concrete, underground piping, buildings etc.
Drone GPS Loss	The drone GPS signal is too poor for takeoff.	Wait for better signal or move around with the drone to establish a better view of the sky.

Tracker GPS Loss	The tracker GPS signal is too poor for takeoff.	Wait for better signal or move around with the tracker to establish a better view of the sky.
Staaker has too low battery for automatic Return to Home	The drone battery level is below the required level for an automatic Return to Home and will refuse to takeoff.	Either use ProStaak option to disable automatic Return to Home or use a fully charged battery.
Failsafe mode engaged	A serious system error was detected. More detailed error message appears in the main menu.	This usually indicates a fatal system error for one of the drone's sensors. Contact support for more help.
Bad battery	There is something wrong with the battery.	The SmartBattery might be damaged and is not working correctly. Replace the battery.
Drone must be level	The ground that the drone is standing on is not level enough for it to take off.	Move the drone to level ground.
Drone movement detected	The drone moved while doing the preflight check.	Do not touch the drone when takeoff is engaged. Make sure the drone is stable and not taking off from a moving object.

Under Flight

Error Message:	Description:	What to do:
High battery temperature detected	Battery is too hot. The drone will go to preselected landing mode.	Land the drone as soon as possible.
Low battery temperature detected	Battery is too cold. The drone will go to preselected landing mode.	Land the drone as soon as possible.
Drone GPS interference detected	The drone has bad GPS because of radio interference. The drone may lose GPS.	The reason can be a nearby transmitter disturbing the drone GPS signal. The problem could disappear by itself. If not, land the drone as soon as possible.

Land reasons

Error Message:	Description:	What to do:
Land requested by user	User selected “Land now” in the tracker menu	It is possible to abort the landing by holding • or Δ
Critical low battery	The battery level was too low and the drone has to emergency land immediately.	You cannot abort this landing; the battery level is too low.
Critical high battery temp	Battery is too hot. The drone will land at its current location.	You cannot abort this landing.
Critical low battery temp	Battery is too cold. The drone will land at its current location.	You cannot abort this landing.
Staaker lost GPS	The Drone has no GPS and doesn't know where it is and if it's moving or not.	You cannot abort this landing, keep distance until landing is completed.
Lost tracker link	The drone will hover for 3 minutes and then land at its position if link between the drone and tracker is not reestablished. If automatic RTH is enabled, it will RTH instead.	Try to move closer to the drone. Keep a clear path between the drone and the tracker. Other transmitters can also interfere with the Staaker link signal.
Aborted takeoff	Takeoff is aborted if any buttons are pressed in takeoff state.	Do not press any buttons until the drone has reached its height and is pointing at you.

Return to home (RTH) reasons

Error Message:	Description:	What to do:
RTH requested by user	User selected “Return to home” in the tracker menu	The RTH can be aborted by user. If auto RTH is aborted, the drone will not go to automatic RTH again at 40% battery level.
RTH due to low battery	If you are in Water staak or Pro staak with the RTH selected the drone will do a auto RTH when it reaches 40% battery remaining.	The RTH can be aborted by user. If auto RTH is aborted, the drone will not go to automatic RTH again.
RTH due to high battery temperature	Battery is too hot. The drone will go to preselected landing mode.	You cannot abort this landing.
RTH due to low battery temperature	Battery is too cold. The drone will go to preselected landing mode.	You cannot abort this landing.
RTH due to lost tracker link	The drone will hover for 1 minute then do a RTH if link is not reestablished.	Try to move closer to the drone. keep a clear path between the drone and the tracker. Other antennas can also interfere with the Staaker link signal.

Automatic Return to Home will only happen if you are in Water Staak or Pro Staak with the Return to Home setting enabled. If you lose connection with the tracker while flying Scenery mode, the drone will engage automatic Return to Home flight.

Tracker cannot connect to the drone

- Make sure the drone is powered. When the battery is inserted and turned on, the drone should immediately make a beeping sound to notify that it is now powered. The LED under the drone should also start to blink and the gimbal should startup in about 17 seconds after the beep.
- Try to pair the tracker with the drone. If you replaced drone or tracker or updated firmware, you need to pair the tracker with the drone.
- Make sure there is clear path between drone and tracker.

If the tracker doesn't find the drone while pairing

- Try turning the drone power off and on again.
- Make sure the tracker and drone are running the same firmware version.

Staaker Assist problems

Trouble shooting guide for connection is also provided in Staaker Assist.

Tracker will not connect to Staaker Assist

1. Make sure the tracker is off
2. Check for damages on the USB connectors and cable
3. Try to re-plug the USB
4. Unplug the USB and press and hold while turning on the tracker.


Drone will not connect to Staaker Assist

1. Sometimes it takes some seconds before the drone is ready after connections.
2. Check for damages on the USB connectors and cable
3. Try to re-plug the USB

System cannot get GPS reception

About GPS Technology

To get the exact coordinates needed for flying, the drone and tracker need contact with at least 6 satellites for precise location at all time. The best GPS reception is gained from a clear and unobstructed view of the sky in all directions (eg. flat terrain or at the ocean). Weather conditions such as clouds, fog or rain can reduce GPS visibility. The worst GPS reception is found in terrain where view of the sky is obstructed (eg. a narrow valley or in a street between high rises) and/or in bad weather (eg. cloudy/thunderstorm/rain/fog).

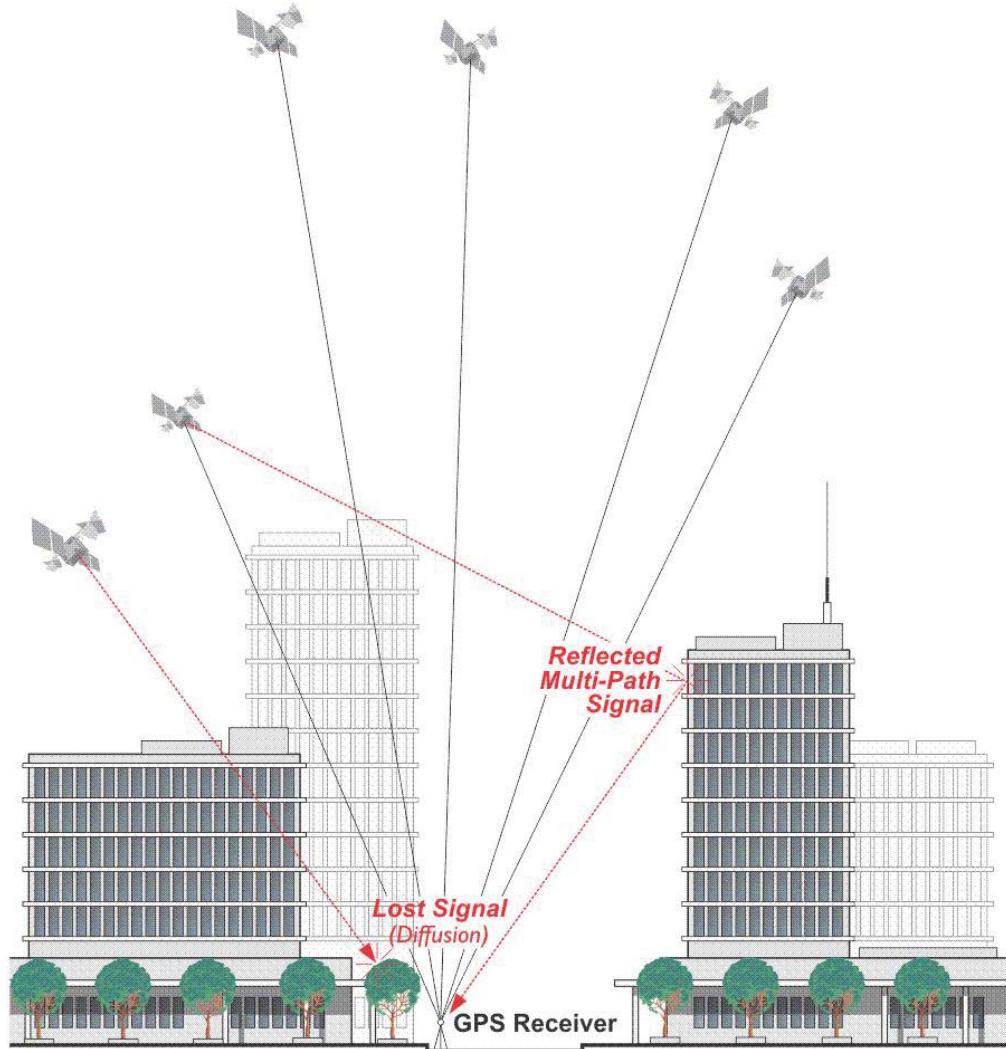

The red lines indicates satellites which causes degraded position accuracy (e.g signals passing through buildings/trees or signals reflected on buildings/mountains). A degraded GPS signal can cause the drone to drift in position and not follow the tracker properly. Therefore, do not fly the drone in urban areas⁵ or GPS denied environments.

If Tracker cannot get GPS

- Improve GPS conditions for tracker by moving around with it. Try to keep the tracker's screen pointing towards the sky.
- Keep clear of obstacles between the tracker and the sky and do not cover the tracker with any materials so that the view of the sky is obstructed. The tracker GPS reception becomes better the more of the sky it can see.

If drone cannot get GPS

- Improve GPS conditions for drone by moving around with it.
- Make sure that the drone is not altered in any way, do not mount stuff on it or cover parts of it.

⁵ In addition to most local laws forbid flight of drones in urban areas.

- Keep clear of obstacles between the drone and the sky and do not cover with any materials so that the view of the sky is obstructed. The GPS reception becomes better the more of the sky it can see.

Tracker loses connection to the drone often

- Keep tracker on the arm and keep a free line of sight between tracker and the drone. The recommended placement of the tracker is on your arm, preferably on your upper arm, to improve the quality of the link between the tracker and the drone.
- Keep the tracker away from any metal objects. Metal object can greatly reduce the performance of the tracker's link to the drone. It is therefore recommended to keep the tracker away from any and all metal objects during use. The minimum allowed distance from metal, for safe usage of the system, is 10cm (4 inches).

The drone landed or crashed and I cannot find it

From the main menu, select *Locate Staaker*. A screen will display the direction and distance to the last known position of the Staaker relative to your current position. The tracker needs GPS reception for this functionality to work. Press the • • button while in this mode and the drone will beep to notify you where it is.

The drone changes altitude too much

Mount outside clothes. Do not put inside something else (pockets, bags etc.). The recommended placement of the tracker is on your arm, and preferably on your upper arm. It should also be placed outside of any clothes, as it is completely waterproof. Altitude fluctuations while flying might occur if the tracker is used while contained inside something.

The drone does not always respond to my button presses

- Check if there is connection between the drone and the tracker. If so, see "Tracker loses connection to the drone often"
- Make sure the tracker is not damaged.

The drone crashed for unexpected reasons

- Contact Staaker tech-support and upload the flight log using staaker-assit. Write down the date and time of the flight.
- Let us know how the crash happened.
- If the drone breaks and you cannot fix it, please collect all the pieces you can find and contact Staaker support.

Staaker Assist

Staaker Assist is the assist and update software for both the drone and tracker. We always want to improve the product and give our users a better experience to make this the optimal tool for filming. By reviewing every flight, we always find things to improve.

By downloading the application from our webpage: www.staaker.com you can easily connect your Staaker for uploading flight logs and update your Staaker's firmware.



Staaker Assist supports Mac, Windows and Ubuntu. It requires Java 8 or later installed to work.

Flight logs

By using the Staaker Assist application on your desktop you will help us improve reliability and user experience when using the Staaker and Tracker. By connecting your drone to the Staaker Assist, the latest flight logs from your drone will be uploaded and used for further development and user experience improvements. Logs are also required in warranty cases.

How to upload flight log:

1. Make sure your computer is connected to the internet.
2. Start the Staaker Assist app.
3. Plug your drone by using the USB.
4. The flight log uploading starts automatically.
5. Wait until the uploading is complete.

Firmware update

All firmware updates will be announced on our webpage. By downloading our Staaker Assist app you can easily update your drone and tracker. Staaker Assist requires internet connection and will download and update the latest firmware version for you. Staaker Assist will also notify you if there is a new firmware since last time you updated your Staaker when you are plugged in.

You can easily see what firmware Version you have on your Staaker by going to “About” in the tracker main menu. You can see the changes in the new version by clicking <Help>-<Changelog> in Staaker Assist

It's best practice that you always update both tracker and drone with the latest firmware, different versions are **not** compatible.

Step by Step Guide:

- Go to www.staaker.com and download the latest version of Staaker Assist for your computer.
- Check if you got the latest firmware at www.staaker.com or Staaker Assist, your current firmware is listed in the *About Screen*  in the tracker main menu.
- Plug in your drone with the USB (using the orange micro usb cable) to your computer and press “Update Staaker Firmware”.
- Wait for completion in Staaker Assist. When the drone firmware is complete and the flight log is uploaded, unplug the drone.
- Connect the Tracker with the USB (using the orange micro usb cable) to your computer
- Press <Update Tracker Firmware> in Staaker Assist
- Wait for completion in Staaker Assist, unplug your Tracker
- Confirm version by checking About screen in your tracker main menu
- Re-pair the tracker and drone if necessary.

Terms & Warranties

These terms and conditions of sale (“Terms”) govern the purchase of any products (“Products”) from The Staaker Company AS, The Staaker company USA Inc. or any of their subsidiaries (“Staaker” or “we”) unless where there is a separate written agreement with customer (“Customer” or “you”) that specifically supersedes the Terms.

Assumption of risks

You agree to comply with all applicable local, state and national laws in connection with your use of the Product, including Federal Aviation Administration (or similar authorities in other countries) regulations and advisories. You understand and agree that the Product is not made or intended for use in any application or hazardous environment that requires fail-safe performance, where the failure or inaccuracy of the Product or its use might result in or cause death, personal injury, collision, or significant environmental damages (“High-Risk Activities”). High-Risk Activities include without limitation operation near any animal, power line, cellular or other radiofrequency tower, mining area, any other electromagnetic interference environment, obstacle, airport, airfield or industrial facility or area. The Products are not toys and improper operation may cause serious injury and property damage. You agree to use precautions when using your Product.

Staaker accepts no risk, obligation or liability whatsoever to you or any third party for any of the following (“Disclaimed Activities”) performed or caused, by act or omission, by you or a third party with access to your Product:

- use of the Product contrary to Staaker’s published information, specifications and instructions, including, but not limited to, storage requirements and environmental conditions or ranges for temperature or humidity, leaving the Product in direct sunlight for long periods, use of the Product for High-Risk Activities, use of the Product in combination with any third party device not provided or recommended by Staaker, and affixing anything to the Product;
- repairs, modifications, adjustments or repairs to the Product made by a party not authorized by Staaker;
- damage from any external cause, including, but not limited to, sand, dirt, improper usage of any electrical source, battery leakage, or local power surges;
- any damage to property or persons caused by your Product that is not caused by material defect for which Staaker is held responsible, including your failure to properly operate or understand the functionalities of the Product;
- improper use such as allowing the Product to land on unstable surfaces or dangerous terrain, using the Product in inclement weather or low light, failure to maintain line-of-sight with the Product when using it, attempting to charge the Product with chargers not provided by Staaker;
- failure to purchase any insurance required by law to operate the Product in your area;
- failure to determine the suitability of the Product for your intended use;
- failing to make sure that any other person who uses the Product also complies with these terms and any other guidance we provide you, whether this guidance is included in writing with the Product or made available on our website;
- any continued use of the Product after you detect any material defect, including erratic responses to user input;

- failure to adhere to Federal Aviation Administration (or similar authorities in other countries) regulations and advisories, as well as any other relevant laws and applicable rules; and
- any other use of the Product that must reasonably be considered improper.

Product warranty and return

You agree to read, and abide by any written instructions shipped with your Product and all safety precautions contained therein. If you do not understand any part of any of these instructions or the functionality of Product, you may view the FAQ on our webpages or contact us at support@staaker.com.

Limited One-Year Warranty

Our Products are warrantied against manufacturing defects for a period of one year from the original date of delivery of the Product to you. Our sole obligation in the event of such defects during this period is to repair or replace the defective part or Product with a comparable part or Product; how we replace or repair the Product is at our sole discretion. Replaced or repaired Products will be warrantied for the remainder of the original warranty period or thirty (30) days from the date of delivery of the replaced or repaired Product to you, whichever is longer.

Please note that this warranty ONLY applies to the original purchaser.

Warranty Exclusions

You agree to fully read the instructions and guidance we provide and review the Product's capabilities and

constraints before using the Product. Notwithstanding the limited warranty above, you assume all liability and we have no obligation whatsoever to you or anyone else for any of the Disclaimed Activities mentioned herein.

All Products that are returned to us become our property. Staaker is not responsible for any memory card, content

or information stored in any Product you return to us, whether under warranty or not.

ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY ABOVE. ALL OTHER EXPRESS OR IMPLIED WARRANTIES OR CONDITIONS, INCLUDING ANY IMPLIED WARRANTY OF NON-INFRINGEMENT AND ANY WARRANTIES ARISING OUT OF COURSE OF DEALING OR USAGE OF TRADE, ARE DISCLAIMED. NO ADVICE OR INFORMATION, WHETHER ORAL OR WRITTEN, OBTAINED FROM STAAKER OR ELSEWHERE, WILL CREATE ANY WARRANTY NOT EXPRESSLY STATED IN THESE TERMS AND CONDITIONS. Some jurisdictions do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary by jurisdiction.

Return of products

You must obtain a Return Materials Authorization (“RMA”) number from us prior to returning any Products to us under the Limited One-Year Warranty, carefully and return it to us,

freight prepaid, together with the RMA. The returned Product must be in the original package and free of any defect or damage caused by shipping. If we determine to repair or replace your Product under the Limited One-Year Warranty, we will pay the return costs for ground shipping. If we reasonably determine that the Product you returned is not defective or does not fall within the 30-Day Worry Free Guarantee, we will contact you and will arrange for reshipment to you at your cost, plus a handling fee equal to 15% of the Product purchase price. If you decline to pre-pay such shipping and handling costs, we are under no obligation to return such non-defective Product to you.

You can only make returns as follows:

- Before requesting an RMA, please contact our customer support by clicking on Contact Us on our website.
- If we are unable to solve your problem via email, please request an RMA number. If our customer support determines that you are within your 30-Day Worry Free Guarantee or that your problem qualifies under warranty coverage you will be issued an RMA number.
- Package Products along with a copy of the RMA form.
- Write the RMA number on the outside of the box and send it to the appropriate address based on your specific location. Please do not hand-deliver your product to the addresses provided, even if you are local. These locations are not set up to receive visitors.

Indemnity

You agree to defend, indemnify, and hold Staaker, its subsidiaries and affiliates, and their officers, directors, employees and agents, harmless from and against any claims, liabilities, damages, losses, and expenses, including, without limitation, reasonable legal and accounting fees, arising out of or in any way connected to your violation of these Terms and your participation in Disclaimed Activities, or for liabilities, interest, penalties or fees assessed against us arising from any failure by you to pay any required taxes.

Limitations of Liability

SUBJECT TO OUR WARRANTY PROGRAM, THE PRODUCT IS PROVIDED ON AN “AS IS” BASIS AND YOUR USE OF THE PRODUCT IS AT YOUR OWN RISK, AND IN NO EVENT WILL STAAKER BE LIABLE FOR ANY PUNITIVE, EXEMPLARY, SPECIAL, CONSEQUENTIAL OR INCIDENTAL DAMAGES (INCLUDING, WITHOUT LIMITATION, LOSS OF REVENUE, USE, PROFITS, DATA, OR GOODWILL) OR COSTS OF PROCURING SUBSTITUTE PRODUCTS, ARISING OUT OF, RELATING TO, OR IN CONNECTION WITH THESE TERMS OR THE PURCHASE, SALE, USE, OPERATION OR PERFORMANCE OF THE PRODUCTS, WHETHER SUCH LIABILITY ARISES FROM ANY CLAIM BASED UPON CONTRACT, WARRANTY, TORT (INCLUDING NEGLIGENCE), PRODUCT LIABILITY OR OTHERWISE, WHETHER OR NOT STAAKER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH LOSS OR DAMAGE. YOU AND STAAKER HAVE AGREED THAT THESE LIMITATIONS WILL SURVIVE AND APPLY EVEN IF ANY LIMITED REMEDY SPECIFIED IN THESE TERMS IS FOUND TO HAVE FAILED OF ITS ESSENTIAL PURPOSE. IN NO EVENT WILL STAAKER’S LIABILITY TO YOU

ARISING OUT OF, RELATING TO, OR IN CONNECTION WITH THESE TERMS, FROM ALL CAUSES OF ACTION AND UNDER ALL THEORIES OF LIABILITY, EXCEED THE ACTUAL AMOUNT PAID TO STAAKER BY YOU FOR THE PRODUCT THAT GIVES RISE TO THE CLAIM. Some jurisdictions do not allow the limitation or exclusion of liability for incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Software License

Any software installed in the Products (the "Software") is licensed and not sold to Staaker's customers. You may only use this software for its normal, intended use with the Products and in line with these Terms. When we say "sell" and "purchase" in these Terms, we mean "sell" and "purchase" only with respect to the non-software elements of the Product. These Terms apply whether or not they are included with the Products sold hereunder.

Subject to your compliance with these Terms, Staaker grants you a limited, non-exclusive, non-transferable, non-sublicenseable license to use the Software as part of your use of the Product for your own personal, non-commercial purposes and for no other purposes. You may not (i) copy, modify or create derivative works based on the Software; (ii) distribute, transfer, sublicense, lease, lend or rent the Software to any third party; (iii) reverse engineer, decompile or disassemble the Software; or (iv) make the functionality of the Software available to multiple users through any means. Staaker reserves all rights in and to the Software not expressly granted to you under these Terms. All Software is protected by U.S. and international copyright law and treaties.

All the Software and any related documentation are "commercial items" as that term is defined in FAR 2.101, consisting of "commercial computer software" and "commercial computer software documentation," respectively, as such terms are used in FAR 12.212 and DFARS 227.7202. To the extent that the Products are being acquired by or on behalf of the U.S. Government then, as provided in FAR 12.212 and DFARS 227.7202-1 through 227.7202-4, as applicable, the U.S. Government's rights in the software and any related documentation will be only those specified in these Terms.

Dispute Resolution

These Terms and any action related thereto will be governed by the laws of the State of California without regard to its conflict of laws provisions.

For any dispute, claim or controversy with Staaker arising out of or relating to these Terms or the use of the Product (collectively, "Dispute"), you agree to first contact us and attempt to resolve the Dispute with us informally. In the unlikely event that Staaker has not been able to resolve a Dispute with you after 30 days, you and Staaker agree that it shall be settled by binding arbitration, except that each party retains the right: (i) to bring an individual action in small claims court and (ii) to seek injunctive or other equitable relief in a court of competent jurisdiction to prevent the actual or threatened infringement, misappropriation or violation of a party's copyrights, trademarks, trade secrets, patents or other intellectual property rights (the action described in the foregoing clause (ii), an "IP Protection Action"); and (iii) you retain the right to litigate any Dispute other than an IP Protection Action by providing Staaker with written notice of your desire to do so by email or regular mail within thirty days following the date you first accept these Terms (such notice, an "Arbitration Opt-out Notice"). If you don't provide Staaker with an Arbitration Opt-out Notice within the 30-day period, you will be deemed to have knowingly and intentionally waived your right to litigate any Dispute except as expressly set forth in (i) and (ii) above. The exclusive jurisdiction and venue of any IP Protection Action or, if you timely provide Staaker with an Arbitration Opt-out Notice, will be the state and federal courts located in California and each of the parties hereto waives any objection to jurisdiction and venue in such courts. Unless you timely provide Staaker

with an Arbitration Opt-out Notice, you acknowledge and agree that you and Staaker are each waiving the right to a trial by jury or to participate as a plaintiff or class member in any purported class action or representative proceeding. Further, unless both you and Staaker otherwise agree in writing, the arbitrator may not consolidate more than one person's claims, and may not otherwise preside over any form of any class or representative proceeding. If this specific paragraph is held unenforceable, then the entirety of this "Dispute Resolution" section will be deemed void. Except as provided in the preceding sentence, this "Dispute Resolution" section will survive any termination of these Terms.

The arbitration will be administered by the American Arbitration Association ("AAA") in accordance with the Commercial Arbitration Rules and the Supplementary Procedures for Consumer Related Disputes (the "AAA Rules") then in effect, except as modified by this "Dispute Resolution" section. (The AAA Rules are available at <https://www.adr.org/aaa/faces/rules/searchrules> or by calling the AAA at 1-800-778-7879). The U.S. Federal Arbitration Act will govern the interpretation and enforcement of this Section.

A party who desires to initiate arbitration must provide the other party with a written demand for Arbitration as specified in the AAA Rules. (The AAA provides a form Demand for Arbitration at <https://www.adr.org/aaa/faces/services/fileacase/forms>). The arbitrator will be either a retired judge or an attorney licensed to practice law and will be selected by the parties from the AAA's roster of arbitrators. If the parties are unable to agree upon an arbitrator within 7 days of delivery of the Demand for Arbitration, then the AAA will appoint the arbitrator in accordance with the AAA Rules.

Unless you and Staaker agree otherwise, the arbitration will be conducted in the county where you reside. If your claim does not exceed 10,000 U.S. dollars, then the arbitration will be conducted solely on the basis of the documents that you and Staaker submit to the arbitrator, unless you request a hearing or the arbitrator determines that a hearing is necessary. If your claim exceeds 10,000 U.S. dollars, your right to a hearing will be determined by the AAA Rules. Subject to the AAA Rules, the arbitrator will have the discretion to direct a reasonable exchange of information by the parties, consistent with the expedited nature of the arbitration.

The arbitrator will render an award within the time frame specified in the AAA Rules. The arbitrator's decision will include the essential findings and conclusions upon which the arbitrator based the award. Judgment on the arbitration award may be entered in any court having jurisdiction thereof. The arbitrator's award of damages must be consistent with the terms of the "Limitation of Liability" section above as to the types and amounts of damages for which a party may be held liable. The arbitrator may award declaratory or injunctive relief only in favor of the claimant and only to the extent necessary to provide relief warranted by the claimant's individual claim. If you prevail in arbitration you will be entitled to an award of attorneys' fees and expenses, to the extent provided under applicable law. Staaker will not seek, and hereby waives all rights it may have under applicable law to recover, attorneys' fees and expenses if it prevails in arbitration.

Your responsibility to pay any AAA filing, administrative and arbitrator fees will be solely as set forth in the AAA Rules. However, if your claim for damages does not exceed 75,000 U.S. dollars, Staaker will pay all such fees unless the arbitrator finds that either the substance of your claim or the relief sought in your Demand for Arbitration was frivolous or was brought for an improper purpose (as measured by the standards set forth in Federal Rule of Civil Procedure 11(b)).

If Staaker changes this "Dispute Resolution" section after the date on which you placed your order for a Product, you may reject any such change by sending us written notice within 30 days of the date such change became effective. By rejecting any change, you are agreeing that you will arbitrate any Dispute between you and Staaker in accordance with the provisions of this Dispute resolution section as of the date you first accepted these Terms (or accepted any subsequent changes to these Terms).

General Terms

These Terms constitute the entire and exclusive understanding and agreement between you and Staaker regarding the purchase of a Product, and these Terms supersede and replace any and all prior oral or written understandings or agreements between us regarding such a purchase.

If for any reason a court of competent jurisdiction finds any provision of these Terms invalid or unenforceable, that provision will be enforced to the maximum extent permissible and the other provisions of these Terms will remain in full force and effect.

You may not assign or transfer these Terms, by operation of law or otherwise, without our prior written consent. Any attempt by you to assign or transfer these Terms, without such consent, will be null. We may freely assign or transfer these Terms without restriction. Subject to the foregoing, these Terms will bind and inure to the benefit of the parties, their successors and permitted assigns.

Any notices or other communications provided by us under these Terms, including those regarding modifications to these Terms, will be given: (i) via email; or (ii) by posting to our website. For notices made by e-mail, the date of receipt will be deemed the date on which such notice is transmitted.

Staaker's failure to enforce any right or provision of these Terms will not be considered a waiver of such right or provision. The waiver of any such right or provision will be effective only if in writing and signed by a duly authorized representative of Staaker. Except as expressly set forth in these Terms, the exercise by either party of any of its remedies under these Terms will be without prejudice to its other remedies under these Terms or otherwise.

These Terms were last updated

August 1, 2016

Technical Specifications

PRODUCT FEATURES



EASY TO USE

Ready to film in 30 sec, and super easy to operate



HIGH QUALITY POWERTRAIN

Dust and snow resistant motors with high quality bearings



RETURN TO HOME

You can choose from two landing options, land where you are or return to take-off spot. Clever if you are doing water sports!



WEATHERPROOF

Designed for, and tested, in all kinds of weather. Staaker flies in snow, wind and rain!



PERFECTLY STABLE FOOTAGE

3 axis gimbal, with high accuracy, stabilizes the camera at all times




WIND RESISTANCE

Staaker can withstand winds up to 30 kph / 20 mph



ULTRA ACCURATE POSITIONING

Ultra accurate positioning, with concurrent satellite tracking using GPS, GLONASS and SBAS

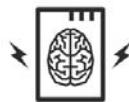

SMART BATTERY TECHNOLOGY

Accurate battery estimation, over-heat protection, safety charge protection, easy re-charging



PRE CALIBRATED


No calibration required! Proprietary smart auto calibration technology

Staaker Drone

Flight Range:	30 km / 19 miles
Max Speed:	80 kmh / 50 mph
Flight Modes:	5
Tracking Accuracy Vertical:	Less than 10 cm / 4 in
Tracking Accuracy Horizontal ⁶ :	Less than 0.5 m / 1.5 ft
Max Distance:	50 m / 165 ft
Min Distance:	3 m / 10 ft
Max Alt:	50 m / 165 ft above tracker
Min Alt:	2 m / 6.5 ft above tracker
Water resistance:	Splash proof
Operating Temperatures:	-20 C / -4 F To 40 C / 104 F
Camera Stabilizer:	3 axis brushless motor
Motors:	900 kv motors with 4.8 kg total thrust


Dimensions (Folded)

Width:	200 mm
Length:	340 mm
Height:	110 mm

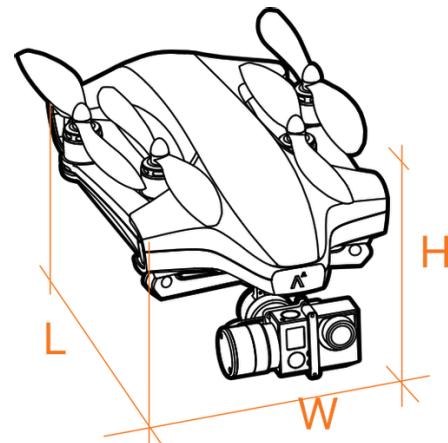

Dimensions (Expanded)


Width:	440 mm
Length:	340 mm
Height:	150 mm

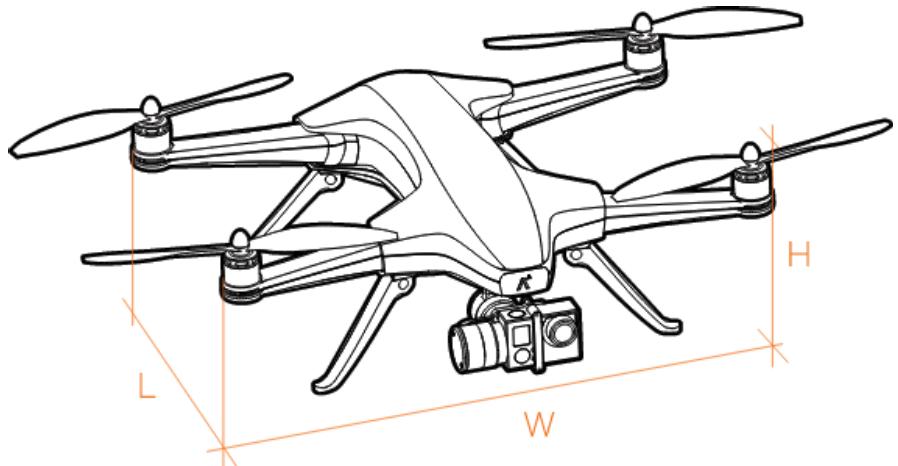

⁶ Short term, -130 dBm, > 12 SVs

Tracker

Transmission Range:	500 m
Frequency Band:	2.4 GHz
Water resistance:	Waterproof
Operating Temperatures:	-20 C / -4 F to 40 C /
104 F	
Dimensions:	
- Width:	55 mm
- Length:	85 mm
- Height:	30 mm
Weight:	85 gram
Battery:	2000mAh 3.7 V LiPo
Battery Life:	24 hours (Charge via
USB)	

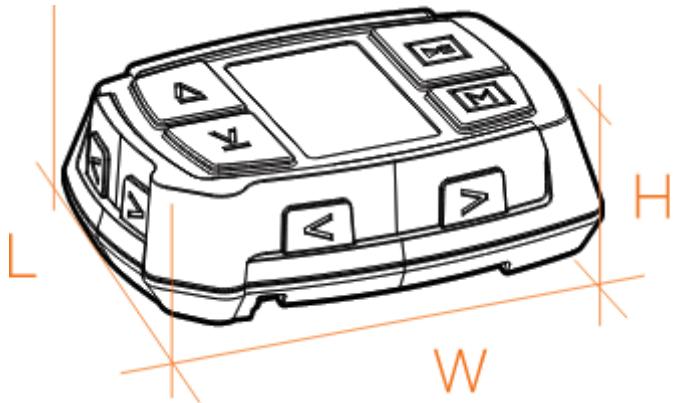


Smart Battery

Name:	STAAKER 1 Intelligent LiPo Battery
Art. nr:	120000
Rated Capacity:	6400mAh, 94.72Wh
Max Charge Voltage:	16.8V
Nominal Voltage:	14.8V
Charging temperature:	0 ~ 45°C
Optimal storage temperature:	-20° ~ 25°C
Optimal environmental temperature:	-20° ~ 55°C

Smart Battery Charger

AC/DC CHARGER	
Model:	XVE-1680500
Input:	100V-240VAC
50/60Hz 2.0A (max)	
Output:	DC 16.8V 5.0A
Art. nr:	130003

CAUTION: Indoor use only!
Do not remove the cover.
No serviceable parts inside.
Read the Staaker user manual before using the battery
charger.

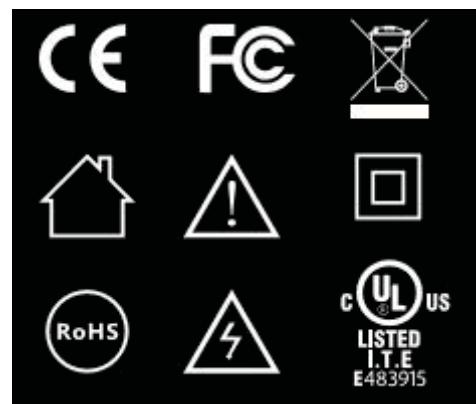

CE, FCC and IC compliance

CE

This product is CE compliant.

Exposure Statement:

This portable device with its antenna complies with FCC RF exposure limits for general population / uncontrolled exposure. The antenna used for this device must not be co-located or operating in conjunction with any other antenna or transmitter.

FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

FCC Modification Statement

Changes or modifications to the equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

Industry Canada Notes

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

There are no restrictions for the use of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

About Staaker

STAAKER1 DRONE

Designed by The Staaker Company© in Norway. Assembled in Norway.



Customer Support

Website: www.staaker.com

E-Mail: support@staaker.com

Address: The Staaker Company AS, Martin Linges vei 25, 1364 Fornebu, Norway



www.youtube.com/staaker



www.facebook.com/staaker



www.instagram.com/staaker

