

# VIVITAR® true wireless earphones

USER'S MANUAL:  
Item HD35-TWS-CL Wireless Earphones




## Specifications


Driver Diameter: 13mm  
Bluetooth Version: 5.3  
Transmission distance: 10m  
Battery capacity (Earbuds): 25 mAh  
Battery capacity (Case): 200 mAh  
Charging input: DC 5V 1A (max)  
Play time: 3-4 Hours\*\*

\*\* Applicable at 50% of maximum volume.  
Results will be lower when volume is higher.

## Charging


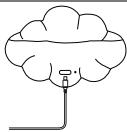


 Insert one end of the included USB charging cable into the charging port on your case.




Insert the other end of the USB cable into a suitable USB charging adapter (not included).

## A Quick Look

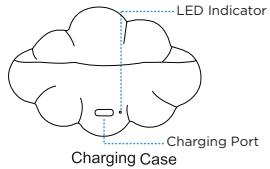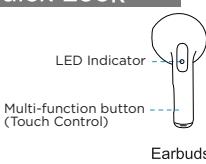


Charging case LED Indicator  
Case Charging: Case Charged: Earbuds Charging: Earbuds Charged:

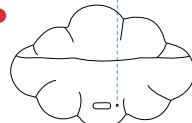


The LED Indicator will flash red while the case is charging and turn solid red when fully charged. If earbuds are charging inside, the indicator will turn blue. When fully charged, the indicator will turn off.


## Bluetooth Pairing

 


1. Remove the earbuds from the case, and they will automatically turn on.

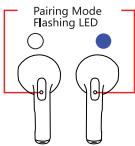

2. In pairing mode, one earbud will flash blue while the other will be off.

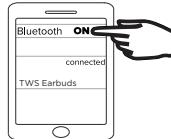

3. On your phone, go to the Bluetooth page in the settings app. Make sure Bluetooth is on before connecting to the available device, "TWS Earbuds".

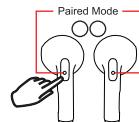


4. Both earbud's LED indicators will stop flashing once paired to your phone.

## Using Your Earbuds: Music Controls

 1. Press either earbud's Multi-function button to pause/play. Press and hold for approximately 3 seconds to turn off.



2. Press and hold the left earbud's Multi-function button to go back to the previous song.



3. Press and hold the right earbud's Multi-function button to go to the next song.



4. Press either earbud's Multi-function button three times to activate voice assistant.

**TWS Earbuds can be used independently. One earbud can be used when the other is off, as long as it is connected to Bluetooth.**



Press twice the left earbud's Multi-function button to reduce the music volume.



Press twice the right earbud's Multi-function button to increase the music volume.

## Using Your Earbuds: Call controls

1. When there is an incoming call, press either earbud's Multi-function button to accept call.  
2. Press either earbud's Multi-function button to end call.  
3. Press and hold either earbud's Multi-function button for approximately 2 seconds to reject call.



## FCC Compliance Statements

FCCID: 2AL9B-HD35TWS

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### FCC Radiation Exposure Statement:

The device has been evaluated to meet general RF exposure requirement.

The device can be used in the portable exposure condition without restriction.

# VIVITAR® true wireless earphones

USER'S MANUAL:  
Item HD35-TWS-SB Wireless Earphones



## Specifications

 
Driver Diameter: 13mm  
Bluetooth Version: 5.3  
Transmission distance: 10m  
Battery capacity (Earbuds): 25 mAh  
Battery capacity (Case): 200 mAh  
Charging input: DC 5V 1A (max)  
Play time: 3-4 Hours\*\*

\*\* Applicable at 50% of maximum volume.  
Results will be lower when volume is higher.

## Charging





Insert one end of the included USB charging cable into the charging port on your case.




Insert the other end of the USB cable into a suitable USB charging adapter (not included).

## A Quick Look

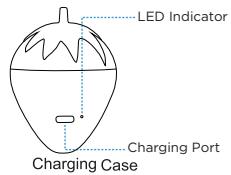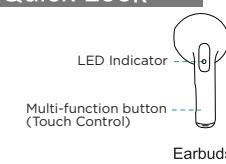


 Charging case LED Indicator  
Case Charging:   
Case Charged:   
Earbuds Charging:   
Earbuds Charged:




The LED Indicator will flash red while the case is charging and turn solid red when fully charged. If earbuds are charging inside, the indicator will turn blue. When fully charged, the indicator will turn off.


## Bluetooth Pairing

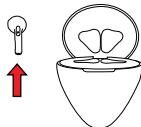


1. Remove the earbuds from the case, and they will automatically turn on.

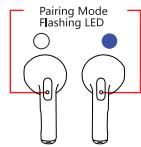

2. In pairing mode, one earbud will flash blue while the other will be off.

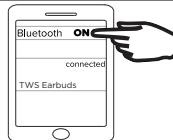

3. On your phone, go to the Bluetooth page in the settings app. Make sure Bluetooth is on before connecting to the available device, "TWS Earbuds".

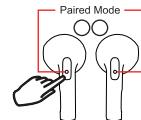


4. Both earbud's LED indicators will stop flashing once paired to your phone.

## Using Your Earbuds: Music Controls

 
1. Press either earbud's Multi-function button to pause/play. Press and hold for approximately 3 seconds to turn off.



2. Press and hold the left earbud's Multi-function button to go back to the previous song.



 3. Press and hold the right earbud's Multi-function button to go to the next song.



4. Press either earbud's Multi-function button three times to activate voice assistant.

TWS Earbuds can be used independently. One earbud can be used when the other is off, as long as it is connected to Bluetooth.



Press twice the left earbud's Multi-function button to reduce the music volume.



Press twice the right earbud's Multi-function button to increase the music volume.

## Using Your Earbuds: Call controls



1. When there is an incoming call, press either earbud's Multi-function button to accept call.  
2. Press either earbud's Multi-function button to end call.  
3. Press and hold either earbud's Multi-function button for approximately 2 seconds to reject call.

## FCC Compliance Statements

FCCID: 2AL9B-HD35TWS

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### FCC Radiation Exposure Statement:

The device has been evaluated to meet general RF exposure requirement.

The device can be used in the portable exposure condition without restriction.

# VIVITAR® true wireless earphones

USER'S MANUAL:  
Item HD35-TWS-CC Wireless Earphones 


## Specifications

Driver Diameter: 13mm  
Bluetooth Version: 5.3  
Transmission distance: 10m  
Battery capacity (Earbuds): 25 mAh  
Battery capacity (Case): 200 mAh  
Charging input: DC 5V 1A (max)  
Play time: 3-4 Hours\*\*

\*\* Applicable at 50% of maximum volume.  
Results will be lower when volume is higher.

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc., and any use of such marks by Saker Technology is under license. Other trademarks and trade names are those of their respective owners.


## A Quick Look

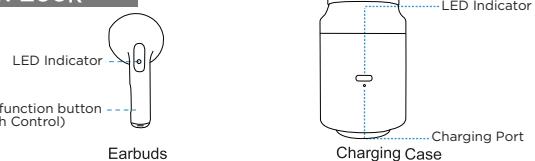

## Charging




 Insert one end of the included USB charging cable into the charging port on your case.



Insert the other end of the USB cable into a suitable USB charging adapter (not included).

 Charging case LED Indicator  
Case Charging: Case Charged: Earbuds Charging: Earbuds Charged:




The LED Indicator will flash red while the case is charging and turn solid red when fully charged. If earbuds are charging inside, the indicator will turn blue. When fully charged, the indicator will turn off.


## Bluetooth Pairing




1. Remove the earbuds from the case, and they will automatically turn on.

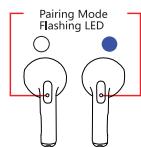

2. In pairing mode, one earbud will flash blue while the other will be off.

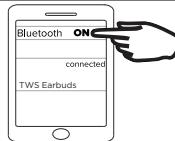

3. On your phone, go to the Bluetooth page in the settings app. Make sure Bluetooth is on before connecting to the available device, "TWS Earbuds".

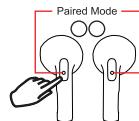


4. Both earbud's LED indicators will stop flashing once paired to your phone.

## Using Your Earbuds: Music Controls

 
1. Press either earbud's Multi-function button to pause/play. Press and hold for approximately 3 seconds to turn off.



2. Press and hold the left earbud's Multi-function button to go back to the previous song.



 3. Press and hold the right earbud's Multi-function button to go to the next song.



4. Press either earbud's Multi-function button three times to activate voice assistant.

TWS Earbuds can be used independently. One earbud can be used when the other is off, as long as it is connected to Bluetooth.



Press twice the left earbud's Multi-function button to reduce the music volume.



Press twice the right earbud's Multi-function button to increase the music volume.

## Using Your Earbuds: Call controls



1. When there is an incoming call, press either earbud's Multi-function button to accept call.  
2. Press either earbud's Multi-function button to end call.  
3. Press and hold either earbud's Multi-function button for approximately 2 seconds to reject call.

## FCC Compliance Statements

FCCID: 2AL9B-HD35TWS

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### FCC Radiation Exposure Statement:

The device has been evaluated to meet general RF exposure requirement.

The device can be used in the portable exposure condition without restriction.