

# User Guide

HK205



## Bluetooth Dongle HK205

### Welcome

Thank you for choosing us. Our bluetooth receiver has a fashionable design, powerful functions, and high compatibility, providing you with true hands-free convenience when you are listening to music! It is your best choice in office and during traveling and driving!

### Bluetooth Wireless Technology


With the bluetooth wireless technology, you can connect the receiver to relative compatible communication devices without cables. The bluetooth wireless connection allows you to use a cell phone without holding it face to the receiver, but the maximum distance between them shall within 10 meters (about 30 feet). The bluetooth wireless connection may be interfered by obstacles (such as walls) or other electronic devices. In some areas, maybe there are some limitations to use bluetooth wireless technology. Please consult your local authority or service provider for details.

1

### Quick Start

Location of controls:

1. sliding switch
2. MFB (Multi Function Button)
3. 3.5mm 4p cell phone plug
4. micro USB

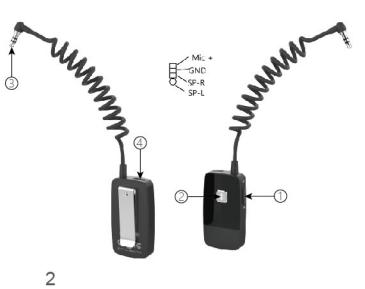

2

Fully charge the receiver before using. For charging details, please refer to "Charger and Battery" in this manual. Meanwhile, choose the compatible cell phone or other bluetooth devices for pairing. For details about pairing, please refer to "Basic Operations".

Tips: Keep the receiver away from your credit card or other magnetic storage media; otherwise, the stored information may be lost due to demagnetization.

3

### Basic Operations

**Power on:** Slide the sliding switch downwards to the bottom with Blue LED light blinks. It will auto enters into the pairing mode.

**Connection:** After the receiver is searched on the cell phone, click the paring name on the screen of cell phone for connection.

**Incoming call answer:** Click MFB once.

**Call end:** Click MFB once during call communication.

**Connection and standby:** Blue LED light remains on.

**Auto reconnection:** After power on, it will auto search and auto connect the previous connected cell phone once.

4

**Finish charging:** Blue LED light remains on.

**Clearing the pairing list:** Slide the sliding switch to ON and connect the receiver to a charging cable. Hold down MFB for about 5 seconds until the red LED light blinks for 3 times.

**Multi-point function:** 1) Connect the bluetooth receiver with cell phone A, and then close the bluetooth function of cell phone A. 2) Connect the bluetooth receiver with cell phone B. 3) Open the bluetooth function of cell phone A again, then the receiver will auto reconnect cell phone A (cell phone needs to have auto reconnection function); or click cell phone A for manual connection. Now the bluetooth receiver has already connected cell phone A and B, realizing the multi-point function of one bluetooth receiver connects two cell phones.

6

**Music play/pause:** Click MFB once to play music and click it again to pause. Blue LED indicator remains on.

**Disconnection:** When the bluetooth function of a cell phone or Bluetooth device is turned off, or the connection is stopped, then the receiver will auto enter into the pairing mode with Blue LED light blinks.

**Power off:** At any status, slide the sliding switch upwards to the top with a beep, and Blue LED light will turns off.

**Compulsory pairing:** At the standby status after connection, hold down MFB for about 1 second to close the bluetooth connection with Blue LED light blinks. It will auto enter into the pairing mode.

**Charging:** Red LED light remains on. Indicator light will flash after inserting charging cable for 5S.

5

### Charger and Battery

Before using any charger to charge this receiver, check whether the specifications of the charger meet requirements. The recommended output voltage of the charger is DC5V+-0.25 V DC, and the recommended output current is 100mA to 500mA. An over-high charging voltage may damage the receiver.

**Warning:** Only use the recommended charger if possible. Other chargers may violate the warranty terms of the equipment and results in danger. If the charging cable is delivered with the receiver, connect the cable to a CCC-certified charger or computer to charge the receiver.

### Charging the Battery

The receiver is embedded with non-removable charging battery. Do not attempt to remove the battery from the receiver; otherwise, the receiver may be damaged. If the receiver is not used in a long time, keep it in a dry and well-ventilated place, and charge the receiver once every two months.

7

When the red indicator blinks, the receiver battery is low. If the receiver continues to work, it may be automatically powered off. At this time, you need to charge the receiver by connecting the cable of the charger to the charging port on the receiver.

1. Connect the charger to an AC power socket.
2. The red indicator is on when the receiver is being charged. If the charging is not started yet, disconnect the receiver from the power socket, and reconnect the receiver again. It takes about 2 hours to fully charge the receiver. After battery charging is completed, the red indicator is off, and the blue indicator is on. At this time, you can disconnect the charger from the power socket and receiver.

3. A fully charged battery can provide about 400 hours of talking time. The actual standby time may vary with different settings, use methods, and environment.

8

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

10

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

11

### After-Sales Service

We provide the "repair, replacement and return warranties" ("3Rs-Warranty") service to all products strictly according to national laws and regulations, and the warranty period is one year. We do not directly provide the return and replacement services. If you find any quality problem when using our products, please contact your local distributors as soon as possible for timely replacement. The after-sales service is not provided for the following cases:

1. The fragile label is altered or torn up.
2. The product is damaged due to contact with liquid or water.
3. The cover or other components of the product are seriously distorted due to external forces.
4. The product is damaged due to improper operations or storage.
5. The product is damaged due to an accident or negligence.
6. The product is damaged due to commercial use of the product in abnormal conditions.
7. Any other situations similar to the preceding ones.

12

### Tips

1. To extend the service life of the battery, you are advised to charge the receiver at least once a month.
2. Please use the charger provided by company to charge the receiver. Use of other low-quality chargers may bring about dangers.
3. DO NOT use the receiver when sleeping; otherwise, the receiver may be damaged or cause injuries to you.
4. Keep the receiver away from kids. Small components of the receiver may cause suffocation or other injuries to kids.

13

### Nationwide Warranty Card

#### Warranty Conditions

Our company's warranty period is one year, if you found any problem when using, please contact your local dealer for timely after-sale deal.

The following situations are without warranty:

1. If no warranty card and valid invoice
2. Over the validity of warranty period
3. Damage caused due to improper use and maintenance
4. Non-authorized repairer had dismantled
5. The labeling information on the warranty card is inconsistent with the goods
6. Damage due to force majeure

14

Note: In accordance with the warranty card instructions, are under normal use, fault due to quality problems or caused by the product itself and in the warranty period, our company will be responsible for giving free warranty service.

Customer Name: \_\_\_\_\_

Contact number: \_\_\_\_\_

Address: \_\_\_\_\_

Product Type: \_\_\_\_\_

Purchase Date: \_\_\_\_\_ Year \_\_\_\_\_ Month \_\_\_\_\_ Day \_\_\_\_\_

Invoice Number: \_\_\_\_\_

Maintenance records: \_\_\_\_\_

15

### Troubleshooting

Problem Description	Cause	Solution
Power on function is failed.	The battery is exhausted.	Use the charger to fully charge the battery.
Charging function is failed.	The power switch is not in the right position.	Slide the power switch again.
Power off function is failed.	The charging port is not properly connected.	Reconnect the charging port.
The receiver cannot be searched or pairing fails.	The receiver program is in error due to an incorrect operation.	Use the charger to charge and reset the receiver.
	The receiver does not enter into the pairing state.	Enable the receiver to enter into the pairing state.
	The bluetooth application of the cell phone is in error.	Close the cell phone and start again to pair the cell phone with the receiver.

9