


Essos True Wireless Auto Pair Earbuds w/Case

Instruction Manual

XO-9568-3

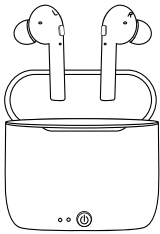

| 01

Hello! This is your instruction manual, to help create the best possible experience with this cool product.


Safety Precautions:

1. Please follow the rules described in this manual closely to ensure your safety.
2. Before using the earbuds, we would strongly encourage you read this manual.
3. Do not modify, repair or dismantle the earbuds or power bank.
4. Do not use any liquids to clean the products.
5. Do not use the earbuds near water, or intense temperatures.

| 02

Included Contents:

- | | | |
|--|--------------------------------------|----------------|
| Earbuds | Power Case | Charging Cable |
| 1. Microphone/Earbud LED | 5. Charging case LED (Case charging) | |
| 2. Multi-function button | 6. Power case charging button | |
| 3. Ear tips | 7. Micro-USB input | |
| 4. Charging case LED (Earbud charging) | | |

 

| 03

Charging:

1. Charging the earbuds
 - Place the earbuds securely into the power case. Make sure the earbuds are securely placed into the case.
 - Press the power case charging button(6). The LED on the case will turn BLUE. The LED on the earbuds will turn RED.
 - The LED on the Earbuds turns BLUE and the LED on Case will turn off when the earbuds are fully charged.
 - You'll hear a beep prompt when the earbuds need charged. The Earbuds will play audio at max volume for 2hrs.

| 04

2. Charging the power case

- Use the provided Micro USB Charging Cable to connect to an adapter or computer to charge the power case.
- When charging the power case the LED will flash RED. The LED will turn solid RED when the case is fully charged.

Pairing Both Earbuds:

1. Pairing: First time

- Remove both earbuds from the power case, you'll hear a voice prompt saying "Power On".
- Once you hear both earbuds beep the earbuds are now synced to each other. If done successfully the Main earbud will flash Red & Blue while the Secondary Earbud slowly flashes Blue.

| 05

2. Connecting to Bluetooth

- Go into your Bluetooth options and select the pairing name "Essos Earbuds".
- If done successfully you will hear the voice prompt "Connected". Both earbuds will slowly flash Blue.
- You can now enjoy your favorite Audio.
- Previously connected earbuds will connect automatically after they're powered ON.
- If you don't connect to the earbuds within 3 minutes the earbuds will automatically power OFF.

3. Power ON

- Take out your earbuds from the charging case or press and hold the multi-function button for 3 seconds. You'll hear the voice prompt "Power ON".

4. Power OFF

- To turn off your earbuds place them both back into the power case.

| 06

- You can also power off your earbuds by holding the multi-function button on both earbuds until you hear the voice prompt "Power Off".

5. Calling

Answering/End Call:

- Press the multifunction button once to answer an incoming call, and again to end the call.

Reject a Call:

- Press and hold the multifunction button to reject an incoming call.

6. Activate Voice Assistant:

- Double press the multifunction button, you will hear a beep prompt to indicate that your voice Assistant/Siri is "Activated" and waiting your commands.

| 07

7. Playing Audio

- Press the Multi-function button on the Right or Left Earbud to play/pause your audio.
- If you want to change the song or volume you must use the connected device.

Resetting your earbuds:

- If you're having trouble pairing your earbuds please turn off your Bluetooth.
- Place both earbuds back into the charged power case.
- Now remove the earbuds and follow the instructions under "Pairing Both Earbuds".

Single Earbud Usage:

1. Pairing for the first time
 - Take out the earbud from the charging case. You will hear a voice prompt "Power On" and the earbud will flash Red & Blue.

| 08

front side

- Open your Bluetooth options, Turn on Bluetooth, and select the pairing name "Essos Earbuds".
 - If done successfully you will hear the voice prompt "Connected". The earbud will slowly flash Blue.
 - If you would like to sync the earbuds together, simply remove the other earbud from the case. The earbuds will automatically pair together.
2. Power ON/OFF
- Power ON: Take out your earbud from the charging case. You'll hear the voice prompt "Power On".
 - Power OFF: Place your earbud back into the charging case or press and hold the multifunction button for 5 seconds.

| 09

3. Once the earbud is successfully connected with your device, you can listen to audio.
4. Answer/End calls: Press the multi-button once to answer an incoming call, and again to end.
5. Reject a call: Press and hold the multifunction button to reject an incoming call.
6. Activate Voice Assistant: Double press the multifunction button, you will hear a beep prompt to indicate that your voice Assistant/Siri is "Activated" and waiting your commands.
7. Music: short press the button to pause the music or play the music.

| 10

Earbud Tech Specifications

Function	Specifications
Charging time	1.5 hrs (from 0-100)
Play time	2 hrs
Bluetooth Range	10m

Power Case Tech Specifications

Function	Specifications
Charging time	2 hrs (from 0-100)

The Power Case can charge the earbuds 4x (from 0-100).

Mobile devices cannot connect with the earbuds if the earbuds are not in pairing mode.

If the earbuds are unable to connect to a mobile device via Bluetooth for 5+ minutes, the earbuds will power off automatically.

| 11

Troubleshooting

Issue	Reason	Solution
Start-up failure	low battery	charge earbuds and power case
No sound when paired	wrong pairing	re-pairing
No indication during charging	Earbuds aren't securely inserted	check earbuds, insert and try again
Shut down automatically	low battery	charge earbuds and power case
Noise during calls	mobile device is too far away	bring mobile device closer
Low volume	earbuds are turned down low	adjust earbuds to comfort & sound
Signal interrupted	environment disturbance, distance too far from mobile device	bring the mobile device closer to the earbuds

| 12

Safety Precautions

WARNING—When using this product, basic precautions should always be followed, including the following:

1. Fully read the instructions before using the product.
2. The unit will only achieve full performance after 2 or 3 completed charge and discharge cycles.
3. Do not overcharge your case. The unit may become hot under excessive use. Remove your case once it is fully charged. Never charge your case for more than 7 hours at a time.
4. To reduce the risk of injury, close supervision is required when the product is used near children.
5. Do not expose the device to moisture.
6. Do not use the device in excess of its output rating. Overload outputs above the rating may result in a risk of fire or injury.
7. Do not use the device if damaged or modified.
8. Damaged or modified batteries may exhibit

| 13

unpredictable behaviour resulting in fire, explosion or risk of injury.

9. Do not disassemble the device. Take the device to a qualified technician if service or repair is required. Incorrect reassembly may result in a risk of fire or injury.
10. Do not expose the device to fire or excessive temperatures. Exposure to fire or temperatures above 212°F/100°C may cause explosion.
11. Have servicing performed by a qualified repair person using only identical replacement parts.
12. This will ensure that the safety of the product is maintained.

FCC Statement

- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- This equipment has been tested and found to comply with the limits for a Class B digital

| 14

device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

| 15

Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

MADE IN CHINA

| 16

back side