


88.9 mm

Recycled ABS Fast Wireless Charging Pad

Instruction Manual
XY-PR019

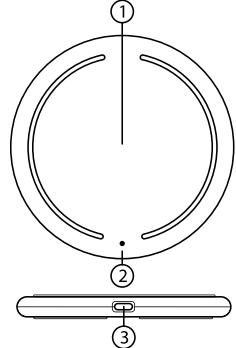

Functions:

- 1. Wireless Charging Surface
- 2. LED Indicator
- 3. Type-C Input Port

What's included:

- 1 x Wireless Charging Pad
- 1 x USB to Type-C Charging Cable
- 1 x Instruction Manual

Tech Specifications

- Type-C Input: 5V/2A; 9V/2A
- Wireless Output: 5W/7.5W/10W

Instructions:

1. Wireless Charging Mobile phones and other electronic devices:

- Using the included Type-C to USB charging cable, insert the USB-A port of the cable into a certified USB AC adapter and Type-C tip Type-C Input(3).
- LED indicator(2) will glow BLUE & RED for 4 seconds, then glow RED when the device is in wireless charging standby.
- Place the wireless charging supported mobile device on the wireless charging surface(1), LED will glow BLUE when device is charging.
- Phone will begin to charge automatically.
- Once fully charged remove the device.

Note: When wireless charging, if the LED indicator flashes BLUE the device is either NOT a wireless charging device or there is an object between the the device and charging surface interfering with the charging process.

SAFETY PRECAUTIONS:

- WARNING-When using this product, basic precautions should always be followed:
 1. Read all the instructions before use.
 2. Never store or use this product in temperatures below 32°F(0°C) or above 115°F(45°C).
 3. Do not overcharge your phone. The unit may become hot under excessive use. Remove your phone once it is fully charged. Never charge your phone for more than 7 hours at a time.
 4. To reduce the risk of injury, close supervision is required when the product is used near children.
 5. Do not expose the device to moisture.
 6. Do not use the device in excess of its

206.3 mm

output rating. Overload outputs above the rating may result in a risk of fire or injury

7. Do not use the device if damaged or modified.
8. Do not disassemble the device. For repairs, seek a qualified service professional. incorrect reassembly may result in a risk of fire or injury.
9. Do not expose the device to fire or excessive temperature. Exposure to fire or temperatures above 104°F may cause explosion.
10. Ensure that qualified service professionals use only identical replacement parts to ensure product safety.
11. Attachments on the back of your phone can impede the effectiveness of the wireless charger, and lead to overheating.
12. Please remove any attachments from the phone before charging on this device, attachments can interfere with wireless charging and lead to over heating.

interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

FC

MADE IN CHINA



MIX

Paper from
responsible sources

FSC® C170910

