



M8 KARAOKE TREASURE INSTRUCTION

Mini Karaoke Player



SHENZHEN ELECTRONIC TECHNOLOGY CO., LTD

DIRECTORY

Product Introduction ----- 3

Directions For Use ----- 4

 
Conventional Condition And Processing --- 7

Charging Instructions----- 8

Product Parameters----- 8

After That ----- 9

Product Introduction

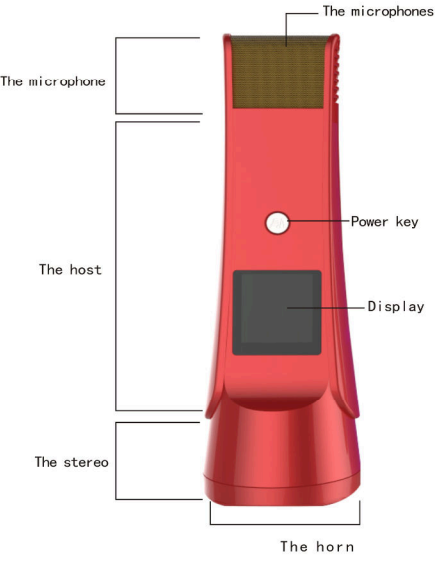

For T - FLASH card slot
and a plug on the back (not shown here, please forgive)

Directions For Use

(1) ON/OFF

 
- ①ON: Long press the "power key" 3 seconds to turn it on
- ②OFF: Long press the "power key" 3 seconds to turn it off

(2) Interface specification



(3) Functional specifications

- ① Bluetooth: click on the bluetooth icon into the bluetooth interface
- Step1: Click on the "search the bluetooth device" search nearby equipment.
- Step2: Find need matching device, click on the link, tip need to match, click ok
- Note: equipment need to open the bluetooth function and is set to visible to K song search
- ②The bluetooth music: Click on the bluetooth music icon to go, if there is no connection to connect to a bluetooth device is need to enter, otherwise the prompt to connect to the bluetooth.



- ③dial: Click dial-up icon into the dial-up interface, if there is no connection to connect to a bluetooth device is need to enter.



- The contact list
- The talk
- backspace

- ④Music player: Click the icon to enter the music player interface, if there is no insert memory card you will need to insert memory card to enter



Click on the "play/pause music", Click on the "next" and "previous" switch on A/the next song.

Note: when insert the memory card, karaoke treasure will be generated in the root directory of memory card "My Music" folder to save Music files, put Music files in the folder after the Music player will read the Music folder

- The remote picture: click on the icon to load camera, if there is no connection to connect to a bluetooth device is need to enter, and need to commissioning of the equipment installation "notice" bluetooth application to use.



 
- ⑥FM radio: Click the icon to enter FM radio interface.




By clicking on the "radio" button on/off the radio function. Click on the "volume" and "channel" control the size of the volume. Click on the "next" and "previous" to jump to the next channel on channel one. Click on the "search" automatically search for all channels and save. Click on the "channel" into the channel list, choose the channel. Click on the "return" return to the main menu

140MM高x70MM宽


- ⑦Call records: Click the icon to enter dialing interface, if there is no connection to the bluetooth device is unable to use this feature, please connect on bluetooth



 
- ⑧Setting: click on the icon to enter setup interface



 - ⑨Scene mode: click on the icon into the scene mode setting.



- ⑩The video player:

 

Note: when insert the memory card, karaoke treasure will generate "Videos" folder, in the root directory of memory card to store video files, put video files in the folder after video player will read the video folder

- ⑪File management: Can view the memory card to store the files, and to copy and paste files, delete etc.



- ⑫karaoke: To use this feature need to insert memory card, boot after insert the memory card will need to restart the equipment to normal use.



Test songs

Click finish or stop the recording into the audition interface, after the audition can choose whether to save this recording.

(save the recording will be under the root directory of memory card "Karaoke_Records" folder)

Conventional condition and processing

The fault phenomenon	The cause of the problem	Elimination method
The display is not bright	The battery is too low Charging line is not good	charging Check the connector or charge
There is no sound from the microphone	Power supply is not open Voice volume is not good	The power to open Adjust sound volume
The microphone no reverberation effect	Reverberation switch is not set	Adjust reverberation switch
Bluetooth can't connect	Bluetooth is too far There are obstacles Connected to another phone	Shortening the distance between the two Avoid obstacles Disconnect the connected phone
Can't take pictures	Mobile phone has no camera Did not open the bluetooth notice	Connect other devices Open the bluetooth permissions notice

Charging Instructions



- 1 when the battery power is low, the product will automatically shut down;
- 2 with accessories USB charging line, connection standard cell phone charger USB interface, the screen lights up, and charge the picture (left), the surface is in charge;
- 3 normal charging 2 hours, charging is completed, the screen shows the battery full status;
- 4 can the normal continuous use 5-8 hours

Product parameters

Board type	K song treasure motherboard	memory	32 bit + 32 bit
The fuselage characteristics	Bluetooth karaoke	The I/O	5 pin standard 1000 USB
Machine core size	25.5 * 70 mm	WIC	There are
The home screen parameters	1.44 inches TFT / 128 * 128 resolution	The speaker	52 mm diameter 8 w loudspeakers
Battery capacity	1800 mah	CNN	There is no
The keys	T + (POWER)	T - Flash card	support
Touch screen	Capacitive touch screen	Headphone jack	There is no
K song	Bluetooth/local support/music	MP3	support
K song working frequency	2.4 G	The MP3	support
K song power output	8W	Voice volume	Interface to adjust
Bluetooth distance	10W to 15W	Music volume	Interface to adjust
The bluetooth music support	support	The microphone reverberation	Interface to adjust
Remote party photos	Support bluetooth push	The radio function	support
The Basic Function	support	The Application	support
Time to show	support	Fun time prompt	support
Bluetooth phone	support	Language shows	Chinese/English
Bluetooth synchronization	support		
The phone book	support		
Bluetooth transmission data	support		
The bell prompt	support		
Mode of operation	Concise single hand operation	The Human-computer interaction	
set	including: clock, ring tones, volume, Reset password, display language, setting in the default/English		
Built-in language type			
		Network And Transmission	
bluetooth	3.0 + EDR	USB charging	support

After-sales Service Description

Respect of customer,

Thank you very much for using our products, in order to protect your rights, clear sales agents and the company shall bear the product maintenance, replacement, return (hereinafter referred to as the "three guarantees") responsibilities and obligations, please read the following items:

1. The product warranty card "is my company to provide warranty for its products after-sales service free of charge necessary documents;
2. According to the principle of the sales who is responsible for 3 packets, proof of product quality problems such as "product warranty card" contact the dealer, the dealer to provide services to customers, our company is the dealer to provide services;
3. The company promises, since the date of sold (date in the date of effective paper, hereinafter the same)
- Within seven days from the occurrence quality problem, customer can choose to return, replacement or maintenance; Within 15 days from the date of sold 8 - appear quality problem, customer can choose to return, exchange or maintenance; Within a year from the date of sold, appear quality problem, customer can free maintenance; Products enjoy life-long maintenance quality problems more than warranty period (the after-sales services charge components materials); Customers with dealers when buying, please carefully fill in "product warranty card";

4. The following situations do not enjoy three packs of service:
- (1) more than 3 packets of period
- (2) not use according to the requirements of product instruction for use, maintenance, custody and cause damage
- (3) not dismantle the mender assumes 3 packets of dynamic damage;
- (4) no "product warranty card"
- (5) the content of the journal of product warranty card with the product id or altered
- (6) damage caused by force majeure;

5. Above each item belongs to our company has the right to explain this

Product Warranty Card

Product model : M8

Purchase date : _____

Agent : _____

Invoice date : _____

Telephone : _____

Customer name : _____

Zip : _____

Product name: K song treasure models: M8
Manufacturer: shenzhen electronic technology co., LTD
Address: shenzhen longgang district pinghu moths and light industrial park ridge times 3 building 3 floor

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.