

Do Not Return Card



IMPORTANT



PLEASE DO NOT RETURN TO STORE

If You're Having Trouble, We're Here to Help!



 
Call us 24/7 at 1-855-292-4087

E-mail us at alsupport@sakar.com or visit us at alteclansing.com



WELCOME

Thank you for purchasing an Altec Lansing product. Download our App to unlock all the features our products have to offer!

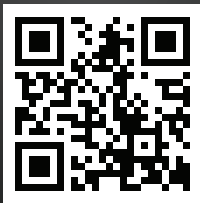



JUST LISTEN.





STIX
Active Noise Cancelling Earphones

MZX1041

QUICK START GUIDE




  In the Box

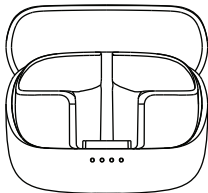


STIX
Active Noise Cancelling Earphones

 Small and Large
Ear Cushions

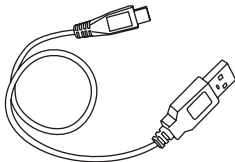

USB-C Charging Cable

 A Closer Look

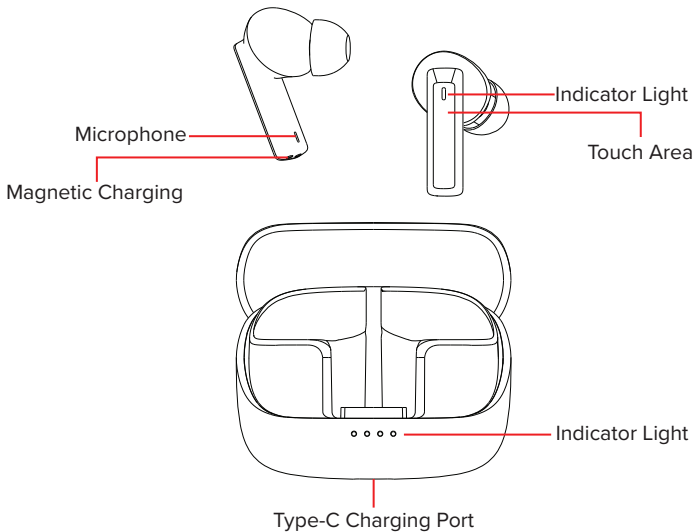


Charging



Place the earbuds into the charging case. Insert one end of the included charging cable into the charging port of the charging case. Insert the other end of the USB cable into a suitable USB charging adapter (Not Included).

 While charging, the case's Indicator Light will flash white. When fully charged, all four indicator Lights will be illuminated.



Note:

Make sure that both the earbuds and charging case are fully charged before first use.



1-2 Hours
Full Charge



CAUTION

Battery Warning

- This device is equipped with an integrated lithium ion battery. The battery cannot be replaced. Do not attempt to remove the battery from the device.
- Do not dispose of in fire or expose to excessive heat.
- Do not crush, puncture, incinerate, or short circuit external contacts.
- Please recycle or dispose of the battery properly. Contact your local recycling facilities and/or the manufacture for further information.



For the first use, remove the earbuds from the case and any stickers (if applicable) covering the earbuds' charging contacts. Next, place the earbuds back into the case and remove them from the case. This will activate the earbuds.

To turn off the earbuds, place them into the case. To turn on the earbuds, remove them from the case.

NOTE: You can manually turn on the earbuds. Press and hold both earbud's touch area for approximately five seconds to power on.

If the LEDs do not turn on when the earbuds are removed from the case, charge the case then try again. In the event that the earbuds do not pair together, perform the Manual Reset function.

REGISTER YOUR PRODUCT

**To receive news, exclusive deals, OTA or
firmware updates, warranty information and
more please register your product at**

alteclansingsupport.com





follow us

@altec Lansingofficial



follow us

#altec Lansing



follow us

@altec Lansingofficial

12 Month Limited Warranty

All Altec Lansing products come with
12 month limited warranty
from the date of its original purchase

24 Hour Customer Support

We love our customers, and we care
about your experience with Altec
Lansing. If you need
assistance, please call us at
1.855.292.4087

 
or e-mail alsupport@sakar.com
www.altec Lansing.com

Altec Lansing Edison, NJ 08817


Bluetooth Pairing



1. Take the earbuds out of the charging case and they will turn ON.

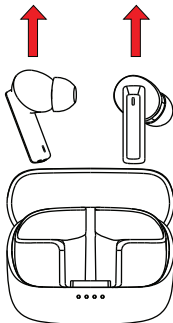

 2. Go to the Bluetooth settings menu on your phone. Make sure Bluetooth is turned on. Connect to the device listed as "AL STIX"

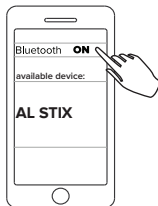

Touch Button Functions



Press:

- ▶▶ Play and Pause (Left or Right Earbud)
- ☎ Answer/End Call (Left or Right Earbud)

Press and Hold (2 Seconds):

- ⓧ Decline Call (Left or Right Earbud)
- Turn ON/OFF ANC (Right Earbud)
- Turn ON Transparency (Right Earbud)
- Turn ON/OFF Low Latency Mode (Left Earbud)

Press Twice:

- ▶▶ Next Track (Right Earbud)
- ◀◀ Previous Track (Left Earbud)

Press Three Times:

- Decrease Volume (Left Earbud)
- + Increase Volume (Right Earbud)

Press Four Times:

- ☎ Voice Assistant (Left or Right Earbud)

**To use a phone's voice assistant, you must have a phone that is compatible.*

 
**Your wireless earbuds will not work with your phone's voice assistant if the assistant is not first enabled within the settings on the phone. For more information, see your phone's user manual.*

**You must be within Bluetooth® range to use your phone's voice assistant via your wireless earbuds.*

Manual Reset



Only do this function when experiencing issues that are not solved by turning the earbuds ON and OFF or placing them back into the case.



Press Five
Times

1. Connect the earbuds with your phone.
2. Press the touch area on both the left and right earphones five times.
3. Once successfully reset, the earphones will power OFF.

For additional user materials and warranty information, please visit alteclansing.com

Notes



**To use voice assistant, you must have a phone that is equipped with a voice assistant.*

**You must be within Bluetooth range to use voice assistant via your Wireless Earbuds.*

Your Wireless Earbud's voice assistant feature will not work if a voice assistant is not first enabled within the settings on the phone. For more information, see your phone's user manual.

For additional user materials and
warranty information, please
visit alteclansing.com

Notes



Notes





FCC ID:2ALHZNBC90

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FOLLOW US ON



#myalteclansing