Wireless headset **User Manual** 100MM Follow Your Heart CE NOHS © \$ 11 12 WORLDS

Product Description


Version: Bluetooth V4.1 Charging method: Power supply with output of DC5V 150mA Battery type: Rechargeable lithium-ion polymer battery Bluetooth power class: Class 2 Profile supported: HSP/HFP/A2DP/AVRCP Talk time: Up to 4 hours Listen time: Up to 3.5 hours Standby time: 120 hours

- Play audio file from a mobile phone laptop or other Bluetooth device connected with it. (AV dongle: General BT dongle)
- Play audio files from a PC after connected with its BT dongle, and also support wireless internet voice chat through QQ, MSN and SKYPE.

Reset the headset to factory settings C

Press and hold the volume "+"and volume "-" button for 3 seconds under pairing mode until the blue light flashes 2 times.

A Headset overview

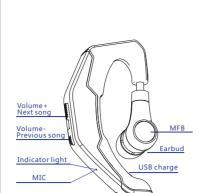

NOTE: The headset will power of automatically ss and hold 3 minutes connection

B Pairing steps

Under power-off status, press and hold the MFB until the indicator light flashes red and blue alternatively, then the Headset enters the pairing mode;



Turn on Bluetooth on your mobile, find the Model No. of the Headset, and connect. Turn off Bluetooth of the first mobile, and repeat the step above to connect with the second mobile

Wearing





Insert the ear bud, and rotate the headset to achieve an optimal fit.

Important features



Power on - Press and hold the multifunction button (MFB) for 2s until the BLUE Power off - Press and hold the MFB for 3s till the RED light on for 2s;



Call answer - Answer by your phone or press the MFB, or say "yes"



Call end - End by your phone or press the MFB;



and hold the MFB for 2s, or say "no

Last number redial - Quickly tap the MFB twice to redial the last dialed ph



Play music - Press the MFB to play/pause music under music playing status

- Reorient or relocate the receiving

equipment and receiver.

receiver is connected.

compliance

radio/TV technician for help

- Increase the separation between the

-Connect the equipment into an outlet

on a circuit different from that to which

-Consult the dealer or an experienced

Changes or modifications not expressly

15 of the FCC Rules. Operation is subject

approved by the party responsible for


could void the user's authority to

This device complies with Part

to the following two conditions:

(1) this device may not cause harmful

operate the equipment.

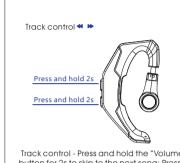

Track control - Press and hold the "Volume +" button for 2s to skip to the next song; Press and hold the "Volume -" button for 2s to play the previous song;



Volume adjust - Press the "Volume +" or

"Volume -" button to increase or decrease the volume.

Volume adjust

NOTE: Not applicable to headset with only single language

Language switching ①

Double tap Volume "+" button to switch between EN and CN language prompt unde pairing mode (indicator light flashes red and blue alternatively).

· Use and keep the Headset under ambient

· Don't throw it in case product damage caused; · Don't disassemble, repair or alter the Headset:

· Don't clean the Headset with chemical solvent; · Use a USB charger of DC5V to charge the Headset if necessary;

· Don't discard the Headset at random, or put it into fire or high temperature environment (60°C/140°F) in case of danger.

Headset is paired.

You will hear "power on" when the Headset is powered on. You will hear "power off" when the Headset is powered off. You will hear "connected" when the

You will hear "low battery" when the Headset is in low power status.

Service Regulations:

Service Regulations:

1. Notice: Please carefully read the User Manual before using the Headset. 2. Guaranteed replacement: Within the guaranteed period (7 days after purchasing), replacement or free repairing may be offered for product malfunction caused non-artificially under normal use, provided that the specific malfunction is tested and confirmed. Contact the authorized distributor for replacement handling. 3. Warranty: Within the period of warranty, free repairing service may be offered for malfunction caused non-

artificially under normal use (one year warranty for the headset itself). 4. Repairing charge: One to three years after purchasing, the product may be repaired if malfunction occurs, but parts cost, transport freight and labor cost shall be assumed by the customer. 5. The following circumstances are not covered by the free warranty services, but we provide paid services: ① The period of warranty expires;

② The warranty card is altered, or serial number inconsistent:

3 Product damage caused by unforeseen factors or artificially; ④ Invalid warranty card but valid invoice (unless product may be certified within the warranty period); (5) Malfunction or damage caused by

force majeure, such as earthquake, fire, flood, or thunder-strike; 6 Disassemble, repair or alter the product without our permission.

Explanations:

1. The purchasing date shall be subject to the date written in this manual or the invoice, or subject to the production date if no valid certificate is provided. 2. The subjective differences such as the tune and tone are not acknowledged as the quality problem

3. The product shell, user manual and the package are not covered by warranty. 4. Headset stopped production shall only be provided with repairing service.

5. We will not undertake any liability for undertakings made by the distributor but not our company.

Dealer inform ation	Product model	Dealer name	
	Product sequence number	Contact phone	
User inform ation	User address	Sales date	
	Comm unication address	Contact phone	
	E mail		

In order to safeguard your rights and interests, please fill in and take care of it as the certification of maintenance.

Waste electrical and electronic device This product or products with symbols as follows should not be disposed with other family wastes when such products are end



NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference

residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions may cause harmful interference to radio

communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is

interference, and (2) this device must accept any encouraged to try to correct the interference by one or interference received, including more of the following measures: interference that may cause undesired operation.

蓝牙耳机专用说明书 享受自由 追寻你的心 CE KOHS O CO III


产品描述

蓝牙版本: V4.1

充电方式:电源适配器输出(DC5V150mA) 电池指标:高性能锂聚合物锂电池 蓝牙指标:Class 2 支持协议

Headset/Handsfress/A2DP/AVRCP 持续通话时长:约4小时 持续播放时长:约3.5小时 待机时长:约120小时

- 该款蓝牙耳机能接收来自手机、笔记本电脑及 其他蓝牙设备的音频。(AV DONGLE:一般 DONGLE)
- 与PC蓝牙DONGLE配对连接后:可以播放电 脑的各种音频也可以用来语音聊天,实现无线 QQ, MSN, SKYPE.

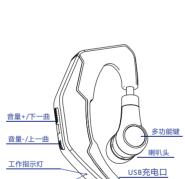

A 产品示意图



 
B 配对示意图



关机状态下长按多功能键约3秒至红蓝灯交替闪 烁,蓝牙耳机处于配对模式;注:如未连接手机 蓝牙耳机将在3分钟后自动关机。



打开手机蓝牙搜索"该蓝牙设备型号"并点击 连接。 关闭第一台手机的蓝牙功能,重复上述步骤可 € 佩戴示意图



首先将耳机轻轻塞入耳朵,然后将耳机调整到舒 适位置即可。



开 机-长按多功能键约2秒,蓝灯跳闪三下 关 机-长按多功能键约3秒,红灯长亮2秒;



或 "YES" 语音接听



按手机挂断键挂断或单击耳机多功能键挂断

挂断电话へ

末码拨号♥

双击多功能键针对最后一个拨出的电话号码 进行重拨



在音乐播放状态下单击多功能键可进行播放



长按"音量-"约2秒进入上一曲



恢复出厂设置 🖰



在配对状态下长按"音量+"和"音量-"3秒, 红蓝灯常亮2秒,即可恢复出厂设置



注意事项

·请在常温环境中存放以及使用本产品; ·请勿丢掷,避免因跌落造成产品损坏; ·请勿自行拆解、修理和改造本产品; ·请勿使用化学溶剂擦拭本产品 ·如有需要,请使用输出电压DC 5V的USB电充 电器来充电 ·请勿随意丢弃,或置于高温(温度高于60度)

·耳机使用充电电池,在首次使用蓝牙之前,必 须给电池充足电。 ·将充电线插头插入耳机充电接口。 ·充电时,红灯长亮。 ·耳机充足电,大约需要2-2.5小时。

·充满电后红灯熄灭,蓝灯长亮。

与火中,以免引起危险!

·当开机时,耳机会自动语音提示: "开机"。 ·当关机时,耳机会自动语音提示: "关机"。 ·当配对成功时,耳机会自动语音提示: "已连 ·当电量低时,耳机会自动语音提示: "电量

·当来电时,耳机会语音报读来电号码。

售后服务条例

配对第二台手机。

1、咨询服务:用户在使用产品前,请仔细阅读 本产品的使用说明书 2、包换服务:包换期内(自购机之日起七日

内),正常使用出现了非人为故障,请保持产 品、配件和包装的完整(若外观不损坏、做保 修处理)经检查确认故障后,可选择换货或维 修,用户可到当地授权经销商处联系并处理。 3、保修服务:保修期内,正常使用出现的非人 为故障,均可享受免费保修服务(主机一年内 免费保修,若人为损坏,做收费维修处理)。 4、收费维修服务:产品自购机之日起一年到三 年内,出现故障可收费维修,用户需支付维修

所产生的元器件费、运输费及人工费。

5、以下情况不在三包范围内,本公司提供有偿 服务 ①超过三包期限

②涂改三包凭证,或序列号与产品本身不符 ③意外因素或人为导致的产品损坏(如:未 按使用说明书操作、维护或保管、安装错误造 成的故障,接入不合适的电源、进水、摔坏

④无效三包凭证和有效发票(能证明产品确属 服务期内者除外)。 ⑤因不可抗拒如地震、火灾、水灾、雷击等导

致的产品故障或损坏。 ⑥未经本公司许可,擅自拆卸、修理或改装。

公司不承担任何责任。

关于售后服务的说明 1. 购机日期以本凭证或购机发票为准,不能提

供有效证明的,以生产日期为准。 2、质量问题不包括用户个人对音质、音色等主 观差异。 3、外壳、说明书包装不在保修服务范围内。 4、已停产机型,本公司仅做功能性修复。

5、经销商向您做出的非本公司保证的承诺,本

经销商 信息	产品型号		经销商 名称	
	产品序 列号		联系电话	
用户信息	用户地址		销售日期	
	通讯地址		联系电话	
	畑川州田川			

为了维护你的权益,请你认真填写,并妥善保管,

E-mail

废弃电器和电子设备 本产品或附有如下标示的产品,寿命结束时不 应与其他家庭废物一起处理。



