

H3600 User Manual

Dear customer,

Thank you for purchasing the multifunctional Bluetooth speaker H3600. To ensure correct operation, please read this user manual carefully before operation.

Important Safety Instructions

- ◆ Keep speaker away from water and other liquids.
- ◆ Keep speaker away from any source of heat.
- ◆ Adjust the volume to a suitable level so as to avoid damaging your hearing, or the unit itself.
- ◆ If does not use this speaker for long time, please charge at least once within three month, in order to prevent the lithium battery from causing and damaging because of excessive consumption.

Features

1. Bluetooth Music Play and Mobile Hands-free Function

Bluetooth 4.0 Stereo Music Playing, support mobile hands-free function.

2. Aux In

Work as the external speaker by connecting to the audio source of computer, mobile, PSP/MP3/MP4 etc.

3. Micro SD Card Music Playing

Support the entire MP3/WMA/APE/FLAC coding rate, Micro SD card memory up to 32G

4. FM Radio

Support semi-auto scan the FM channels (87.5MHz-108MHz)

5. Voice Guide

The speaker will voice the current working mode under operation.

6. LED Display

The LED display will show the current working status and time

7. Alarm clock

Time display and Personalized wake up alarm set

Technical Data

Bluetooth Version: 4.0

Impedance: 4Ω

Output : 4.5W x 2

PMPO: 90W

Battery: Built-in Lithium battery 2200 mAh

Support Profiles: HSP、HFP、A2DP

Aux In Jack: 3.5mm

Size: 196*74*70 mm


Net Weight: 651g

FM Frequency: 87.5MHz-108MHz

Package Contents

Bluetooth Speaker, Micro USB Cable, User Manual, 3.5mm audio cable,

Slot and Keys

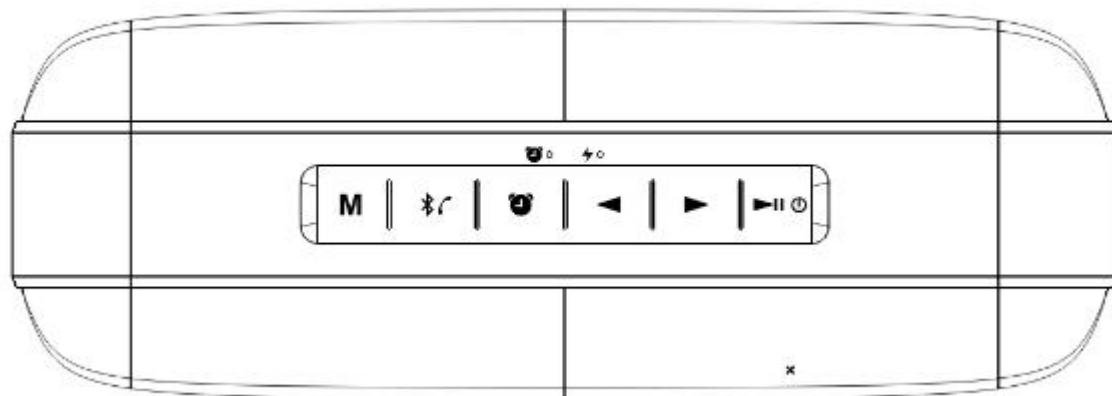

1.M: short press: Change the mode ,Long press: Time set

2.  Bluetooth button: Short press: enter into bluetooth mode/ answer/hang up the call
Long press: disconnect bluetooth / reject the call (no working under other mode)

Double short click: call back the last telephone number

3  Short press:turn on/off alarm, Long press:alarm set.

4.  Short press: Previous song/FM

Long press: Decrease the volume

5.  Short press: Next song/FM

Long press: Increase the volume

6.  Short press: Play/Pause

Long press: power on / off

Indictor light



alarm indictor light:short press alarm button,the alarm and the blue light will turn


on, press the alarm button again, the alarm and light will turn off.



Charging indicator light

Orange light means charging,

Orange light extinguish means full charge

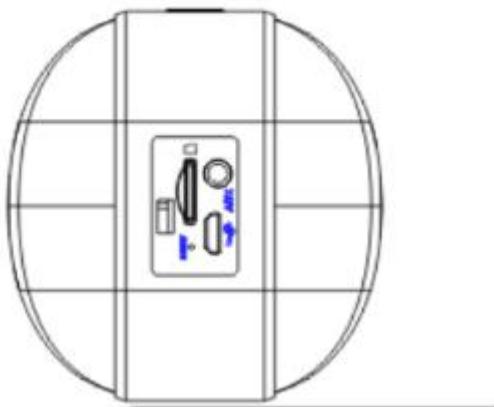

TF card slot

Micro USB /charging

AUX IN port

Quick Start

(1) Power On / Off

Long press the button and hold for 2 seconds to power on /off the speaker.

(2) Short press M button to choose the mode

Short press M button to choose the mode which you want

(3) Song/FM Channel Switching

Under music playing mode, short press the | buttons to switch to the previous / next song. Long press to adjust the volume

Under FM mode, short press the | buttons to switch to the previous / next channel.

Long press to adjust the volume

(4) Pause / Play, Mute / Play

Under the mode of Micro SD card music playing, Bluetooth, short press the button for pause/play.

Under the mode of AUX, FM, short press the  button for mute/play.

Instructions

(1) Bluetooth

Press the **M** button to enter the Bluetooth mode, the LED display will show the icon BL. Now please turn on the Bluetooth function of your mobile/other devices. And start to search for Bluetooth devices, the “**H3600**” will be found, please connect it. The mobile may remind you to input the pairing code. The speaker’s default pairing code is “**0000**”. (The speaker will voice “Device paired” when connecting).

Bluetooth Music Playing

Please turn on the mobile or other devices music player, and speaker will play the selected music.

Mobile Hands-free

Under paired, when phone call comes in, the speaker will ring and the display will show

“CALL”. Please short press the  button to answer the phone, re-press the  button to end up the phone.if long press the button ,reject the call,

(2) Micro SD Card

Inserting the Micro SD Card into the speaker to enter the memory card mode, the speaker will play the Micro SD card music directly. (Speaker will voice “memory card mode”). The speaker support music format at WAV,MP3,WMA,APE,FLAC. Please using the bigger bit rate music for better music enjoyment (for example bit rate at 320kbps)

(3) Aux In

Use the 3.5mm audio cable included to connect the speaker to an audio source (PC, MP3/MP4, mobile phone). Short press the **M** button to enter “**AUX IN**” mode (the speaker will voice “Aux in” mode). The speaker will play the music from the audio source. And short press the  button to play/mute the music.

(4) FM Radio

Press the **M** button to the FM mode (the speaker will voice “FM mode”), The display will show the FM channel, press the  |  buttons for previous/next channel.

(5) Time/Alarm set

Time set :Long Press **M** button to set the time under any mode.when you saw the hour number twinkle,press  |  to choose the right number ,then press **M** to confirm.after that, come to set the minute. **press**  |  to choose the right number also,press **M** to confirm,then time set is ok,

Alarm Set:Long press  button,when you saw the hour number twinkle,press  |  to choose the right number ,then press **M** to confirm.after that come to set the minute. **press**  |  to choose the right number also,press **M** to confirm,then time set is ok,

Note:

Please set the time/alarm within 3 seconds,if you have not any operate within 3 second,the display will back the working mode.

The screen will display the time if you have not any operate within 15 seconds

If you want power **off** the alarm set,please press the  button to turn off direct. If you press others button,there have snooze function ,and will alarm again after 5minutes.total 4 times,then alarm clock turn off.

(6) Charging

The speaker with the 2200 mAh lithium battery, can working for 5 hours in the normal status. If low capacity, the speaker will voice “lower battery”,and the speaker will decrease the volume automatically in order to protect the battery when low capacity. Please charge the battery by USB adaptor immediately. when fully charged, the indicator light will extinguish

Note:

Low battery will affect the music sound quality, Please use the branded good quality 5V 1A adaptor to charge the battery. You can use the Smartphone’s adaptor for charging.

Troubleshooting

1. What should I do if the speaker can not pair with the Bluetooth device and play music accordingly?

Please check the specification/ the manual of the Bluetooth device (your mobile or computer), and see if the device can support the A2DP stereo audio transmission. If yes, please turn on the A2DP stereo mode.

2. What should I do if the Micro SD card can not work?

- (1) Ensure that the Micro SD card is in good condition. Also check that the audio files are the correct formats - MP3/WMA/WAV/APE/FLAC.
- (2) Beside the above case, the problem maybe the compatibility of the Micro SD card. We recommend you formatting the Micro SD Card to FAT32 file formats.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance

could void the user's authority to operate the equipment. This device complies with Part

15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.