

Know Your AirSelfie

LED Explanation of AirSelfie

- Red Light Solid—Charging
- Red Light off—Fly Status Normal
- Blue Light Solid—Fly Status Normal
- Blue Light Flash once—Take a picture
- Blue Light Flash slowly—Recording

• USB port can be used for data transfer via PC/MAC only when AirSelfie was power on

GENERAL INFORMATION

Safety precautions and maintenance

The product is designed for recreational and leisure purposes. The pilot must always maintain direct visual contact with the product and monitor its trajectory.

The product must be used in accordance with the civil aviation regulations in your country.

Not suitable for children under 14 years of age. Small parts. Choking hazard. Do not fly near your face to avoid injuries.

Risk of eye injuries.

Do not throw or hold any objects in the rotating rotor.

Hard objects or stones must be kept away from the propeller (rotor).

Do not touch the rotating rotor.

Do not change or modify anything on the product.

Caution: Do not start up and fly when persons, animals or any obstructions are within the flying range of the product. Fly range up to 20 m.

Before first use, read the user's information. Flying the product requires skill.

For adult supervisors: Check if the product is assembled as instructed. The assembly must be carried out under the supervision of an adult.

Start flying only when the area is appropriate for the intended use (free area, no obstacles) and only within direct visual contact.

Start and fly it strictly forbidden near high voltage poles, railway tracks, roads, swimming pools or open water.

Only operate under good visibility and calm weather conditions.

To safely use the FPV function the Drone must be flown by two competent people, one for the drone using the FPV module and the other as an observer. Both the pilot and the observer should ideally have flown the drone normally (without using the FPV) and be familiar with its functionalities. The observer should maintain visual contact with the drone at all times and be able to take over the controls quickly to avoid a collision or ensure a safe trajectory.

Read these instructions before use, follow them and keep them for reference.

All thing elements in the pack must be removed by a competent adult. The product is equipped with a circuit powered by 1 rechargeable battery 7.4 V 240 mAh (included). To be used under the direct supervision of an adult. Do not use in other areas than private grounds. Do not open or modify the product or the Charger or change any components inside.

BATTERIES: The product includes Rechargeable Battery T4 V 240 mAh (included). The product must not be connected at a power rating higher than that advised for 2017 of T 4 V.

PREPARED AND BATTERY CHARGE: Adults must carry out any operations involving the electric system.

Do not allow children to play with these components. Read these instructions before use, follow them and keep them for reference.

Do not charge the product that is hot, wet or shows signs of leakage or corrosion.

Do not expose the fire, as this may result in explosion. Do not short circuit the battery.

The article must be charged with the recommended battery charger.

The charger is to be regularly examined for damage. Do not plug enclosure and charger in the event of such damage, the charger must not be used until it has been repaired or replaced.

Prolonged charging will not improve the battery output, and could eventually damage the battery (pack).

Do not disassemble the battery pack.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Battery charger must not be used by adults only.

The battery charge is not a toy.

BATTERY

Always check batteries in case of leakage. If this happens, clean the leaking juice carefully before fitting new batteries. Be sure to insert batteries correctly and follow the use and battery manufacturer's instructions. Never mix old batteries with new batteries, or mix carbon-zinc, alkaline or nickel-cadmium batteries.

Do not mix different brands of batteries. Do not attempt to recharge batteries which are not rechargeable. Rechargeable batteries must be taken out of the product before being recharged. Rechargeable batteries should be recharged by adults. Do not short-circuit the battery contacts. Always remove batteries from the product when not in use or discharged. Dispose of batteries safely. Caution: Batteries inside this product may explode or leak when in contact with fire. Risk of explosion if battery is replaced by an incorrect one. In the event of electrolyte leakage, protect your eyes and hands.

HELPFUL HINTS: Clean the product with a damp sponge or cloth – do not submerge the product into water. Protect the product from rain, snow and damp. Keep away from fire.

WARRANTY

Without prejudice to any applicable statutory warranty, xxx warrants that the article will be free from defects in material and workmanship for a period of 12 months from the initial date of purchase (excluding consumables which are warranted during 6 months from the initial date of purchase) by presentation of proof of purchase to the retailer.

Return to retailer is not applicable in the USA - return shall be made to AirSelfie.

During the contractual warranty period, any defective product should be returned in its original packaging to the AirSelfie's after-sales service.

After inspection of the product, AirSelfie will, at its sole discretion, either repair or replace the defective part or product, excluding any other indemnification of any nature.

AirSelfie's warranty does not cover:

- defects due to damage caused by an accidental collision or fall;
- defects due to abnormal use of the product or if spare parts have been installed without following the recommendations and instructions provided by XXX.
- If the AirSelfie has been customised by the end-user the warranty is not applicable.
- Defects caused by repairs carried out by the end-user or an unauthorized third party;
- defects caused by damage or wear and tear caused by normal use;
- defects caused by any reason other than a defect in material or workmanship; the gradual power loss of the AirSelfie rechargeable battery over time, which does not constitute as a defect in material or workmanship.

This symbol, affixed to the product or its packaging, indicates that the product must not be processed with household waste. It must be brought to an electric and electronic waste collection point for recycling and disposal. By ensuring the appropriate disposal of this product you also help in preventing potentially negative consequences for the environment and human health. The recycling of materials helps preserve our natural resources.

The explanations and specifications in this guide are given for information purposes only and are not to be modified without prior notice. However, AirSelfie shall not be held responsible for any consequences arising from any errors or omissions in the guide, nor for any damage or accidental loss of data resulting directly or indirectly from the use of the information herein. AirSelfie reserves the right to amend or improve the product design or user guide without any restrictions and without any obligation to notify users.

FCC COMPLIANCE STATEMENT

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. Maintain a safe distance of at least 20cm between yourself and the product while the product is in operation. Note that this is the minimum safe distance for operation.

This device complies with Part 15 of the FCC Rules. Its operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference, including interference that may cause undesired operation.

Note: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

PRIVACY

Recording and circulating an image or the voice of a person without their consent could constitute an infringement of their image and privacy rights and incur your liability. Ask for consent before filming people and recording their voices, particularly if you want to keep your recordings and/or share them on the Internet. Do not share any degrading images or sounds which could undermine the reputation or dignity of an individual.

The use of the AirSelfie for surveillance or espionage is strictly forbidden and could result in your prosecution under the law.

Declaration of Conformity

Recording and circulating an image or the voice of a person without their consent could constitute an infringement of their image and privacy rights and incur your liability. Ask for consent before filming people and recording their voices, particularly if you want to keep your recordings and/or share them on the Internet. Do not share any degrading images or sounds which could undermine the reputation or dignity of an individual.

Hereby, AirSelfie declares that the radio equipment type AirSelfie flying camera is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

NOTE: THE GRANTEE IS NOT RESPONSIBLE FOR ANY CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

Know APP Better

AirSelfie App was developed exclusively for AirSelfie. Customer can use this App controlling the fly status as well as camera of the drone. In addition, customer can download picture/video from AirSelfie without extra steps and share to social media immediately.

Setting

- Camera: Time-Lapse: 3sec / 5sec / 10sec; Flying Para: Flying Speed: Slow / Medium; Multiple shot: 3pics / 5pics / 10pics; About: Check the firmware version.
- Icons in APP: Wi-Fi Connected, Wi-Fi Signal Weak, Wi-Fi Disconnected, Fully Charged, Battery Low.

Orientation of AirSelfie

Taking off and Landing

1. Put AirSelfie in your palm (in level to the ground) and set it idle by APP.
2. Gently toss AirSelfie in the upper front direction and you will find AirSelfie hover in air.

• While hovering, gently approach your hand to the bottom side of AirSelfie and then AirSelfie will automatically turnoff resting in your palm.

Operation Environment

Outdoor

- Please do not operate under bad weather conditions (rainning, snowing, etc.).
- Please do not fly over crowd or traffic.
- Please keep the drone in sight, keep the drone away from obstacle or water.

Indoor

- Visual positioning is applied for better hovering performance, texture/non-pure color or flying surface) under the drone is need for hovering.
- Keep the room sufficiently illuminated, for example, indoor with light on.
- To keep the Visual Positioning System operating under the best condition, please fly between 1.5-2m. AirSelfie will not hover stable out of the aforementioned range
- Please Avoid flying over surface absorbs sonar well.

Memory

There is a built-in 4G memory card for photos and videos. By USB cable, photos or videos can be downloaded to PC/Mac.

Battery & Charging

It is highly suggested to charge AirSelfie by PowerCase/PowerBank or Portable Charger coming with the AirSelfie kit. During charging process, RED LED is on. Once charged RED LED is off.

Power on/off AirSelfie

- Power on: push the power button as shown in Figure 1 and wait for 1.5 seconds. BLUE LED will be turn on and AirSelfie keep for indicating.
- Power off: push the power button as shown in Figure 1 and wait for 1.5 seconds. LED will be turned off so does AirSelfie.

Fly

AirSelfie was designed compact and light. It is highly suggested to fly AirSelfie indoors for the first time/night.

Download APP

Please download AirSelfie APP to your smart phone and AirSelfie APP is compatible for iOS & Android.

Bind AirSelfie to Your Smart Phone

Bind AirSelfie to your smart phone by Wi-Fi default SSID: AirSelfie_XXXXXX, the password is the 8 digit letter+digit combination, open APP and select flight mode to prepare a flight.

Selfie Mode

Flying Mode

B mode

Selfie Motion Control Mode

J mode

Gravity Mode

Right

Left