SHARPER IMAGE® WIRELESS TV SPEAKER

Item No. 207072



Thank you for purchasing the Sharper Image Wireless TV Speaker. Please take a moment to read this guide and store it for future

- 1. Battery charging: Icon shows when the speaker is charging. 2. AM: Icon displays when the time shows in 12-hour format, and in AM (morning)
- 3. PM: Icon displays when the time shows in 12-hour format, and in PM (afternoon/evening)
- 4. Battery: Icon shows when the speaker is being powered by batteries (not the charger). Icon continues to blink when battery life is lower than 30%.
- 5. TV: Icon shows when the slide switches to "TV"
- 6. Music: Icon shows when the slide switches to "MUSIC" 7. .: Displays when the radio is ON and frequency is shown
- 8. MHz: Icon displays when the radio is ON and frequency is shown
- 9. FM: Icon displays when the radio is ON and frequency is shown



Place the receiver on the base for charging for 6+ hours before first use. During charging, the Battery Charging icon is ON. When it is fully charged, the Battery Charging icon is OFF. A fully-charged battery will give you up to 5 hours of listening time. When the speaker is powered by battery, the battery icon is ON.

When the receiver is not in use, or when the Battery icon blinks, place the receiver on the base for charging.

OPERATION On/Off, Volume, and Tone Control

. Rotate the knob to turn the receiver On or Off, and to adjust the volume

- 2. You can turn your TV speaker to Low or to Off. On some TVs, you may need to use your remote to go into the TV's Menu to achieve an optimal audio/speaker setting. Please refer to your TV's user manual for details
- 3. To conserve battery power, the receiver will shift into standby mode if no audio signal is received from the base (after your TV is turned off) for a period longer than three minutes. The volume On/Off indicator will be off during this standby time. When the audio signal is received, the receiver will reactivate NOTE: If the receiver has hibernated too long and hasn't connected with the base, rotate the knob,
- turn off the receiver, then turn the receiver back on to re-sync with the base. 4. Set the Tone Control to a position that enables you to hear and understand dialogue best

Set Clock

1. Turn the knob clockwise to turn the speaker ON

- 2. Press "SET" 3. Press "-" or "+" to select 12-hr or 24-hr format
- 4. Press "SET" again, then press "-" or "+" to select hour 5. Press "SET" again, then press "-" or "+" to select minute

6. Press "SET" again to exit

1. Press "FM" to switch between FM radio and TV 2. Press (or press and hold) "-" or "+" to select a different frequency

WARRANTY / CUSTOMER SERVICE

Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty. If you have any questions not covered in this quide, please call our Customer Service department at 1 [877] 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

- 10 -

IMPORTANT SAFETY INSTRUCTIONS Please read these instructions carefully before using this device.

- Always keep this device dry. Do not immerse in water · For your safety, do not attempt to open the unit of battery compartment. Attempting to open the battery compartment violates your
- The Wireless TV Speaker uses a lithium-ion battery. Please observe the safety and handling instructions. Dispose of batteries in
- accordance with local laws and regulations. Do not dispose of this unit or its batteries in the household trash. Do not incinerate. Take the equipment to a nearby recycling center
- Do not unplug by pulling on the cord. To unplug, grasp the plug itself and not the cord. Unplug from your outlet when it is not in use, and before servicing/cleaning
- Do not operate any device with a damaged cord or plug. Do not operate if the device malfunctions or is dropped/damaged in any
- manner. Return the device to the nearest authorized service facility for examination, repair, or electrical/mechanical adjustment This device is intended for home and personal use only

CONNECTION AND SETUP

Select an Audio Connection: Locate the audio out connector on the back of your TV, or the headphone jack.

For analog audio output, use the included audio cable.

You may also connect the Wireless TV Headphones via your TV's headphone jack. Use the provided audio cable and connect the base of the

speaker to your TV as shown below.

NOTE: In most cases, the TV speaker's volume will be muted when using this type of connection.

For TV's with Audio-Out Ports (RCA type) If the back of your TV has audio-output RCA-type ports, it is an analog-output setup. Use the provided audio cable and connect the base of

the Wireless TV Speaker to your TV as shown below.

NOTE: In most cases, TV speakers are not muted with this type of connection.

FOR TV'S WITH DIGITAL OUTPUT PORTS (OPTICAL)

If your TV has digital optical audio output ports, use the included optical cable. Connect it to the base of your Wireless TV Speaker as shown below. In most cases, TV speakers are not muted with this type of connection.

NOTE: Newer TVs have the option to set digital audio output to either Dolby or PCM. The Wireless TV Speaker only works with a PCM audio format. Simply set your TV to PCM digital output. Contact your TV manufacturer for assistance if necessary.

AUDIO CONNECTION EXPANSION (FOR ANALOG OUTPUTS)

If your TV or satellite/cable box analog output ports have been used with other audio devices, the Wireless TV Speaker can be connected to your TV or satellite/cable box by using the provided RCA Y-Adapter Cables. (There are 2 cables with color-coded connector ends to match the UR audio output connectors.] Connect the Wireless TV Speaker as shown below.

Turn the knob clockwise to turn the speaker ON

2. Turn the knob clockwise to raise the volume. Turn the knob counter-clockwise to lower the volume

Speaker + Base Pairing

1. Place the speaker and base within close range of each other Press "PAIRING" on both the speaker and base to pair

Playing Line-In Music 1. Place the speaker and base within close range of each other

TROUBLESHOOTING

than 100 feet away from the base

No sound from the receiver Check all connections to ensure that all cords are firmly connected at the back of the base and TV. Also confirm that the receiver is no more

There is sound from the TV speaker, but no sound from the receiver

The Low Battery/Charging Indicator keeps blinking on the receiver

Check your TV speaker setting by going into the TV Menu using your remote. Make sure the TV is sending audio signals to the base

This indicates that the battery is low and needs to be placed on the base for recharging. When fully charged, the blinking will stop (in approximately 3 hours). If the blinking does not stop, check to make sure the receiver is firmly connected and properly aligned with the base. Plug your headphones into the headphone jack. No sound will be emitted from the speakers. Adjust the headphone volume by rotating the volume knob

CLEANING AND MAINTENANCE


Unplug the AC Adapter from the wall. Then, use a dry, soft cloth to clean and dust the outside surfaces and the charging contacts on the base. Do not immerse the receiver in water.

IDENTIFICATION OF PARTS

- 2. SPEAKER OFF AND VOLUME ADJUSTMENT
- 3. RADIO FREQUENCY AND TIME SET MINUS
- 4. RADIO FREQUENCY AND TIME SET PLUS (+)
- SETTING
- 6. FM RADIO 7. BUILT-IN SPEAKERS
- 8. POWER INPUT (SPEAKER)
- 9. HEADPHONE CONNECTOR 10. AUDIO CABLE INPUT
- 11. SPEAKER/BASE PAIRING
- 12. SWITCH BETWEEN WIRELESS CONNECTION WITH BASE AND AUDIO OUTPUT
- 13. POWER INPUT (BASE) 14. BASE/SPEAKER PAIRING


17. AUDIO CABLE INPUT

15. RCA INPUT 16. OPTICAL CABLE INPUT

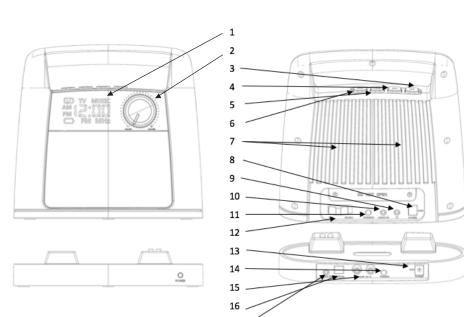

PLACEMENT OF TRANSMITTER BASE

For best results, place the Transmitter Base on top of your TV stand, or on top of your TV (as shown below).

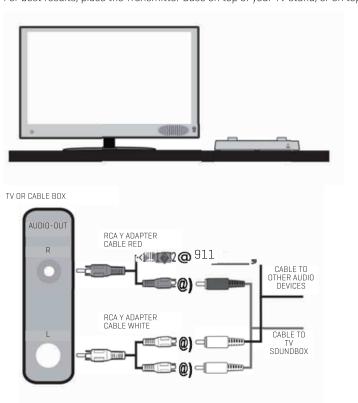

SPECIFICATIONS

Transmission: 2.4 GHz Radio Frequency

Speakers: 2x5W Speaker Battery: Built-in (Lithium-ion)

Audio Format Support: LPCM 44kHz, 96kHz

Operating Range: 100 ft. (in an open area) AC Adapter Power: 100-240VAC/50-60 Hz input; 9VDC 1.5A output **Listening Time:** Approximately 5 hours (at 50% volume)

Dimensions: 9" x 7" x 3.25" Weight: 1.7 lbs.

FCC INFORMATION (FOR U.S. CUSTOMERS ONLY)

Part 15 of FCC Rules Information This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of FCC rules. These limits are designed to provide reasonable protection against harmful interference in residential installation.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, you may try one the following methods to

- correct the interference: Where it can be done safely, re-orient the receiving television or radio antenna.
- 2. To the extent possible, relocate the television, radio, or other receiver, with respect to the cordless phone. 3. Connect the cordless phone AC adapter into a different electrical outlet.
- 4. Consult the dealer or an experienced radio/TV technician for help.

Any modification not expressly approved by the manufacturer of this device could void the user's authority to operate the device.