

User Manual

Manual del usuario

BAUHN[®]
EFFORTLESS TECHNOLOGY

BLUETOOTH[®] HEADPHONES

SPANISH TEXT



English.....Page 3
En español...Página 12

Contents

Safety.....	4
Technical Specifications.....	6
Features.....	6
Product Overview.....	6
Parts List.....	6
Operation.....	7
Troubleshooting.....	9
Maintenance & Disposal.....	10
Warranty Terms.....	11
Warranty Card.....	14

FCC Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: *This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:*

- *Reorient or relocate the receiving antenna.*
- *Increase the separation between the equipment and receiver.*
- *Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.*
- *Consult the dealer or an experienced radio/TV technician for help.*

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body. This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

AFTER SALES SUPPORT

Hearing Safety

Headphones can deliver sounds at loud volumes and high-pitched tones. Exposure to such sounds can result in permanent hearing loss damage. The volume level may vary based on conditions such as the phone you are using, its reception and volume settings, and the environment. Please read the safety guidelines below prior to using this headphone.

1. Prior to using this product follow these steps:
 - a. Before putting on the headphones, turn the volume control to its lowest level,
 - b. Put the headphones on
 - c. Slowly adjust the volume control to a comfortable level
2. During the use of this product:
 - a. Keep the volume at the lowest level possible and avoid using the headphones in noisy environments where you may be inclined to turn up the volume
 - b. If increased volume is necessary, adjust the volume control slowly
 - c. If you experience discomfort or ringing in your ears, immediately discontinue using the headphones and consult a physician.

With continued use at high volume, your ears may become accustomed to the sound level, which may result in permanent damage to your hearing without any noticeable discomfort.

CAUTION

- *Using the headphones while operating a motor vehicle, motorcycle, watercraft or bicycle may be dangerous, and is illegal in some jurisdictions. Check your local laws. Use caution while using your headphones when you are engaging in any activity that requires your full attention. While engaging in any such activity, removing the headphones from your ear area or turning off your headphones will keep you from being distracted, to avoid accident or injury.*
- *If you have a pacemaker or other electrical medical devices, you should consult your physician before using the product.*
- *This package contains small parts that may be hazardous to children. Always store the product out of reach of children. The bags themselves or the many small parts they contain may cause choking if ingested.*
- *Never try to dismantle the product yourself, or push objects of any kind into the product, as this may cause short circuits which could result in a fire or electric shock.*
- *None of the components can be replaced or repaired by users. Only authorized dealers or service centers may open the product. If any parts of your product require replacement for any reason, including normal wear and tear or breakage, contact your dealer.*
- *Avoid exposing your product to rain, moisture, or other liquids.*
- *If the product overheats, has been dropped or damaged or has been dropped in a liquid, discontinue use.*
- *Dispose of the product according to local standards and regulations.*
- *When you disconnect the power cord or any enhancement, grasp and pull the plug, not the cord. Never use a charger that is damaged.*

AFTER SALES SUPPORT

- 1 x Bauhn Bluetooth Headphones
- 1 x 3.5mm Audio Cable
- 1 x Micro USB Charging Cable
- 1 x Carry Case



Technical Specifications

Driver Unit:	40mm
Impedance:	32Ω
Frequency Range:	20Hz-35KHz
Bluetooth Version:	4.0
Rated Power:	10mW
Max. Power:	20mW
Transmission Range:	Up to 80ft
Playback time:	up to 15 hours
Battery:	550mAh Lithium Battery
Power Input:	DC 5V, 500mA

Features

- HD audio range from 20-35,000Hz
- Rechargeable battery lasts up to 15 hours
- Wear all day with ultra soft padding

Product Overview



1. **3.5mm Jack**
2. **+ Button** - Tap to skip tracks, hold to raise volume
3. **▶ Button** - Tap to play/pause, hold to enter pairing mode
4. **- Button** - Tap to skip track backwards, hold to lower volume
5. **Power Switch**
6. **USB Port**

AFTER SALES SUPPORT

☎ USA 800-372-5715

✉ customercare@balcolifestyle.com

Charging the battery

Before first use, it is recommended you charge your Bluetooth Headphones for a minimum of 1 hour.

1. Insert the small end of the included USB cable into the Micro USB connector on the headphones right ear pad.
2. Connect the other end of the charging cable to a USB port on your PC or laptop
3. The LED light will show a solid red color to indicate charging is active
4. The light will turn off when fully charged




NOTE:

- Charge only with 5V DC 500mA input.
- Use only the original USB charging cable to avoid any damage.
- When the LED flashes red, the battery is low, charge the headphones.

Power On/Off


To Turn On the Bluetooth Headphones:

1. The power switch is located below the volume control, press the power switch upwards
2. The headphones will state “power on” when the headphones are turned on

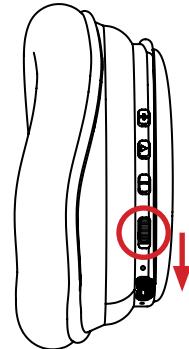

To Turn Off the Bluetooth Headphones:

1. Press the power switch downwards. The power switch is located below the volume control
2. The headphones will state “power off” when the headphones are turned off

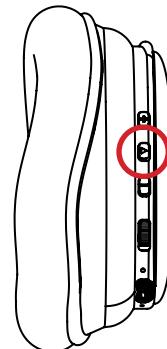

Pairing to a mobile device

Activate headphone pairing mode:

1. While the Bluetooth Headphones are on, press and hold the ▶ button for 5 seconds
2. The Bluetooth Headphones will then enter pairing mode and the LEDs on the bottom will flash red and blue
3. The Bluetooth Headphones will then give an audio cue of “pairing”

NOTE: On first use the headphones will automatically enter pairing mode.

Search for the headphones:

1. Enter the Bluetooth settings on the device you would like to connect
2. Search for the device "Bauhn Headphones" and pair as per your MP3 player or smartphone's instruction manual
3. When the Bluetooth Headphones are successfully paired with your device, the headphones will state "connected"

**Listening to your device**

Once you have successfully paired to a device, open a music app on your device to start listening to music. While listening to music you can play, pause, track forward track backward, and change the volume using the headphone controls/device controls.

NOTE: Refer to Page 6 for the headphone controls.

Phone calls

When connected to your Bluetooth enabled phone, you can accept incoming calls through your Bauhn Bluetooth Headphones.

Answering a call

When you receive an incoming call, the ringtone will be heard through your Bluetooth Headphones. Press the ► Button while the phone is ringing to answer an incoming call.

Ending a call

When you wish to end a call, Press the ► button located on the right ear pad.

Rejecting a call

If you receive a call and do not wish to answer it, you can reject the call by holding down the Play Button located on the right ear pad.

Using the audio cable

The included audio cable can be used to connect to a non-wireless device or for listening to music when the headphone batteries have been depleted.

1. Connect the included 3.5mm audio cable to the aux-in jack located on the left ear pad
2. Connect the other end of the audio cable to the audio jack



NOTE: When connected via audio cable, the Bluetooth function and controls are disabled. You cannot control playback using the control when connected via aux-in. The headphones will not be discoverable on Bluetooth.

Problem	Solution
Poor sound quality	<ul style="list-style-type: none"> Move the device closer to the headphones, and away from any interference. Try pairing to another mobile device.
Headphones do not connect to mobile device	<ul style="list-style-type: none"> Ensure that you are within range of the headphones. On your device turn off Bluetooth and turn it on again. Then try pairing the device again. Try pairing to another mobile device.
I can't hear anything when I dial someone/someone dials me	<ul style="list-style-type: none"> Turn up the volume on the headphones using the control pad. Turn up the volume on the paired device. Ensure you have not muted the phone.
Headphones do not turn on	<ul style="list-style-type: none"> Charge your device for 1 hour using the included Micro USB charging cable. Make sure the power switch has been turned on.
Having trouble pairing the Bluetooth headphones to my laptop/PC	<ul style="list-style-type: none"> Ensure your laptop/PC has Bluetooth capabilities. Refer to your laptop/PC manual for pairing instructions.
No sound	<ul style="list-style-type: none"> Make sure the headphones are on and battery is charged. Ensure that the volume is turned up on the headphones and your mobile device (or music app). Try pairing to another device. Try using a different music App.
No sound when connected via audio cable	<ul style="list-style-type: none"> Make sure the connected device is on and playing. Make sure the 3.5mm plug is fully inserted into the headphones connector, and fully inserted into the source. Ensure that the volume is turned up on your mobile device (or music app).

Storage

The headphones fold inwards for convenient storage. Once folded place the headphone into the included carry case to ensure the headphones are not damaged.

Cleaning

The headphones do not require regular cleaning. If you wish to clean the headphones it is best to use a soft and dry cloth. Do not use any liquid or sprays or allow any moisture to get inside the earcups.

Battery Care

- Make sure that your headphones are switched off after use.
- Do not leave a fully charged battery connected to a charger, since overcharging may shorten its lifetime.
- Before storing the headphones for long periods of time, be sure to fully charge the battery.
- When the battery is low and flashing red you must charge the headphones.
- If the battery is completely discharged, the headphones cannot be turned on immediately when the charger is connected. Allow a depleted battery to charge for a few minutes before turning on the headphones.
- Always try to keep the battery between 32°F and 113°F (0°C and 45°C). A product with a hot or cold battery may not work temporarily, even when the battery is fully charged.

Disposal

At the end of the headphones working life, do not throw this product out with household rubbish. All electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately.

For appropriate disposal:

- Observe any local regulations regarding the disposal of electrical consumer goods and dispose of the headphones appropriately for recycling.
- Contact your local authorities for advice on recycling facilities in your area.
- Observe local regulations regarding the disposal of waste products.

Please keep the original packaging carton and materials in a safe place. It will help to prevent any damage if the product needs to be transported in the future. In the event it is to be disposed of, please recycle all packaging material where possible.

Dear Customer:

The ALDI warranty is a full warranty offering you the following benefits:

Warranty period: **1 year** from date of purchase.

6 months for movable parts and consumables under normal and proper conditions of use (e.g. rechargeable batteries).

Costs: Free repair/exchange or refund.
No transport costs.

ADVICE: Please contact our service hotline by phone, e-mail or fax before sending in the device. This allows us to provide support in the event of possible operator errors.

In order to make a claim under the warranty, please send us:

The faulty item with all component parts, the original receipt and the warranty card properly completed.

The warranty does not cover damage caused by:

Accident or unanticipated events (e.g. lightning, water, fire).

Improper use or transport.

Failure to follow the safety and maintenance instructions.

Other improper treatment or modification of the product.

After the expiration of the warranty period, you may wish to have your product repaired at your own expense. You will be notified of the repair costs in advance.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state but this warranty is not intended to exceed statutory minimum requirements beyond what is included above.

This warranty does not limit the statutory obligation of the seller arising from any implied warranties. The period of warranty can only be extended in accordance with applicable law.

Neither the service company nor ALDI will assume any liability for data or settings stored on any returned product.

Contenido

Tarjeta de garantía.....14



WARRANTY CARD

TARJETA DE GARANTÍA

BLUETOOTH® HEADPHONES

SPANISH TEXT

Your details / Sus datos:

Name / Nombre _____

Address / Dirección _____



E mail / Correo electrónico _____

Date of purchase / Fecha de compra* _____

*We recommend you keep the receipt with this warranty card /

Le recomendamos que guarde el recibo con esta tarjeta de garantía

Location of purchase / Lugar de la compra _____

Description of malfunction / Descripción de la avería:



Return your completed warranty card
together with the faulty product to: /
Devuelva su tarjeta de garantía completada
junto con el producto defectuoso a:

Balco Lifestyle
7901 Baymeadows Way Suite #14
Jacksonville FL 32256

Balco Lifestyle Help Desk 800 327 5715
Operating Hours: Mon - Fri 09:00 to 18:00 CT
email: customercare@balcolifestyle.com
www.balcolifestyle.com

AFTER SALES SUPPORT • SERVICIO POSVENTA



USA

800-372-5715



[customercare@
balcolifestyle.com](mailto:customercare@balcolifestyle.com)

MODEL: HE170313 PRODUCT CODE: 54385 11/2017

2

YEAR WARRANTY
AÑOS DE GARANTÍA



DISTRIBUTED BY • DISTRIBUIDO POR:

ALDI INC., BATAVIA, IL 60510

www.aldi.us

**AFTER SALES SUPPORT
SERVICIO POSVENTA**



USA

800-372-5715



[customercare@
balcolifestyle.com](mailto:customercare@balcolifestyle.com)

MODEL / NO DEL MODELO

HE170313

11/2017



YEAR WARRANTY
AÑOS DE GARANTÍA