

LED Lamps User Manual

LED Lamps

YM SMART PAR38 15W 1630—**

- 1.connect your phone or Pad to local WIFI.
- 2.open yamaoled APP;
- 3.Register your account with phone number;
- 4.Enter Mobile Phone number and password, click login;
- 5.Set up Smartlight device and turn on the power, the light is on,after about 10 scends, device play “Guangdang” sound, device is SOFTAP mode, the light blink slowly (once per 3scends) ,waiting for connection;

Press reset key, device “du” sound, after about 5scends, play “guangdang” sound, device initialized, device is in SMATRLINK mode, the light blink slowly (once per 3scends) ,waiting for connection;

- 12.Enter APP, click “+” on the right top;
- 13.click “intelligent WIFI”;
- 14.Click “WI-FI config”, Enter the SSID and password of the WIFI you want to connect your Smartlight to.
- 15.Click “Connect WI-FI”, device play “Equipment start binding” sound, and light blink 2 times, after about 45 scends, device play “Wi-Fi be connected successfully”, and light blink 3 times, then

the light is on constantly;

14.Get back and click “Lan explorer”;

15.about 5scends, you will find the device is in the list, click“+”;

16.enter a name for your Smartlight and click “confirm”;

17.Get in video list;

18.Click your device with the name you just entered and enjoy your Smartlight;

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority

to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.