

(正面)

we make fun
DVR923KIT-BLK



Easy Guide™
READ ME FIRST

1 What's Included



2 Parts of the Camera



How to use the accessories

BICYCLE SPORT EDITION
HELMET EDITION

Reminders about Waterproof Casing:

1. Before opening the waterproof casing and putting the device in, carefully check whether the waterproof ring of the casing is flat and smooth.
2. After placing the device in, carefully close the cover of the waterproof casing. Once closed, be sure that there are no deformities in the waterproof ring and that the case is closed securely.

3 Initial Setup

Turning On & Using the Camera **Installing the Memory Card**




4 Main Camera Modes

Your camera has different modes for the various camera functions. You can switch modes by pressing the Mode/Power button once after the camera has been powered on, then press the multi-function button to select the required capture mode, and press the Shutter button to confirm. While in the Video or Photo Mode, press and hold the Multi-function Button to switch between the front and back screens. While in the Video or Photo Mode, press Multi-function Button to open the Wi-Fi function. With Wi-Fi turned on, press Multi-function Button to turn off Wi-Fi.

To make changes to the camera's setting, follow the instructions below to enter multi-function setting interface:

After turning on the camera, while in the 2.0 inch Screen's Video or Photo Mode, press and hold the shutter button to open the current mode setting menu, press Power/Mode Button to switch between different menus, current mode setting menu - camera system setting menu - exit. Note: While in the 1.3 inch Screen, it can only support take Videos or Photos or turn on/off Wi-Fi, it can not support to make camera's settings.

5 Camera Setting Menu

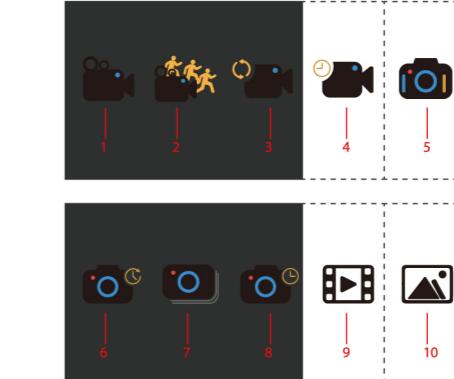

After turning on the camera, while in the 2.0 inch Screen's Video or Photo Mode, press and hold the shutter button to open the current mode setting menu.

Press the Power/Mode button on the menu interface to toggle between different setting menus: Current mode setting menu → Camera system setting menu → Exit.

Once you are in the desired setting menu, press the Multi-function button to scroll through and select a setting option. Then press the Shutter/OK Button to enter the options for the selected setting.

5.1 Current mode setting menu: In any working mode, if you open the menu setting, the first page of the menu setting is the current working mode setting menu, and the corresponding mode icon is displayed. Press the Multi-function button to scroll through and select a setting option, and then press the Shutter/OK button to confirm.

5.2 Camera system setting menu: Press the Power button to switch to this menu. Press the Multi-function button to scroll through and select a setting option, and then press the Shutter/OK button to confirm.

Exit: Press the Power button to toggle to the exit item. Then press the Shutter button to confirm and exit.

(反面)

Video Capture Mode

Use this mode to capture videos with your camera, when the camera is in Video capture mode. To take a video, aim your camera as desired and press the Shutter/OK button to start recording. To stop recording, press the Shutter/OK button again. The video is automatically saved to your camera's memory card.

To access the various Video capture mode settings, while in the 2.0 Inch Screen's Video or Photo Mode, press the Power/Mode button to enter, press the Multi-function button to choose normal recording, slowly recording, loop recording or time-lapse recording mode. Select the recording mode and then press the Shutter/OK button to confirm your choice. To access the various Video capture menu settings, when in 2.0 Inch Screen's Video Capture mode, press and hold the Shutter/OK button to enter. Press the Power/Mode button to toggle to the Video capture menu setting. Press the Multi-function button to scroll through and select a setting option, then press the Shutter/OK button to confirm.

Normal video mode

In this mode, press the Shutter/OK button to start recording. Press the Shutter/OK button again to stop recording and save the file.

Slowly video mode

In this mode, the slowly video icon is displayed in the upper left corner of the screen. You can set the slow motion and slow speed in this mode menu setting. Select your option and then press the Shutter/OK button to confirm.

Loop video mode

In this mode, the loop video icon is displayed in the upper left corner of the screen. You can set the length of each video and video resolution in this mode menu setting. Select your option and then press the Shutter/OK button to confirm.

Time-lapse video mode

In this mode, the time-lapse video icon is displayed in the upper left corner of the screen. Time-lapse recording parameters and video resolution can be set in this mode menu setting. Select your option and then press the Shutter/OK button to confirm.

Timelapse photo mode

In this mode, the timer camera icon is displayed in the upper left corner of the screen. You can set the timer time in this mode menu setting. Press the "Shutter Button" to start the camera's countdown. When the countdown ends the photo is taken.

Video Album

After selecting this function, the camera enters the Video playback mode. In this mode, press the Multi-function button to scroll through the video files. If you select a video, Press the Shutter/OK button to start the video playback or to stop the video playback. If you would like to delete the video, please select a video file, press and hold the Shutter/OK button to view the delete menu options.

Photo Album


After selecting this function, the camera enters the Photo playback mode. In this mode, press the Multi-function button to scroll through the photo files. If you would like to delete the photo, please select a photo file, press and hold the Shutter/OK button to view the delete menu options.

Connect to the HelloCam App

The HelloCam App lets you control the camera remotely using a smartphone or tablet. On your mobile device, please download "HelloCam" from either the Google Play Store or the Apple App Store. Alternatively, scan the QR code below to download the App.



HelloCam APP operation interface function introduction

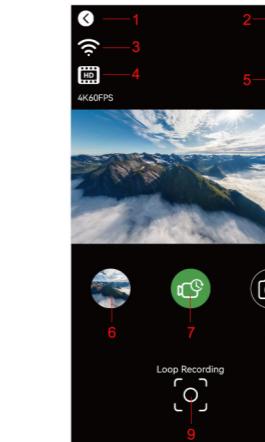

1 Exit 2 Camera settings
3 WIFI signal 4 Resolution setting
5 Video or photo parameters 6 Camera album
7 Video mode setting 8 Camera mode setting
9 Shutter button

Video photo sharing

After downloading photos or videos from the camera album, they will be automatically saved in the HelloCam APP "Photo Album". After the phone is connected to the network, open the HelloCam APP and enter the "Photo Album" to view or share the videos or photos that have been downloaded to the local. You can also view and share the videos or photos downloaded to the phone in the phone album.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.