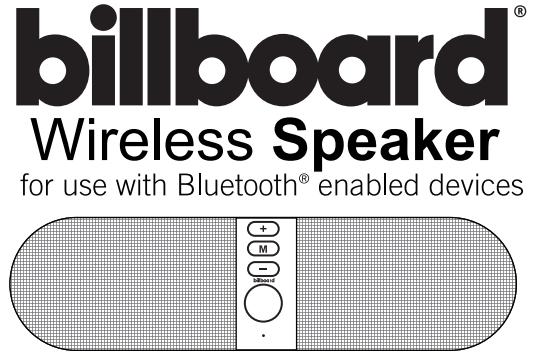


Front

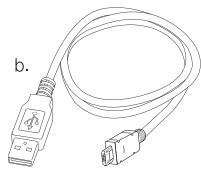
 


Wireless Speaker USER MANUAL

**Wireless Speaker**

Thank you for purchasing the Billboard® Wireless Speaker. For best use of this device we recommend carefully reading this user manual and keeping it for your records.

Package contains
a. Wireless Speaker
b. USB charging cable
c. 3.5mm to 3.5mm audio cable

**FCC Information**

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Federal Communications Commission (FCC) Statement

This Equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment. Tested to comply with FCC standard, FOR HOME OR OFFICE USE.

Warning :

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or in conjunction with any other antenna or transmitter.

Battery information

Your device is powered by a rechargeable battery. The full performance of a new battery is achieved only after two to three complete charge and discharge cycles. The battery can be charged and discharged hundreds of times, but it will eventually wear out.

Do not leave a fully charged battery connected to a charger, overcharging may shorten its lifetime. If left unused, a fully charged battery will lose its charge over time.

Never use any charger that is damaged.

Leaving the device in hot or cold places will reduce the capacity and lifetime of the battery. Optimal temperature for the battery is between 15°C and 25°C (59°F and 77°F). A device with a hot or cold battery may not work temporarily, even when the battery is fully charged.

Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged. Always dispose of batteries according to local regulations. Please recycle. Do not dispose as household waste.

Technical Support: techsupport@esicellular.com or call 212 883-8838

© 2019 Billboard IP Holdings, LLC. All rights reserved. Billboard®, the Billboard logo, HOT 100 and associated characters, trademarks and design elements are owned and licensed by Billboard IP Holdings, LLC.

 
Bluetooth is a registered trademark of Bluetooth SIG



It may damage your hearing if you listen with high volume for a long time. It is recommended you use the lowest volume possible for speaking and listening to music.



Back

1. Guide**■ introduction****FRONT OF SPEAKER**

- VOLUME UP / NEXT SONG
- MODE
- VOLUME DOWN / LAST SONG
- PLAY / PAUSE
- ANSWER / END CALLS
- LED INDICATOR
- Microphone

BACK OF SPEAKER**2. Instruction****■ Key Function**

- ON
- OFF
- M

1) Turn on the speaker. Switch the Power ON/OFF button to the left.
To turn off the speaker, Switch off the Power ON/OFF button to the right.

2) To switch between Bluetooth and other modes, short press the Mode button.

3) Activate the Bluetooth® feature on your phone and set the phone to search for wireless devices (See the User Manual of your device) The speaker will show on your device as BB-BT-SP (if pass code is requested enter 0000) A chime sound will tell you if the pairing is successful, if no device is successfully paired, the speaker will be turn off in approximately 5 minutes.

4) Short press the Play/Pause button to play your device's music.

5) When the speaker is paired to your mobile device, press Answer/End Calls button to answer the call and press again to end call. Press and hold Answer/End Calls button to reject calls. Press the Answer/End Calls button twice to redial the last number.

6) Short press the "+" button to go to the next song or long press the "+" button to turn the volume up.

7) Short press the "-" button to go to the previous song or long press the "-" button to turn the volume down.

FM Radio Mode

Plug the Micro USB cable into the Micro USB port as an antenna. Short press the Mode button to enter FM Radio mode. After entered into FM Radio mode, long press the Play/Pause button for searching an available station. Press the "+" or "-" button to go to the next frequency.

TF (Micro SD) Card

Insert TF (Micro SD) card into the TF card slot, the speaker will switch to SD Card mode automatically and play the music from TF (Micro SD) card.

USB Audio

Insert USB drive to the USB slot, the speaker will switch to USB Audio mode automatically and play the music from USB drive.

Auxiliary Input

Connect the 3.5mm plug of the included audio cable to the AUX-IN port and the other end of 3.5mm plug to your music device. A chime sound will signal that the connection is successfully. Long press "+" button to turn the volume up and long press "-" button to turn the volume down. In the Auxiliary input mode, you cannot play/pause or change tracks on the speaker, you'll need to control that on your device.

LIMITED WARRANTY

ESI Cases and Accessories warrants to the first consumer purchaser that this product, when shipped in its original container to the original purchaser, will be free from defective workmanship and materials for one year and agrees that it will, at its option, either repair the defect or replace the defective product or part thereof at no charge to the purchaser for parts or labor for the time periods described.

This warranty does not apply to any appearance items of the product nor to the additional excluded items set forth below nor to any product the exterior of which has been damaged or defaced which has been subjected to misuse, abnormal service or handling or which has been altered or modified in design or construction. The limited warranty described herein is in addition to an applicable law. ALL IMPLIED WARRANTIES INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE PERIOD FROM THE DATE OF ORIGINAL PURCHASE SET FORTH BELOW. Some states do not allow limitations on how long an implied warranty last, so the above limitation may not apply to you. Neither the sales personnel of the seller nor any other person is authorized to make any warranties other than those described herein or to extend the duration of any warranties beyond the time period described herein on the behalf of ESI Cases and Accessories.

The warranties described herein shall be the sole and exclusive remedy available to the purchaser corrections of defects, in the manner and for the period of time described herein, shall constitute complete fulfillment of all liabilities and responsibilities of ESI Cases and Accessories to the purchaser with respect to the product and shall constitute full satisfaction of all claims, whether based on contract negligence, strict liability or otherwise. In no event shall ESI Cases and Accessories be liable or in any way responsible, for any incidental or consequential damages, so the above exclusion may not apply to you. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

Send device with the product to:
ESI Cases and Accessories,
44 East 32nd Street, 6th floor

New York, New York 10016
* Enclose proof of purchase and \$11.95 for Shipping and Handling.

TECHNICAL SUPPORT: 212 883-8838
E-MAIL: techsupport@esicellular.com