

# Front

## WIRELESS SPEAKER MODEL: KDL-BT1731



### USER MANUAL


#### WIRELESS SPEAKER

Thank you for purchasing this Wireless Speaker. For best use of this device we recommend carefully reading this user manual and keeping it for your records.

#### PACKAGE CONTAINS

- a. Wireless Speaker
- b. USB charging cable
- c. Instruction manual
- d. 3.5 mm AUX cable
- e. Strap


a.

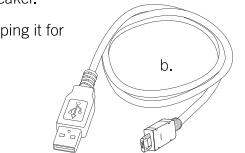

b.



c.

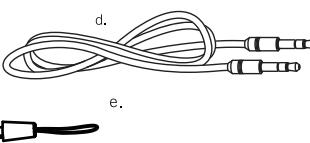

d.



e.

#### PAIRING YOUR SPEAKER

Once paired, the speaker will automatically connect to your device the next time they are both powered on, and in proximity to each other.

1. Power on your speaker by long pressing the Multifunction Button, until the Indicator light flashes red & blue alternately, meaning ready to pair.
2. On your Bluetooth™ enabled device, navigate to the Bluetooth™ settings panel. The earbuds will appear as **BB-BT-SP**, select that name to connect. Most devices will not ask for a password, but if one is requested, use 0000.
3. Once the speaker has connected successfully, you will hear a sound announcement

#### CONNECT USING AUX

- Plug in the 3.5mm audio cable into the AUX input at the back panel of the speaker
- You can connect to any audio device that has 3.5mm audio input jack and can playback any audio from this device.

#### LISTENING FROM TF

- Plug in your TF Card at the back panel of the speaker.
- Your speaker will automatically playback music from your TF card.

#### LISTENING TO THE RADIO

- Press the Mode button, turn on to Radio mode.
- Press the Play/Pause button, the speaker will scan through the available frequencies, and automatically pick the best receptions as presets. This process can take several minutes - please wait. You will know it's finished when it holds on one station
- The Previous & Next Track buttons can be used to find a station to play.

#### OPERATIONS DURING PLAYBACK


- To raise the volume, long press the Volume Up button.
- To lower the volume, long press the Volume Down button.
- To pause/play, short press the Play/Pause button.
- To advance to the next track, short press the Next Track button.
- To restart the current track, short press the Previous Track button.
- To navigate to the previous track, double short press the Previous Track button.
- To answer or end a call, short press the Answer/End Call button
- To switch modes to FM Radio play, short press the Mode button.

#### CHARGING BATTERY

- By connecting the Micro USB Charging cable (included) to the back of the unit.
- In Charging mode, the back panel will show red light indicator and when complete charged, the light will be off.

# Back

#### PRODUCT DIAGRAM

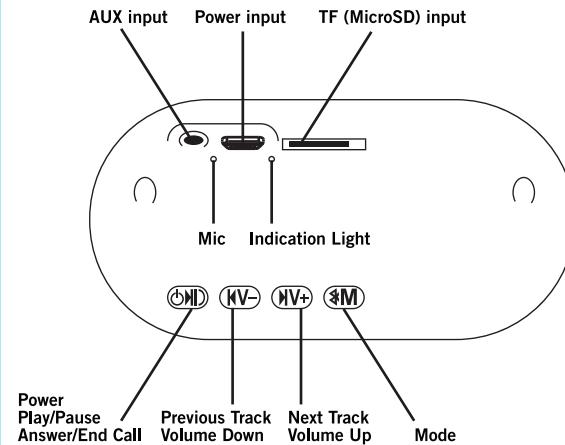

#### BATTERY INFORMATION

- The full performance of a new battery is achieved only after two to three complete charge and discharge cycles. The battery can be charged and discharged hundreds of times, but it will eventually wear out.
- Do not leave a fully charged battery connected to a charger, overcharging may shorten its lifetime. If left unused, a fully charged battery will lose its charge over time.
- Never use any charger that is damaged.
- Leaving the device in hot or cold places will reduce the capacity and lifetime of the battery. Optimal temperature for the battery is between 15°C and 25°C (59°F and 77°F). A device with a hot or cold battery may not work temporarily, even when the battery is fully charged.
- Do not dispose of the device in a fire as it may explode. Batteries may also explode if damaged. Always dispose of electronics according to local regulations. Please recycle. Do not dispose as household waste.

Bluetooth is a registered trademark of Bluetooth SIG



It may damage your hearing if you listen with high volume for a long time. It is recommended you use the lowest volume possible for speaking and listening to music.

#### RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

#### FCC INFORMATION

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received; including interference that may cause undesired operation.

The manufacturer is not responsible for any radio or tv interference caused by unauthorized modifications or change to this equipment. Such modifications or change could void the user's authority to operate the equipment.

#### Federal Communications Commission (FCC) Statement

This Equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

#### WARNING

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment. Tested to comply with FCC standard.

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or in conjunction with any other antenna or transmitter.

**PAIRING NAME: BB-BT-SP**