

PORTRABLE MICRO SYSTEM

With Color Changing Light

FM Radio and

Bluetooth® Wireless Technology

OWNER'S MANUAL

PLEASE READ BEFORE OPERATING THIS EQUIPMENT.

MODEL: MM438

Size: 148.5(W) x 210(H)mm (A5)

4. During playback:
 A. Turn the MASTER VOL (Volume) Control Knob on the top of unit to adjust volume level as desired.
 B. Turn the BASS VOL (Volume) Control Knob on the top of unit to adjust bass level as desired.
 C. Turn the BASS VOL (Volume) Control Knob on the BASS Equalizer up or down to adjust the audio levels as desired.
 D. Press the Light (Decorative LED Lights) On/Off Button repeatedly to turn On/Off the Decorative LED Lights.
 At the light on:
 • Press the "1" - "6" Buttons repeatedly to set or reset the color of the Decorative LED Lights.

5. When finished listening, press the POWER ON/OFF Button to OFF position to shut off the unit.


BT Mode:
BT (Bluetooth) pairing:
 To pair the unit to a new BT Device, pair as follows:
 1. Power on the unit and enter to BT mode as previously instructed. "blue BT" will appear on the display and "BT" in it will blink. The unit also will sound a prompt "Enter to Bluetooth".
 2. Power on the external BT Device and enter to BT searching mode. Start pairing following the on screen instructions from the external BT Device. After paired, the unit will sound a prompt "Bluetooth connected" and the BT indicator will stop blinking.

3. If pairing is complete you may now play music and answer calls with your external BT Device.
 4. During playback:
 • Press the I or I Buttons repeatedly to skip tracks.

Notes:
 • When the external BT Device searched the unit, our model number "MM438" will appear on the display of external BT Device.
 • While pairing you are asked for a code please try "0000" or "1234".

Normal operation after pairing:
 1. Power on the unit and enter to BT mode as previously instructed. "blue BT" will appear on the display and "BT" in it will blink. The unit also will sound a prompt "Enter to Bluetooth".

TF(Micro SD Card) Playback Mode:
 To plays the music in Micro SD Card:
 1. In power off mode, insert the Micro SD Card into the TF (Micro SD Card) Slot on the rear of unit as illustrated below.

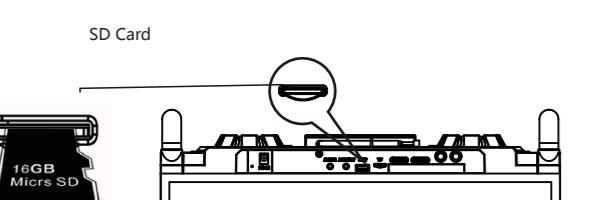

2. Power on the unit by press the POWER ON/OFF Switch to On position. The unit will automatically play the song/music in the Micro SD Card.

3. During playback:
 • Press the I or I Button to mute the sound, press again to turn the sound back.

• Press the Rep (Repeat) Button repeatedly to skip tracks.

• Press the Mode (Editor) repeatedly to switch to other playback mode.

5

IMPORTANT SAFETY INSTRUCTIONS



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK). NO USER-SERVICEABLE PART INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

FCC ID: 2ABD8, IC: 20956. This device complies with Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. There is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio communications, which can be determined by turning the equipment off and on, the user is encouraged to correct the interference by one of the following measures:

1. Read these instructions
The safety and operating instructions should be read before the appliance is operated.2. Keep these instructions
The safety and operating instructions should be kept for future reference.3. Read all warnings
Warnings on the appliance and in the operating instructions should be adhered to.4. Follow all instructions
All operation and use instructions should be followed.5. Use proper antenna
The antenna should be connected to the equipment and not to a power line.6. Clean only with dry cloth
The appliance should be cleaned only as recommended by the manufacturer.7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
Slots and openings in the cabinet and in the back or bottom panel are provided for ventilation and cooling of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should not be blocked by placing the product on a bed, sofa, rug, or similar surface. This product should never be placed near or over a radiator or heat source. This product should not be placed in a built-in cabinet unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

10. Product power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

11. Only use attachments / accessories specified by the manufacturer.

12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer.
When using a cart, be sure the cart is stable and will not be tilted or turned over.

13. Unplug this product during lightning storms or when unused for long periods of time.

14. Refer all servicing to qualified service personnel.

15. Power line
An outdoor antenna system should be located in an overhead power line or other power or light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.16. Overloading
Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.17. Object and liquid entry
Never push objects of any kind into the product through openings as they may touch dangerous voltage points or short out parts that could result in fire or electric shock. Never spill or spray any type of liquid on the product.18. Outdoor antenna grounding
If an outside antenna is connected to the product, be sure the antenna system is grounded so as to provide some protection against voltage surges and static charges. Section 80 of the National Electric Code ANSI/NFPA 70 provides information with respect to proper grounding of the main power line, location of the connection of the lead-in wire to an antenna discharge product, size of grounding conductors, location of antenna-discharge product, connection to grounding electrodes and requirements for the grounding electrodes.19. Note to CATV system installer
The antenna system is provided to call the CATV system installer attention to Article 820-40 of the NEC which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building as close to the point of cable entry as practical.

NOTE: Refer all servicing to qualified service personnel.

20. Damage requiring service
For any damage that occurs due to liquid being spilled into the product, do not attempt to repair it yourself. Call for service.21. Replacement parts
When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original parts. Unauthorized substitutions may result in fire or electric shock or other hazards.22. Safety check
Upon completion of any service or repairs to this product, have the service technician to perform safety checks to determine that the product is in proper operating condition.23. Wall or ceiling mounting
The product should be mounted to a wall or ceiling only as recommended by the manufacturer.24. Damage requiring service
A. Unplug this product from the wall outlet and refer service to qualified service personnel under the following conditions:
B. When the power supply cord or plug is damaged.
C. If liquid has been spilled or objects have fallen into the unit.
D. If the product has been exposed to rain or water.
E. If the product does not operate normally by following the operating instructions.
F. If in doubt about use of an equipment.
G. When the product exhibits a distinct change in performance- this indicates a need for service.25. Note to CATV system installer
The antenna system is provided to call the CATV system installer attention to Article 820-40 of the NEC which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building as close to the point of cable entry as practical.

NOTE: Refer all servicing to qualified service personnel.

26. Notes on the use of the Micro SD Card
This product supports up to 16 GB Micro SD Card. The unit supports play up to 16 GB Micro SD Card.27. Notes on the use of the USB Device
This product supports up to 16 GB USB Device.

28. Notes on the use of the AUX IN

29. Notes on the use of the AUX OUT

30. Notes on the use of the BT Device

31. Notes on the use of the FM Radio

32. Notes on the use of the Micro SD Card

33. Notes on the use of the USB Device

34. Notes on the use of the AUX IN

35. Notes on the use of the AUX OUT

36. Notes on the use of the BT Device

37. Notes on the use of the FM Radio

38. Notes on the use of the Micro SD Card

39. Notes on the use of the USB Device

40. Notes on the use of the AUX IN

41. Notes on the use of the AUX OUT

42. Notes on the use of the BT Device

43. Notes on the use of the FM Radio

44. Notes on the use of the Micro SD Card

45. Notes on the use of the USB Device

46. Notes on the use of the AUX IN

47. Notes on the use of the AUX OUT

48. Notes on the use of the BT Device

49. Notes on the use of the FM Radio

50. Notes on the use of the Micro SD Card

51. Notes on the use of the USB Device

52. Notes on the use of the AUX IN

53. Notes on the use of the AUX OUT

54. Notes on the use of the BT Device

55. Notes on the use of the FM Radio

56. Notes on the use of the Micro SD Card

57. Notes on the use of the USB Device

58. Notes on the use of the AUX IN

59. Notes on the use of the AUX OUT

60. Notes on the use of the BT Device

61. Notes on the use of the FM Radio

62. Notes on the use of the Micro SD Card

63. Notes on the use of the USB Device

64. Notes on the use of the AUX IN

65. Notes on the use of the AUX OUT

66. Notes on the use of the BT Device

67. Notes on the use of the FM Radio

68. Notes on the use of the Micro SD Card

69. Notes on the use of the USB Device

70. Notes on the use of the AUX IN

71. Notes on the use of the AUX OUT

72. Notes on the use of the BT Device

73. Notes on the use of the FM Radio

74. Notes on the use of the Micro SD Card

75. Notes on the use of the USB Device

76. Notes on the use of the AUX IN

77. Notes on the use of the AUX OUT

78. Notes on the use of the BT Device

79. Notes on the use of the FM Radio

80. Notes on the use of the Micro SD Card

81. Notes on the use of the USB Device

82. Notes on the use of the AUX IN

83. Notes on the use of the AUX OUT

84. Notes on the use of the BT Device

85. Notes on the use of the FM Radio

86. Notes on the use of the Micro SD Card

87. Notes on the use of the USB Device

88. Notes on the use of the AUX IN

89. Notes on the use of the AUX OUT

90. Notes on the use of the BT Device

91. Notes on the use of the FM Radio

92. Notes on the use of the Micro SD Card

93. Notes on the use of the USB Device

94. Notes on the use of the AUX IN

95. Notes on the use of the AUX OUT

96. Notes on the use of the BT Device

97. Notes on the use of the FM Radio

98. Notes on the use of the Micro SD Card

99. Notes on the use of the USB Device

100. Notes on the use of the AUX IN

101. Notes on the use of the AUX OUT

102. Notes on the use of the BT Device

103. Notes on the use of the FM Radio

104. Notes on the use of the Micro SD Card

105. Notes on the use of the USB Device

106. Notes on the use of the AUX IN

107. Notes on the use of the AUX OUT

108. Notes on the use of the BT Device

109. Notes on the use of the FM Radio

110. Notes on the use of the Micro SD Card

111. Notes on the use of the USB Device

112. Notes on the use of the AUX IN

113. Notes on the use of the AUX OUT

114. Notes on the use of the BT Device

115. Notes on the use of the FM Radio

116. Notes on the use of the Micro SD Card

117. Notes on the use of the USB Device

118. Notes on the use of the AUX IN

119. Notes on the use of the AUX OUT

120. Notes on the use of the BT Device

121. Notes on the use of the FM Radio

122. Notes on the use of the Micro SD Card