

163.5mm

101mm

Using the Microphone

- Plug microphone in MIC Port. LED screen will read MIC.
- Turn microphone on.
- Adjust MIC VOL and ECHO to your desired level.

Karaoke App Support

- The Rock Star Blast speaker supports many apps found in Apple and Android App store.
- Try out some of these popular apps: Smule, The Voice: On Stage, Karaoke Sing and Record, Yokee: Sing Like A Star!, and StarMaker
- The speaker also supports using YouTube for your karaoke music and lyrical needs. Just search for karaoke songs and press play!

**Troubleshooting**

No power	Recharge your speaker using the included adapter.
Music is not playing over Bluetooth	Make sure your Bluetooth device has A2DP profile. Check if both devices are paired and connected over Bluetooth. Restart the speaker to reconnect your Bluetooth device.
Bluetooth device will not reconnect with the speaker	Navigate to your Bluetooth settings menu on your Bluetooth device, tap "UZ SB060," and select "Forget." Now follow the steps to pair your device again.

Specifications

Bluetooth® Range: Up to 30ft.
Charging Voltage: DC 9V
Freq. Response: 90HZ-20KHZ
Product size: 10" x 8.8" x 17"

Battery Capacity: 1200mAh
Charging Time: Approx. 3-4 Hours
Playback Time: Approx. 3 Hours*

*Depends on individual use

Technical Support:

If you are experiencing problems, do not attempt to fix the product yourself or return it to the store you purchased it from. Please refer to the user's manual or just contact our helpful tech support team:
Merkury Innovations

45 Broadway, 3rd Fl
New York, NY 10006
www.merkuryinnovations.com
support@merkuryinnovations.com

This device complies with Part 15 of the FCC Rules. Operation is subject to the two following conditions:
1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

©2017 Merkury Innovations, LLC.

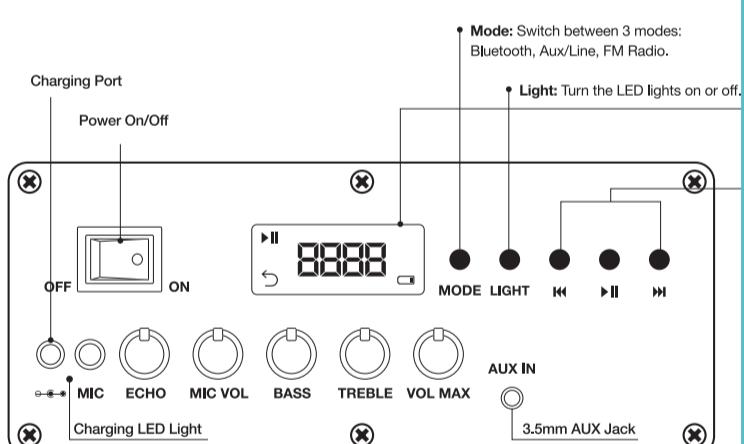
To explore our full selection of products, please visit www.merkuryinnovations.com. The illustrated product and specifications may differ slightly from that supplied. App Store is a service mark of Apple Inc., registered in the U.S. and other countries. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. YouTube, Android, Google Play, and the Google Play logo are trademarks of Google Inc. All other trademarks and trade names are those of their respective owners. **Made in China**

**User's Manual for UZ-SB060**

Included:
Party Speaker
Microphone with Cable
Charger, User Manual

ROCK STAR^{BLAST}

WIRELESS TAILGATE PARTY SPEAKER

IMPORTANT Please read before using this product**Detailed Product Diagram****Charge It**

- Plug the power cable into the charging port on the back panel. Plug the power adapter into a standard 110V wall outlet.
- When charging, the LED light on the back will glow red. Once fully charged, the LED light will turn off.
- The speaker will take approximately 3-4 hours to charge.
- **Warning: Only use the included 9v charger to charge the speaker.**

Selecting Play Mode

- The Rockstar blast comes with 3 play modes: Bluetooth, Line/Aux, and FM.
- Press the Mode button to switch between modes.
- The LCD screen will display the mode you are in:
 - BLUE
 - LINE
 - FM STATION

Pair & Connect with a New Bluetooth Device

- Press the power switch to turn the speaker on.
- If needed press the Mode button until the speaker is in Bluetooth mode. The display will read BLUE.
- On your Bluetooth enabled device, navigate to the Bluetooth setting menu, and search for new devices.
- Wait a few seconds and select "UZ SB060".
- You will hear a tone to indicate you are connected.

NOTE: If asked for a password, you may need to enter "0000."

LCD Screen

8888 LINE: operating in Aux in mode
FM Frequency: operating FM mode
Blue: operating Bluetooth mode

Flashing when the power is low, charging is needed with adapter, or it will turn into standby mode and turn off; The volume will drop to 70% when power is low.

Bluetooth Mode: Short Press: Play/Pause
FM Mode: Long Press: Disconnect current device
Short Press: Mute
Long Press: Scan local stations and store

Bluetooth Mode: Previous and next track
FM Mode: Select previous or next station stored in memory.

Play with Bluetooth or AUX

- Connect your device to the speaker via Bluetooth. (See "Pair & Connect with a New Device.")
- Open your favorite music or karaoke app and press play.
- Control the tracks & EQ from the back panel or use your device.
- Press the "▶" button once to play/pause music, and "◀" or "▶" button skip tracks.
- All audio, including music, games, videos, and notifications will be routed through the speaker.
- Aux: Plug in your device using a standard 3.5mm cable & press MODE until the LCD display says LINE.
- In Aux mode you can only control the tracks from your device.

NOTE: Volume levels on your device and on the speaker are controlled separately.

FM Radio Mode

- Press the Mode button to select FM mode.
- Press and hold "▶" to scan stations. The speaker will automatically store frequencies in your local area.
- Once scan is complete, use "▶" button and "◀" button to navigate stations.
- Press "▶" button to mute the radio.

Volume and effects

- Echo - Adjust the amount of echo effects added to your voice.
- Mic Vol - Raise and lower the volume of your voice.
- Bass - Changes the amount of bass that comes from the microphone.
- Treble - Adjust the high notes of the microphone.
- Vol Max - Raise and lower the volume of the music.

Reconnect to Bluetooth

- You only need to pair your Bluetooth device with the speaker once.
- With your previously paired device's Bluetooth turned on and in range, power on the speaker.
- The speaker will automatically reconnect to the last Bluetooth device it was connected to.
- If a previously paired device does not auto-reconnect, navigate to the Bluetooth settings menu on your device, and select "UZ SB060" from the list of Bluetooth devices.
- If you need to connect a new device, press the "▶" for 2-3 seconds to disconnect the 1st device and go straight into pairing mode.

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

***RF warning for Mobile device:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.