# User Manual

# **Contents**

Contents	1
1.SafetyPrecautions	2
2.Before Use	2
3. Appearance and Keypad Operations	3
4.Using Memory Card as U Disk	4
5.WiFi	6
6. Bluetooth	7
7.Mail	9
8.Dialling	9
9. Messaging	13
10. Contacts	17
11. Internet Explorer	22
12. Recorder	23
13.Clock	24
14.Caculator	25
15.Camera	26
16. Images	28
17. Music	31
18. Calender	33
19.FM Radio	34
20.Settings	35
21. Notices for the use of Tablet PC	39
22 FCC Information	42

# 1. Safety Precautions

Before using a mobile Tablet PC, please read and observe the following rules.

	While driving or answering a call, please use an earTablet PC or stop your car.	<b>*</b>	Mobile Tablet PC interferes with aircraft communication, please ensure that mobile Tablet PC power off during the entire flight.
	All mobile Tablet PCs may be disturbed, and affect their performance.	•	Please don't use mobile Tablet PC and turn off your Tablet PC where medical equipments exist.
<b>\( \)</b>	To ensure the best performance or avoid damage to mobile Tablet PC, please use the original accessories and batteries.		At the gas station and close to the fuel and chemicals and other dangerous goods, please power off your mobile Tablet PC to avoid explosion.
*	To avoid interference of the blasting operation, In the scene of the explosion or post "Turn off the radio" icon in the local, please power off your mobile Tablet PC.	•	Please don't burn batteries as ordinary garbage, to avoid the risk of life and damage to the environments. Please abide by the local environmental policy, timely deal with or recycle the waste batteries.
	Before your mobile Tablet PC is connect with another equipment, please read carefully this manual to ensure safety.	<b>\</b>	Some small articles (such as T-Flash card, etc.) should be placed out of children reach, to prevent children swallowing or other hazard.
0	Please backup the important information or keep a written record, to prevent its loss.	sos	When sending an emergency call, please ensure your mobile Tablet PC power on and in a service area, inform your position, without permission, please don't end this call.

## 2.Before Use

#### 1.Install and Unload SIM Card

#### 1.1 About SIM Card

Before using the Tablet PC, you must insert valid SIM (Subscriber Identity Module) card in the Tablet PC. SIM card provided by network supplier.

All the information related to network connection are recorded in the chip of SIM card, also the names, teleTablet PC numbers and SMS that storing in the name card holder of SIM card. You can take out SIM card from your Tablet PC, and use it in any GSM mobile Tablet PC (new mobile Tablet PC can read SIM card automatically).

In order to avoid losing or damaging the information saves in SIM card, please don't touch the metal contact surface, and place SIM card in the place that away from electricity and magnetic force. Once SIM card is damaged, you can't use the Tablet PC normally.

**Prompt:** Please make sure to power off the Tablet PC before taking out SIM card. It is absolutely forbidden to insert or take out SIM card with external power supply; otherwise it may damage SIM card and the Tablet PC.

#### 1.2Insert and Unload SIM Card

Metal contact surface of SIM card is easily scratched. You must take out SIM card carefully before the assembly.

Power off the Tablet PC, remove the rear cover, battery or other external power supply.

Make the end of SIM card without cutting angle inside and aim at the card slot of the Tablet PC and metal surface of SIM card face downward, then insert SIM card to the card slot of the Tablet PC, the other SIM card is also inserted in this way.

When taking out SIM card, directly pull it outward and then can take out SIM card.

**Prompt:** Without special explanation inserting two SIM cards are defaulted in the manual. If you just insert one SIM card, maybe some options of the menu will not be shown.

#### 2.T-Flash Card

Aim at the T card slot and push the T card gently, and the card will be inserted correctly.

**Prompt:** If the memory card is failed, please check whether it is correctly placed and good contact of metal point.

# 3.Charging

#### Charger

Insert the charger on the charging interface at the top of the Tablet PC. After inserting the charging plug, battery strength icon stripe at the top right corner of the screen is scrolling, which means that the charging is processing; when the stripe is full of the whole icon and stop scrolling, which means that the battery charging is completed; when the charging is completed, please pull out the plug.

When electric quantity is not enough, warning message will be sent; and electric quantity shows empty. When electric quantity is too low, the Tablet PC will power off automatically. Please don't make the battery in the status of not enough electric quantity for a long time; otherwise it may damage the battery quality and service life. Please don't charge the battery for a long time.

**Prompt:** In order to ensure normal operation of the Tablet PC, please make sure to use the designated charger.

# 3. Appearance and Keypad Operations

User Manual

Keys	Functions	
	Long press [Power] key to power on or off mobile Tablet PC.	
power	Short press [Power] key to turn off the screen when a call is talking.	
	Press it to open the Tablet PC's menu, then you could choose to lock the screen.	
	turn off the Tablet PC, or set it to the silent mode.	
	Press it to increase the volume	
up	Press it to turn the Tablet PC to vibration mode from the silent mode.	
down	Press it to decrease the volume.	

# 4. Using Memory Card as U Disk


If you want to send music, pictures or other files to the Tablet PC's memory card from the computer, you should set memory card as u disk first.


Set memory card as u disk


- 1) Connect the Tablet PC to the computer with USB cable. The notification icon will appear in the status box.
  - 2) Use USB mobile transmission line will connected to the computer
- 3) In the notification panel, touch USB is connected  $\,$  And then touch the USB connected as a media device



Specific shown in the following figure (picture 1.2.3.)

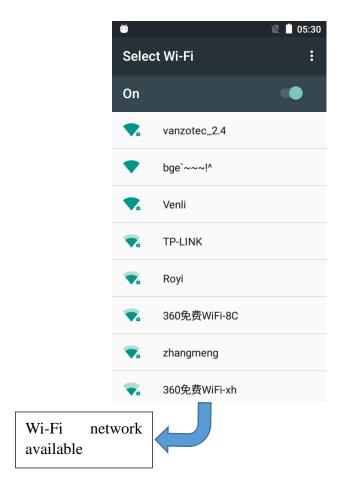

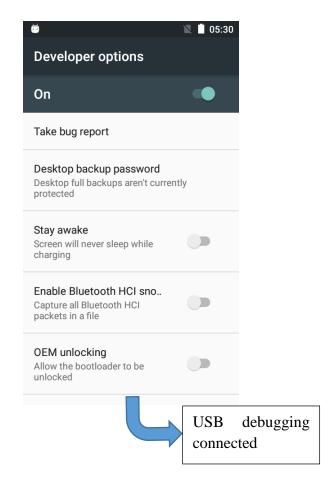

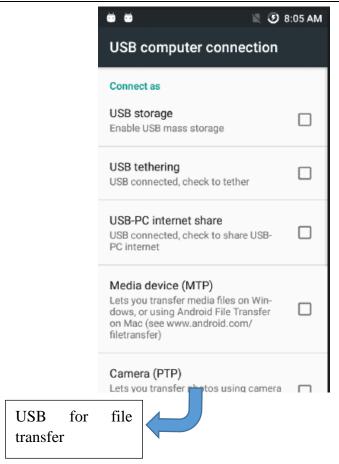

Notice :On the PC operation assistant tool such as mobile Tablet PC, Must be open the USB debugging.

#### 5.WiFi

Wifi provides as far as 300feet (100M) range of wireless network access. If you use cell Tablet PC to connect wifi, you should connect to the wireless access point or  $\lceil$  hot spots  $\rfloor$ .

Notices: The availability and coverage of Wi-Fi signal depend on the number, infrastructure and other objects penetrated by the signal.


Open Wi-fi and to connect to the wireless network

- 1) Enter settings.
- 2) Select the wi-fi box, to open Wi-Fi. Tablet PC will automatically scan for available wireless networks.
- 3) Touch Wi-Fi settings. Then a list of Wi-Fi network will show the founded network name and security settings. (open network or WEP, WPA/WPA2 with password). If you enable the notification in Wi-Fi settings,
- 4) Touch one of the Wi-Fi choices to connect the network. When you choose open network, Tablet PC will connect to it automatically. If you choose WEP, WPA/WPA2 with password, you should type the password first, then touch to connect it.

Notices: when the Tablet PC is connected to the wireless network,

The status box will show this Wi-Fi icon ( ), and the approximate signal strengthen (the number of

lit bars). If touch the connected network, will display the name of WiFi network, status, speed, signal,

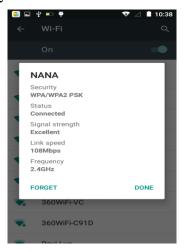

strength, security, information and IP address.

If you want to delete the wireless settings, please touch "not reserve" as in the right picture. If you want to connect to this network, you should re-enter these settings.

#### Notices:

Unless you choose not to reserve the network, otherwise, there is no need to re-enter the corresponding password when next time connecting to the previously encrypted wireless network. Wi-Fi will search automatically, that is, Tablet PC needn't to perform additional steps to connect Wi-Fi networks.

#### Notices:

Unless you choose not to reserve the network with password, otherwise, there is no need to re-enter the corresponding password when next time connecting to the previously encrypted wireless network. Wi-Fi will search automatically, that is, Tablet PC needn't to perform additional steps to connect Wi-Fi networks.

Connect to other Wi-Fi networks

In the interface of wireless and network, touch Wi-Fi settings. The founded Wi-Fi networks will show on the Wi-Fi network list.

Touch other Wi-Fi networks, and then you can connect to this network.

Notices: in addition, mobile Tablet PC can also surf the Internet by GPRS. Our current SIM card GPRS to open after the default boot. Users can manually choose to open data connection, when for the single card, direct drop down the status bar, touch "data connection" is open, when for the card, location in "Settings > SIM card > cellular data > select SIM1 or SIM2", touched the drop-down "data connection" of the status bar is open the current selected SIM card data connection, and then touch "data connection" close this SIM card data connection..


#### 6. Bluetooth

Turn on Bluetooth or set the Tablet PC can be detected 1) Enter settings.

- 2) Select Bluetooth box, then open bluetooth box, the status box will show this icon ( ), then it starts to scan for all devices within range.
  - 3) Touch Bluetooth settings, all the devices founded will display in the list under the icon.

(bluetooth device is set open and visible to a nearby equipment work, other equipment as long as open the bluetooth can search to the bluetooth and matching, open as long as the other devices can be detected at the same time, you can search for other equipment and matching use)

### After a paired devices, the system will show the paired and other equipment available

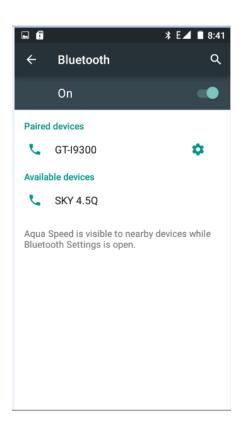

Pairing and connection of Bluetooth headset

- 1) Enter settings.
- 2)Select Bluetooth box, then open bluetooth box, then your Tablet PC will scan for the Bluetooth devices within range ,and show the founded devices in the list under the icon.

Tips:

If the list can't find your equipment, touch scanning equipment to re-scan it.

Make sure that the devices wanted are under the detected mode.

3) Touch headset in the equipment list to finish the connection.

Notices: generally Bluetooth devices need password to be paired, often use \[ 0000 \] as the default password.4)The pairing and connecting status will show under the headset in the Bluetooth devices list.

When the headset connected to your Tablet PC, the status box will show this icon ( means connected. Then you can use the headset to make or receive callings.

Cut the connection to the Bluetooth

Press settings>Bluetooth.

In the list of Bluetooth equipment, touch or tap and hold the connected hand-free headset.

Press and select "cancel the pairing".

Bluetooth proximity sensor

After pairing the two device, you can test out the signal is strong or weak by the Bluetooth proximity sensor device

## 7.Mail

Load Email.

a. Open network connection,

b.In setting the account interface, input the correct email address and password and click next mobile Tablet PC automatically complete the sending and receiving server Settings. Pop-up mail find frequency, and user Settings interface, complete Settings, click next.


c.For account creation name, the editor of the law that email user name, and click next. Complete set, synchronous mailbox.

Create and send Email

When creating mails, select mails > create mails. Enter the address(recipient), theme and contents. Press MENU you could 'append', 'Add Cc/Bcc', select send or discarded or save as draft.

Check the Email files

Click the inbox to the left of the small buttons, list all the folder options

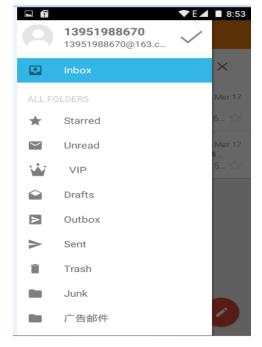


# 8.Dialling

When the icon of network server appears in the screen, you could dial or receive callings. The signal


bar on the top right corner show the strength of network signal (When the signal with the strongest signal).

## Start dialing

Open application's main menu>dial >Dial the keyboard. You could choose SIM1 or SIM2 to do the dialing.

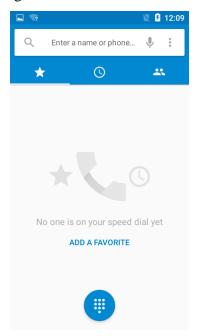



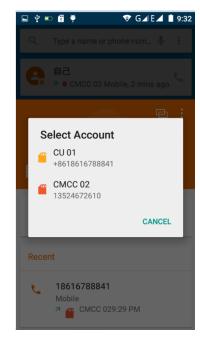

### Dialling

At the dialing Keyboard , enter the Tablet PC number, and then click the dialing key, after that, you should choose one SIM card or internet call. If needed to call the extension, you could click the "dial pad" in the bottom of the screen to open the interface or press menu key to select "delay 2 seconds", and then enter the number of the extension.

The dialup keyboard input number, click Menu can IP dial-up or speed dial

Video call: video call usually refers to the Internet and mobile Internet based on (3G Internet) end, through the Tablet PC between the speech of the real-time transmission and image (user of bust, photographs, items, etc.) of a way to communicate. Only 3G to support this function. Input a number click video dial-up, each other answers the Tablet PC after both can through camera for video calls.

TeleTablet PC calls in the call log

Every teleTablet PC number called and received in "SIM1, SIM2" will reserved in Tablet PC's menu of call log. Each call to record recently will show "SIM1 or SIM2"

All numbers in the call log can be dialed by clicking the button "dial" on the right side of the screen.

When number list appearing, click it to catch details; press it for long you could dial via "SIM1 or SIM 2", meanwhile you can edit, delete, save the number or do other operations.

#### Receive callings

When calling comes (top left will show from which SIM card) press "Answer" and slide towards right until the middle button, then you can receive callings.

Refuse to answer the Tablet PC,

Have a teleTablet PC call in, hold down the "call" button to the left sliding contact can decline a call.

Have a teleTablet PC call in, hold down the "call" button sliding upwards to contact messages can be resisted. Choose reject content, the other Tablet PC, will receive the corresponding text messages.

#### Proximity sensor

According to the distance between Tablet PC and human body, it will adjust automatically the switch of the backlight.

During the call, close the Tablet PC to the ear, the backlight will turn off automatically, which could save batteries and prevent inadvertently touching.

#### Refuse to answer the Tablet PC

When standby, calling comes, press "refuse" button and slide towards left side until the middle button, then you could refuse the calling.


When using, calling comes, click on the "refuse" button to refuse the calling.


Two-way call/multiparty call(conference call)

Notices: this function needs that SIM card open multiparty call features.

Already exist a call in the Tablet PC

Click "Add calls", dial another call (or receive another call, Tablet PC default open "call waiting" (settings—dialing settings—other dialing settings), after both connected, could view the status of calling.

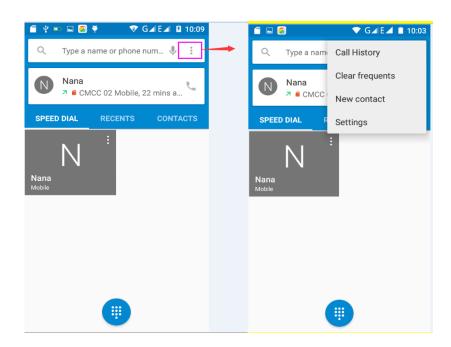

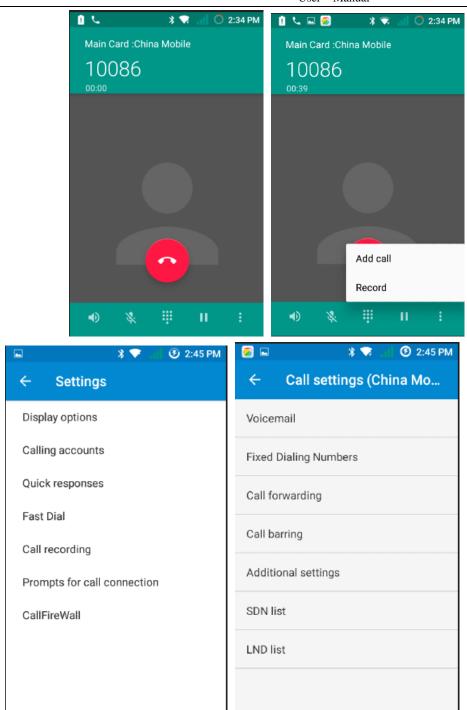

#### TeleTablet PC recording

During the call, you could record the dialog of the call.

- 1) settings>Calling accounts >Call forwarding, set other functions of the call in the dialing settings, for example: Call Transfer—after all the settings finished and turned on, you could transfer the call to a certain number.
- 2) In settings> calling accounts > Additional settings, open "call waiting". After turned on, you can receive another call when already exist one, The answering and rejecting functions are just like the ordinary Tablet PC.

#### Call settings

Voice Call

- 1) Voice Mail: The voice mailbox in setting in the input voicemail number.
- 2) Call forwarding: Can set respectively 2 a SIM card, the line is busy, and no one has to receive, not be connect four connecting way
  - 3) Call barring: Can set respectively two to the SIM card call restrictions
  - 4) Additional Settings: a.My Tablet PC number b.Call waitting.
  - 5)Quick Response: Can edit the text messages rejected by the information when content.

# 9. Messaging

Important: the message title of this Tablet PC is the Tablet PC number, will be reserved in s similar for of dialog, instead of the usual folder structure. Messages with blue background are those received, and messages with white background are those sent.

## Send SMS to certain Tablet PC number


- 1) Press home>messaging, touch "new messages".
- 2) In the interface of "edit":
- a.Click "recipient" box to start input method, you can also click "enter" box to start input method, in that way you can .enter characters.
  - b.Click the button of "send from SiM1 or SIM2" to start sending.
  - c.when the receiver and the input are not empty, click the send button, sending a message.

#### Send MMS to certain Tablet PC number

When creating message, it was defaulted as SMS, it will be turned to MMS when following operations were done. You can send MMS via clicking "send" after editing.

1)in the "writing" screen, press the Menu button, click "add theme", automatic into the MMS message:

2)click on "write" interface "plus" icon on the left, to the following attachment, the attachment after adding the message will be automatically converted into SMS.

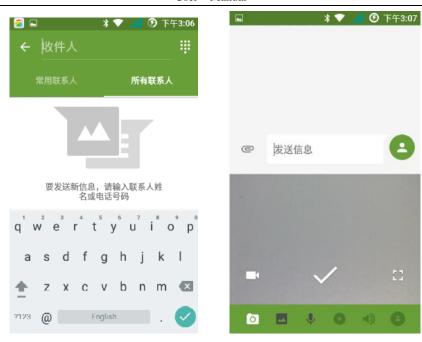


Send messages to multiple numbers

Enter multiple numbers in the box of entering, each number is divided by the comma in English.


Click on the right side of the head with the receiver plus icon, can choose contact group in the address book

Notices: At present the orbit can only support up to 100 recipients.


While the number of contacts added more than 100, will be prompted to "recipient" too much, after add contacts without success. You must manually add again.

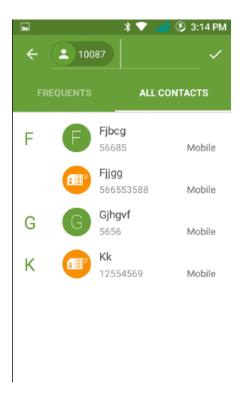

• information edit Menu with Menu functions

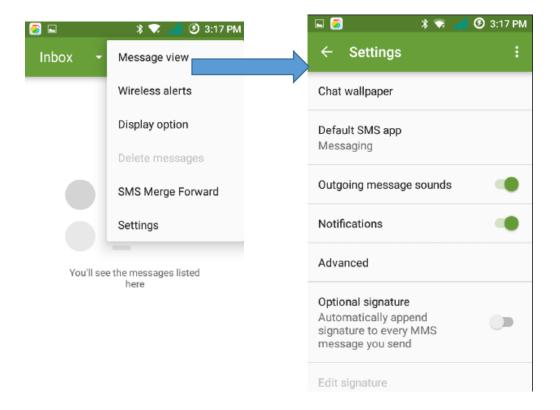


- 1) When the message is sent after the success, according to China unicom mobile SIM1 or SIM2 sends a message of time, there will be a checkmark beside the little symbol.
- 2) When message sending failed, a red triangle with exclamation will appear, when editing information other functions of Menu button
  - 3) Hold the certain information, can carry out selective operation

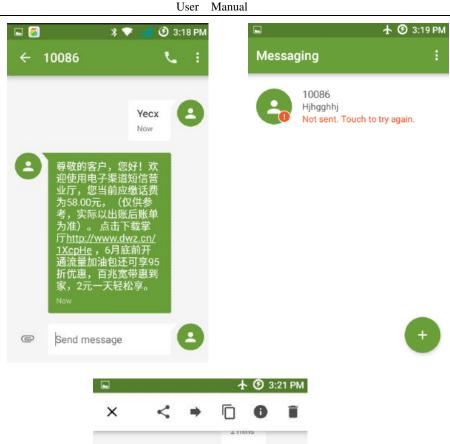



## 10. Contacts


Open the menu of applications>contacts the default display mobile Tablet PC contact and SIM card contacts, contact sort by pinyin initials.

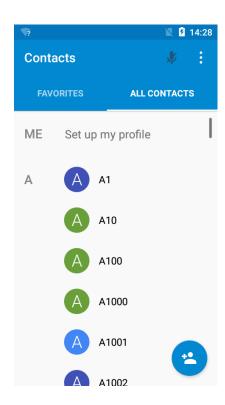


Click "Add Contact" Icons, Can create New Contacts


Select save contacts to Tablet PC or a a SIM card, into contact editing interface.

You can edit contact head, name, teleTablet PC number, group, save to and more, and then click "finish".

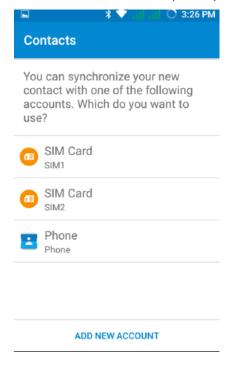

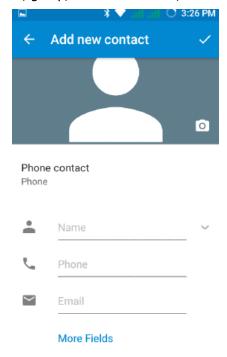


In contact interface, click on the Menu button

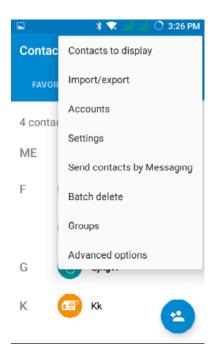

a.Click Meun>Search, You can enter the contact search interface.


Enter the list of Numbers or letters and part name, that will be shown in search results. If no search to match the contact interface will appear 'was not found any contact.

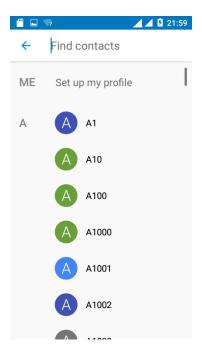

## b.Menu> Contact to display

You can choose all contact, one a SIM card of contact, the mobile Tablet PC contacts


Choose from the definition, but also on a SIM card and cell Tablet PC choice whether or not to show that all the lone contacts.

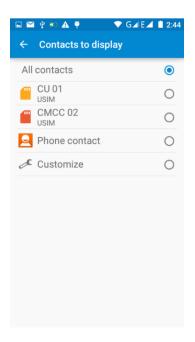

## c.Menu >Import/export

In the mobile Tablet PC can local, SIM card and SD card three parties achieve contact information of the copy each other.

First choose the "copy source" and then select the next step, selecting copy contact to, can complete the contact's copy.

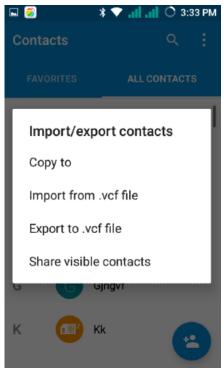

d.Menu > Groups

Click on the "group" icon to the new group.

In "the group name" column input group name, in "type in the contact's name" column input contact key word, can be in all of contact search, and added to the group. Finally click "finish".

- 1) In a group, click on the Menu button, Menu functions
- 2) Menu>Edit

You can modify the group name, delete or add group of contacts

3). Menu >Delete


You can delete the group, and will not delete the contact itself.

4). Menu >Bulk message

Automatic new information, and the group added to contact the address bar recipients


5). Menu >Bulk email

If contact group have the same email address, the automatic new mail, and E-mail address in the address bar add to the receiver

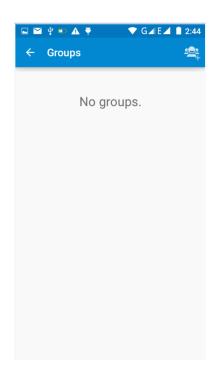


### g.Menu >Accounts

Account and synchronization set routine synchronous Settings, can choose background data and automatic synchronization.

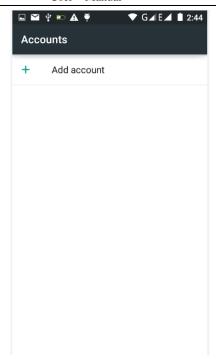

# h.Menu >Setings

Can be set up sorting and the format of the name

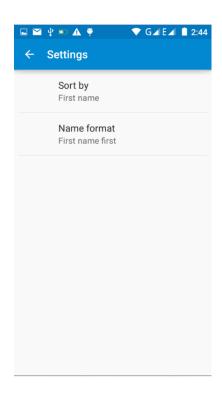

# 11. Internet Explorer

Internet explorer

- 1) In the browser screen, and then touch input url address bar.
- 2) Using the keyboard input web address. At the same time, in the address you entered is in line with web address will appear on the screen. You can touch the url directly to the page or continue to enter url. Homepage
  - 3) the page when browsing the Menu button Menu function

a.Menu >Refresh

Refresh the current browsing web pages

b.Menu > Stop

Stop the current in the loading state of a web page

c.Menu >Homepage

If you don't have a set, will use the preset site. The default home page is the page navigation

d.Menu >Save to bookmarks

Will send the address of the current window as a bookmark. Click the bookmark list of bookmarks, open the bookmark url.

e.Menu > Exit

Exit the browser or minimize the browser.

f.Menu >Save for offine reading

Automatically save the current page and content, in order to browse next time.

g.Menu >Share page

Select the bluetooth, email, SMS or other ways to share the current web page

h.Menu >Find on page

The current visit web pages can be find

i.Menu >Request desktop site


Browse the pages in the form of PC

j.Menu >Bookmarks/History

Switch to the bookmarks/history/save the web interface

k.Menu >Settings

Browser contains a variety of Settings

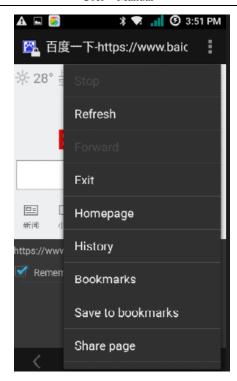

### **Browser Settings**

- 1) General, including home page set functions such as below.
- 2) Privacy & security, including clear historical record, clear the cache, and other functions
- 3) Accessibility, including size, click operation scale, and other functions.
- 4) Advanced, including web browsing, page adjustment, plug-in enabled, and other functions.
- 5) Bandwidth management, switch whether to load the picture when loading the page.
- 6) Labs, including open fast control and full screen display function.

## 12. Recorder


Recorder can record voice, and send it quickly via Bluetooth or MMS as well as make it as ring tone. Notices: recorder can only save the audio files as AMR format.

- 1) Click the recorder application.
- 2) Keep the Tablet PC's microTablet PC near the voice source.
- 3) Click recorder to record voices, and click to stop or Recordinglist.

All recordings save in my recording folder in the default music program.






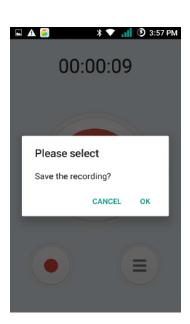


# 13.Clock

1) Open the menu of application, click Clock, The alarm clock Settings into the interface



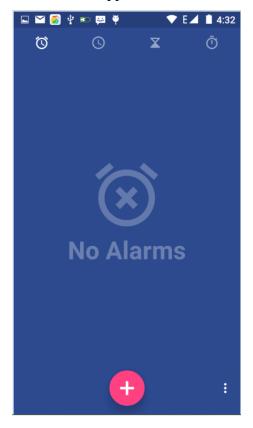

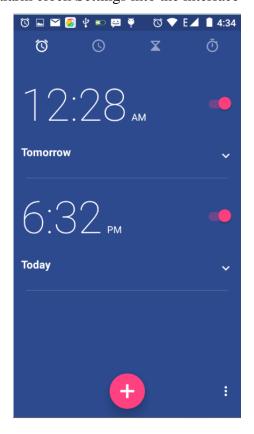

#### Alarm

After functions set, Tablet PC will arrives in the setting time to alert you by ringing or vibrating to achieve it's function. Press Menu to add alarm, you can also add it from the adding interface. You could set the alarm according to your needs. In the interface of alarm will show three closed alarms (two alarm clocks are Monday to Friday 8:30,9:00).

#### Edit

You can edit the current alarm, you could edit time, ringing tones, vibration, repeat form and tabs.

## 14.Caculator


#### calculator

this function can turn your Tablet PC into calculator, it can do some simple calculations.

• Touch the number keys to make it appear in the blank box.

In the interface of calculator, press MENU button or hold down the screen to the left, then the senior panel appears.



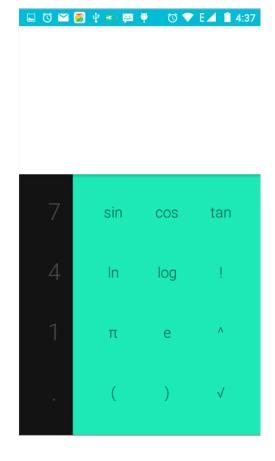

# 15.Camera

#### 15.1 camera

Prior preparation

Install memory card before using the camera or video camera. All your photos or videos taken by the Tablet PC are stored in memory card.


#### Open camera


Press home, touch menu, select camera. Take pictures


- 1) Aim your object with the screen.
- 2) Touch the "shutter" button on the screen.
- 3) After taking, photos will save to the camera's galley folder with the name of taking time.
- 4) You can view the photos by touching the preview box button.
- 5) Camera settings

You can touch the button of "setting Menu" in the interface of camera to do the settings Under camera viewfinder mode, press Menu, you can switch to video or photos' gallery.

On the top right of camera viewfinder mode, display the preview of the previous picture. Touch preview box, the photo display on full screen and you can enlarge it to view details.

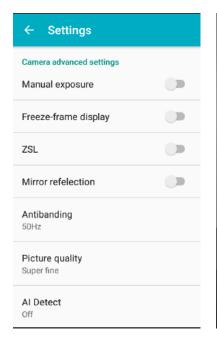

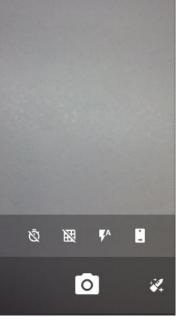

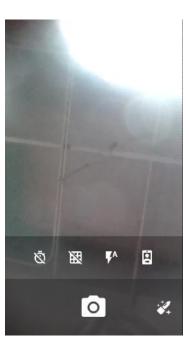

## Camera adbanced settings

1) Manual exposure: on, off

2) Freeze-frame display: on, off

3) ZSL: on, off

4) Mirror refelection : on, off 5) Antibanding : 50Hz, 60Hz 6)Picture quality: Super fine, Fine, Normal

7)Al Detect: off, Face-detect, Smile-shutter

8) Scene modes: Auto, Action, Night, Normal, Portrait, Landscape

9) White balance: Auto, Fluorescent, Incandescent, Cloudy, Sunshine.

10)Burst: 3,6,10,off

11)Contrast:3,2,1,0,-1,-2,-3

12)Brightness:6,5,4,3,2,1,0

13)ISO:Auto,1600,800,400,200,100

14) Volume key function: Volume model, Zoom model, Shooting model

15) Metering: Frame-average, Center-weighted, Spot-metering

16)Saturation:3,2,1,0,-1,-2,-3

# 15.2 Video camera

Prior preparation

Install memory card before using the camera or video camera. All your photos or videos taken by the Tablet PC are stored in memory card.



#### Take video

Press the home page, touch the menu, select the camera. Switch to video mode.

- 1) with the screen on your subject.
- 2) directly on the screen touch the shutter button.
- 3) after the shooting, video automatically taken as file name, save to the gallery by default camera photo folder.
- 4) on the top right-hand corner photo viewing images, a video preview before display. Touch the preview box, the full screen video, touch play button can broadcast video.

You can touch the button of "set" in the interface of camera to do the settings

Under camera viewfinder mode, press Menu, you can switch to video or photos' gallery.

On the top right of camera viewfinder mode, display the preview of the previous video. Touch preview box, the video will display on full screen and you can touch the play button to view it.

# 16. Images

## Open images

Press home, touch label of applications, then touch photos' galley. In the interface of camera, Press menu to open it, then touch to operate.




#### Gallery interface

- A. in the gallery main interface, the upper right corner of the camera button, can quickly switch to the camera application
- B. folder tile in the gallery main interface, folder thumbnail displayed on the folder name and the number of embedded file.

#### Files Interface

- a.In the library the interface, upper right a slide show the play button, click on the way to the slide circulation play all image files.
  - b.Click on the images, enter the picture to see interface.
  - c.Choose a long press image files, pop-up corresponding operation.

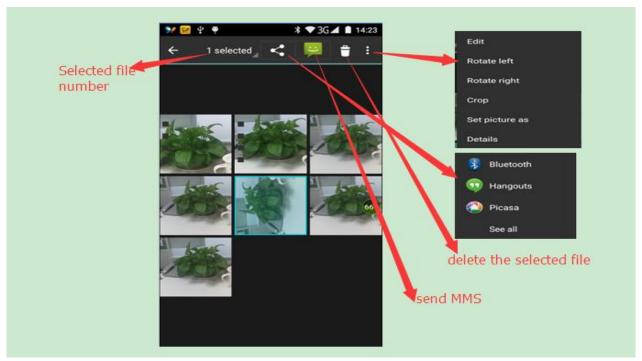

share photos

In long according to the selected folder or photos in picture viewer interface, choose to share. Methods include bluetooth, mail, and information sharing.

A. use email to send pictures: choose Gmail or E-mail, pictures will be automatically attached to the email. Write your information, and click send.

B. using information sending pictures: select information, images will be automatically attached to the MMS. Write your information, and click send.

C. use the bluetooth to send images: under the list of bluetooth, choose paired bluetooth devices, pictures to be transmitted via bluetooth.

see photo

In photos look at interface, sliding around on the screen, can be forward or backward view the photos edit pictures

A. color effects: no, stamping, restore ancient ways, white and black, drift in addition to silver shadows, instantaneous, latte, blue, edition print, negative impact

B. clip: straight, pruning, rotate, mirror

C. editor brightness: automatically adjust color, exposure, halation, contrast, shadow, nature saturation, sharpness, curves, hue, saturation, black and white filter

#### check pictures

In the photo view interface, on the screen or so slip, can forward or backward view photosEdit picture.

Edit light: Fill Light Highlights Shadows Auto-Fix.

Edit image effects : Cross-process Posterize Lomo Documentary and so on.

Color Effects: Warmth Saturation B &W Sepia Negative Tint Duo-tone Doodle.

Crop:Crop Red Eye Straighten Rotate Flip Sharpen.



## Clip pictures


- a. If you want to adjust the size of the clip, please hold the edge of the cutting tools. The arrow appears clip, from the trim your fingers inside or outside the center to drag, can adjust its size.
- b. If you want to adjust the big hours in the clip that keep proportion, please hold down any of the four corners of the one.

If you move to the clip of the picture area of the other, please hold cutting is internal, then move to drag the fingers to the position.

- shooting video
- 1) in a picture of a photo gallery, touch video album, and then choose the video you want to watch, you can start playing video.
  - 2.) the touch screen will display playback controls.
  - A. schedule control: dragging the control bar can be moved to any play point.
  - B. screen zoom button: press ratio play, full-screen playback, maximum play.
- C. suspended or continue to play: play when click pause video, pause when click continue to play the video.
  - View images
  - 1) In the picture interface, touch photo album to view images.
  - 2) Touch the thumbnail to view pictures on full screen.

You can choose to display small or large thumbnails. Hold down the screen towards the left side to view the next photo or towards right to view the previous one.

In the photo album or list, press and hold down the picture towards left to view the next picture, or towards right to view the previous one.

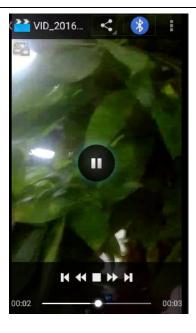

## 17. Music

The Tablet PC can play digital audio files in memory card. The following formats are available: AMR, M4A, MIDI, MP3, WAV, OGG.

## Open Music

Press home, touch the label of applications, touch music. Then the interface of Music Media appears.


#### Music Media

Your music files are classified according to the following four categories: Artists, albums, songs and play lists. Touch one of these categories; you can view the list inside.

The right display the current playback mode, looping, random play or lined up to play, etc.

The progress bar at the bottom of the can control the broadcast schedule, and can be shown in the queue to realize fast forward fast rewind, and so on.

Continue the operations, until your wanted music appears. Such as, if you choose Artists a list of artists sorted by the numbers in English will appear. Choose any on to open the list, then all the albums and songs will appear. Select one album, then the songs in it will be played.

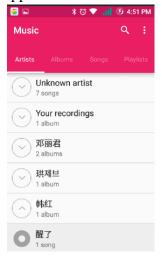

Tips: You can play all of the songs in the interface of music media, in random sequence . Press Menu, and then touch the Party Shuffle. Then will start playing the first song randomly selected . To close the Party Shuffle, press Menu, then touch to turn off the Party Shuffle.

a. the Menu button > party shuffle

Tip you can in the music library or play screen, all songs in the broadcast media library in a random order. Press the Menu button, and then touch party shuffle. Will start playing randomly selected from the first song. If you want to close the party random broadcast, please press the Menu button, then touch close party shuffle.

b. the Menu button > add to the playlist

Add the current playing song playlists to users.

c. the Menu button > Use as ringtone

Set the current song into a cell Tablet PC rings


d. the Menu button > delete

Delete the current playback songs, and permanently removed from memory.

e. the Menu button > library

Back to music main screen



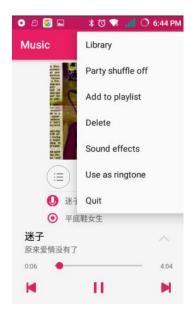

### build playlists

- 1) touch music library on any of the categories.
- 2) in the list, can hold the screen up and browse to the new you want to play lists of the artist, album or song.
  - 3) hold the artist, album or song, and then touch the options menu is added to the playlist.
  - 4) is added to the playlist window, touch the new playlist.
  - 5) enter the name of the new playlist, and then touch save.

#### manage playlists

Enter the music library, then touch the playlist.

- 1) if you want to play songs in the playlist, please touch the name of the playlist.
- 2) if you want to delete the playlist, please hold the playlist, then deleted the touch.
- 3) if you want to rearrange the song in the list of songs or remove, please hold the playlist, then touch the options menu editor.
- 4) to delete a playlist of songs, please hold down the songs, and then touch is removed from the playlist.
- 5) if you want to rename playlists, please hold the playlist, then touch the options menu to rename. Enter the new playlist name, and then touch save.
- 6) if you want to set songs into a cell Tablet PC rings, and then the touch menu as a cell Tablet PC rings. The song will be set to the default ringtone.

## 18. Calender

Calendar program, main interface

Enter the calendar program, use white color on the surface of the month or perimeter to highlight on the same day, the default to display this week.


In the calendar interface, click the small arrow years the lower right corner, four kinds of display mode:

- 1), interface display on the day of the schedule on the month or perimeter use white to highlight on the same day.
- 2) week interface shows the schedule for this week (click date) recently about sliding according to weeks turn pages.
- 3) on the interface display and month schedule (date) recently click slide up and down can flip on a monthly basis.
- 4) schedule interface shows the schedule for a certain time space (click can see forward initial time point, click can see back end time point).
  - · new activities
  - 1) click the MENU button > new activities.
  - 2) in the event details box Enter the name.

Note: if special occasions, such as birthday or a whole day's activity, set the options as throughout the day. Such as activity is in a certain period of time, select the start time and end time.

- 3) enter the activity location, illustration, invited object, repeat, remind of time.
- 4) click on to complete the return to the calendar.

Note: all the title of the event is displayed in the calendar. There will be no calendar time period show.

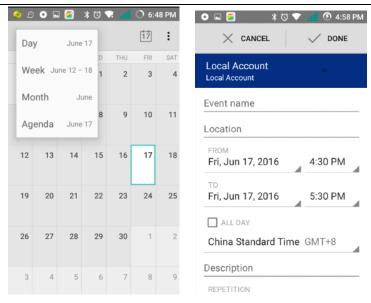

## 19.FM Radio

#### FM Radio

Through this program, you may listen to FM radio on the device, FM radio use the wired headset as an antenna to receive signals, before opening this program ,you can install the original equipment-headTablet PCs, when listening, you can switch it manually to speakers or the mode with wired headTablet PCs.

Open FM radio



Touch this label


to open the application of FM radio.

- 1) Click on the "search", automatic scanning search FM channel, and channel in list interface, list all channels
- 2) Click "FM recording", listening to the radio to the current can be recorded. The tape recording to default file name can be arbitrary well-preserved input filename. Save to FM recording the default file.
  - 3) Click "exit" closed FM radio, cannot listen to in the background.
  - 4) Must be insert cable headTablet PCs as antenna, but click on the horn button, can put the FM radio.
- 5) Click on the frequency of the rear of the five-pointed star icon, channel was added to the collection channel list.

#### Listen to FM radio background

Click to return to key, the radio program moved to the background, right now you can still continue to listen to the show, and can also carry out any other program.

User Manual

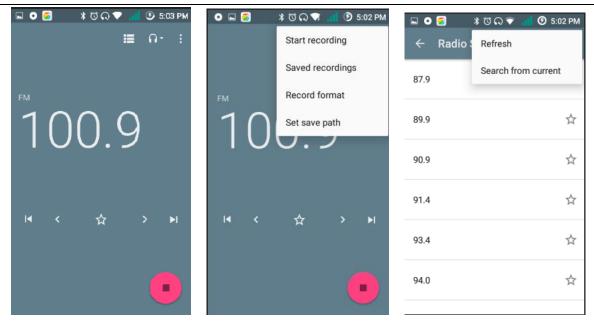

# 20.Settings

Your service provider may default some device settings, so you may not be able to change these settings.

Wireless & internet



1) Flight mode Touch to open or close.

Wi-Fi and Wi-Fi settings Touch Wi-Fi

Open Wi-Fi, it can search for available networks automatically, networks without password can be used directly, others need to enter the password first.

Notice: Open Wi-Fi then the flight mode, Wi-Fi will close automatically; Open flight mode then connect Wi-Fi, it can be used normally.

# •Bluetooth

Bluetooth switch and setting up the touch bluetooth open, will automatically be search nearby bluetooth open the equipment.

# •SIM cards

Touch can choose the SIM card or stop using a SIM card

The default SIM card, can choose a voice call, information, and choose which SIM CARDS to use data connection, SIM choose set up call and information

## Data usage



1. Data usage set up mobile data traffic limit, flow more than limit will be close mobile data services.

#### More

Wireless & networks

- a. Airplane mode
- b. Default SMS app
- c. VPN
- d. Tethering&portable hotspot
- e. Celluar networks

#### Device



a.Brightness level

evel Adjust the screen brightness

b. wallpaper Can the wallpaper gallery, gallery program or dynamic library set in the

mobile Tablet PC wallpaper wallpaper

c.Sleep Adjust the delay before the screen automatically lock.

d.Font size Set the font size of the system e.When device is rotated Rotate the content inside

 
# • Audio Profiles



This option gives the Tablet PC tones' settings under the status of receiving calls or notification. Including: Vibration, volume, ring tones, ring tones notification and feedback (Button operation tone, select Sound, screen lock tone, touch) .To adapt every environment.

- 1) Select "General / Slient / Vibration / Outdoor, Touch the spot on the right, when turns green ,it opens.
- 2) Volume: Including the ring volume and alarm clock settings, you can manually slide to select.
- 3) call: voice Tablet PC ring, video Tablet PC ring
- 4) notifications: default notification sound

# • Storage &USB



- b. Can Unmount SD card or Erase SD card.
- c. Can choose the default memory.



#### • Apps

- a. management application and delete installed applications.
- b. the running services Click on the 'stop' running services, confirmed the service disappear from the list of "running" service.

# • Battery



Boot time that use and each module to use power in general

#### **Personal**

# •Location



- Use wireless to find locations in the application (Google map). 1) Use wireless Touch it to open or close
- 2) When using the GPS satellite positioning, set accuracy to street level(cancel it to save battery). Touch it to open or close
  - 3) GPS EPO assistance, use GPS assistance data(EPO) to speed uo GPS poditioning
  - Use auxiliary data can accelerate the process of GPS positioning. 4) A-GPS Open it and remind you "it produce GPRS flows when using A—GPS".



- 1) Screen locks Use Pattern, PIN or password to lock the screen.
  - a. Touch "images", the first time there will be a simple unlock instructions and examples, click "next step" to continue the step "make the unlocking image" •
  - b. Touch PIN Enter PIN numbers to unlock the screen.
  - c. Touch password Set password to unlock the screen.
  - d. Touch "no" Stop this application.
- Set up SIM card lock Enter (4-8numbers) PIN to set the lock of SIM.

SIM card PIN (Personal Identification Number) is to prevent unauthorized use of SIM cards.PIN code provided with SIM. The service provider gives the initial value.

Change a blocked PIN code, you need to open the "SIM Lock", then go to Change Password screen, the Tablet PC will automatically prompt enter the old PIN code and asked to enter a new PIN code twice, finally the Tablet PC will prompt that change the code successfully. If you enter the PIN with error for three times, SIM card PIN codes will be automatically locked, PUK codes is usually supplied with SIM card. If no, you should go to the service provider for the codes.

If you enter 10 times wrong PUK code, the SIM card will be permanently locked.

3) Make password visible Password visible when enter it

4) Device administration Add or delete device manager.

Allow application visit security credentials or other credentials. Use security credentials

Install from SD card Install the encrypted certificate from SD card.

Clear credentials Clear all the contents of the certificate store and reset their passwords.

8). Unknown sources Allow to install non-electronic market applications

# • Accounts



Add account

- a. Corporate
- b, IMAP
- c. Google
- d. Personal(IMAP)
- Personal(PoP3)

#### f. POP3



# • Languagesand &input

1) Selecting Language District

Include all the languages on the Tablet PC and totally amount of 12 kinds.

2) Custom Dictionary

Add words to custom dictionary or delete.

3) Keyboard Settings

Vibrating when buttons are pressed, Playing sound when buttons are pressed, Capitalizing automatically, Speech Input(by microTablet PC on the keyboard), Inputting words(speech can be altered by sliding finger on space key), Displaying tips(activate predictive function when you input words); Auto-Text(Automatically input certain words when press space key or specified keys)

4)Input method

you can select Android keyboard or google pinyin input method.

# Backup & reset



2) Resetting to Factory Settings, Clear all data stored on the Tablet PC.

# **System**



#### • Date & Time

1) Automation data & time Use date and time provided by Network.

2) Setting date Touch "+" and "-" to set date.

3) Selecting time zone Select Time Zone according to where you are. For China please

select "GMT+08:00, China Standard Time".

4) Setting Time Touch "+" and "-" to set time.

5) Use 24-hour format ON/OFF

6) Select Date Format There are 3 kinds of formats you can choose from: Month-Day-Year,

Day-Month-Year and Year-Month-Day, among which

Year-Month-Day is the default setting.

#### • Timer Switch Machine



You can set time of boor or shutdown by touching it, You may also select to repeat it or a certain day during a week.

# Accessibility



- 1) Large text
- 2) Power button ends call: According to the "power" button to end the call to open, call, press the "power" will end the call and not shut down the screen
- 3) Auto-rotate screen
- Speak passwords
- 5) Touch & hold delay

 
# • Printing



Can search a printer for printing

# **Developer** options

- a. USB Debugging: USB debugging only for development and USB disk.
- Stay awake: Screen will never sleep while charging.
- Pointer location
- d. Show touches
- Show screen updates
- Show CPU usage
- Force GPU rendering
- Window animation scale:
- Transition animation scale
- Don't keep activities
- k. Background process limit
- Show all ANRs



You can check the information on status bar and remaining power.

#### 21. Notices for the use of Tablet PC

### 1.Safety Notice

If your Tablet PC is lost or stolen, please immediately inform the telecom department or commission agents of forbidding the use of SIM card, so that avoid the economic loss caused by false calling of others.

When you contact with telecom department or commission agents, they need to know your Tablet PC IMEI number (printed on the label on the back of the Tablet PC and can be found after taking down the battery). Please copy the number and keep it safe for future use.

In order to use the Tablet PC more safely, please adopt preventive measures, for example: set up the PIN code of SIM card, PIN code can prevent your SIM card from being used by others without permission. When leaving the car, please don't place the Tablet PC in a place easy to be seen, you had better to carry with you or lock in the suitcase.

### 2. Safety Alert and Cautions

Before using the Tablet PC, please read these cautions carefully so that make sure to use the Tablet PC correctly.

# 3.1 Cautions of Using the Tablet PC

Don't take down or modify the Tablet PC; otherwise it may cause the damage, leakage and circuit failure of the Tablet PC.

Please don't knock the LCD by force or use the LCD to knock other things; otherwise may cause the damage of liquid crystal plate and the leaking of liquid crystal. If liquid crystal enters the eyes, it may damage eyesight. At this time, please rinse the eyes immediately with clean water (don't rub the eyes), and see a doctor immediately.

In very rare cases, if the Tablet PC is used in some types of vehicles, it may have bad effect on the electronic equipments in the vehicle. At this time, please don't use the Tablet PC for fear of losing the safety guarantee.

If your vehicle is equipped with the air bag, please don't place the Tablet PC above the air bag or the area that can be touched after the air bag is swelled, for fear that the Tablet PC is applied very strong external force and cause serious damage on the vehicle owner when the air bag is swelled.

Please don't touch the key-stoke using needles, pen nibs and other sharp objects; otherwise it may damage the Tablet PC or cause mis-operation.

If the antenna is damaged, please don't use the Tablet PC; otherwise it may cause the personal injury.

Don't make the Tablet PC approach to the magnetic card and other magnetic objects too closely; radiation wave of the Tablet PC may clean out the information stored in the floppy disks, stored value cards and credit cards.

Please place the drawing pin and other small metal objects in the place that far from the headTablet PC of the Tablet PC. The loudhailer is magnetic when it is working and will attract these small metal objects so that may cause personal injury or damage the Tablet PC.

Avoid Tablet PC damping, prevent water and other liquid from entering the Tablet PC, and then cause short circuit, leakage or other failures of the Tablet PC.

Please use the Tablet PC in the place that far from fixed teleTablet PC, TV, radio and office automation equipments, for fear that it may affect the using effects of these equipments and the Tablet PC.

### **3.2**Cautions of Using the Battery

Please don't take down or modify the battery; otherwise it may cause liquid leaking, overheat, explosion or fire breakout of battery.

Don't throw the old battery into general life rubbish. Treat the battery according to the regulated indication in the place that definitely regulates the waste battery treatment.

Please don't throw the battery into the fire otherwise it may cause the fire breakout or explosion of the battery.

When installing the battery, don't apply pressure forcefully; otherwise it may cause liquid leaking, overheat, explosion or fire breakout of the battery.

Please don't make the battery short circuit using the electrical wire, needle and other metal objects; don't place the battery, necklace and other metal objects together; otherwise it may cause liquid leaking, overheat, explosion or fire breakout of the battery.

Please don't solder the battery contact; otherwise it may cause liquid leaking, overheat, explosion or fire breakout of the battery.

If battery liquid enter the eyes, it may damage eyesight; at this time, please don't rub the eyes using the hand, please rinse the eyes with clean water, and then see a doctor immediately.

Please don't use or place the battery near the fire or oven and other high temperature places; otherwise it may cause liquid leaking, overheat, explosion or fire breakout of the battery.

If the battery is increasing the temperature abnormally, color change, distortion and other phenomena during the using, charging or storing process, please stop using it and then change new battery.

If leaking liquid of the battery contacts with the skin and clothing, it may cause skin burn, please rinse it with clean water immediately, and see a doctor if necessary.

If the battery is leaking liquid or giving out strange odor, please take the battery away from open fire immediately, avoid fire breakout or explosion.

Please don't make the battery damp, otherwise it may cause overheat, smoking or corrosion of the battery.

Please don't use or place the battery under direct sunlight and other high temperature places, otherwise it may cause liquid leaking or overheat, reduce the performance and shorten the service life.

Please don't charge the battery continuously for more than 24 hours.

Please place the battery in the cool and ventilated place away from direct sunlight.

Service life of the battery is limited. Service time of the battery is gradually shortened after the frequent charging. If many times of charging is failed, it means that battery life is drained, please replace the new battery of designated type.

## 3.3Cautions of Using the Charger

Please don't take down or modify the charger; otherwise it may cause personal injury, electric shock, fire breakout or charger damage.

Please use 220V alternating current. Using other voltage may cause leakage, fire breakout and damage the Tablet PC and the charger.

Short circuit of the charger is forbidden; otherwise it may cause electric shock, smoking and charger damage.

Please don't use the charger when the power cord is damaged; otherwise it may cause fire breakout or electric shock.

Please clean the dirt that accumulates in the power socket in time.

Please don't place the water container, and etc. near the charger, for fear of water splashing and then cause short circuit, leakage or other failures.

If the charger contacts water or other liquid, please cut off power supply immediately, so that prevent short circuit, fire breakout, electric shock or charger failure.

Don't use the charger in the bathroom and other high humidity places; otherwise may cause electric shock, fire breakout or charger damage.

Please don't contact the charger, electrical wire and power socket with wet hands; otherwise it may cause electric shock.

Don't place heavy object on the power cord or reconstruct the electrical wire; otherwise may cause electric shock or fire breakout.

Please pull out the charger plug from power sockert before the cleaning and maintenance.

Seize the charger when pulling the plug, pulling the power cord will damage the electrical wire, cause electric shock or fire breakout.

Don't charge in the following places: direct sunlight and other high temperature places; wet and ashy place or the place with large vibration (will cause failure); near TV, radio and other home appliances (will affect the image and sound effects).

#### 3.4. Security Password

#### 3.4.1 PIN

PIN (Personal Identification Number) is used to prevent your SIM card from being used illegally. PIN is usually provided with SIM card together. If you input wrong PIN for continuous three times, please input PUK to unlock it. Please contact with network operations company for more details.

#### 3.4.2 PIN 2

You need to input PIN2 when entering some functions (such as call charge); if you input wrong PIN2 for continuous three times, you need to input PUK2 to unlock it. Please contact with network operations company for more details.

#### 3.4.3 PUK

When changing the locked PIN, you need to input PUK (Personal Unlock Key). PUK is provided with SIM card together. If it is not provided, please contact with your service provider. If you input wrong PUK for continuous ten times, the SIM card can't be used again. Please contact with your service provider to buy a new card. You can't change PUK. If you lose the code, please contact with your service provider.

#### 3.4.4 PUK2

When changing the locked PIN2, you need to input PUK2. If you input wrong PUK2 for continuous ten times, you can't use the functions that need PIN2. Please contact with your service provider to buy new card. You can't change PUK 2. If you lose the code, please contact with your service provider.

## 3.5. Cleaning and Maintenance

Please don't use the Tablet PC, the battery and the charger in the bathroom and other high humidity places, and prevent them from rain.

Please clean the Tablet PC, the battery and the charger by using soft and dry cloth.

Please don't wipe the Tablet PC by using alcohol, thinner or benzene and other chemical reagents.

The socket with dirt may cause poor contact and power-off, so that it can't be charged, please clean it regularly. ference received, including interference that may cause undesired operation.

# 22. FCC Information

#### FCC RF EXPOSURE INFORMATION:

WARNING!! Read this information before using your phone

In August 1986 the Federal Communications Commission (FCC) of the United States with its action in Report and Outer FCC 96-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards. Use only the supplied or an approved antenna. Unauthorized antennas modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

#### **BODY-WORN OPERATION:**

This device was tested for typical body-worn operations with the back/front of the phone kept 0mm from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0mm must be maintained between the user's body and the back/front of the phone, including the antenna. Third-party belt-clips, holsters and similar accessories containing metallic components shall not be used. Body-worn accessories

that cannot maintain 0mm separation distance between the user's body and the back/front of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

For more information about RF exposure, please visit the FCC website at www.fcc.gov

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

<ansices.1> (1992) / <ncrp Report 86> (1986) / <ICNIRP> (1999)

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1). Nevertheless, we

recommend that you use a hands-free kit with your phone (such as an earpiece or headset) to avoid potential exposure to RF energy. The design of your phone complies with the FCC guidelines (and those standards).

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

#### **NORMAL POSITION:**

Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

RF Exposure Information:

This product is compliance to FCC RF Exposure requirements and refers to FCC website https://apps.fcc.gov/oetcf/eas/reports/GenericSearch.cfm search for FCC ID: 2ALTE-SC706 to gain further information include SAR Values.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help

Do not use the device with the environment which below minimum -10  $^{\circ}$ C or over maximum 50  $^{\circ}$ C, the device may not work.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Ad Hoc function is supported but not able to operate on non-US frequencies.