

# **User Manual**

## **Model: I04**

# 1. Introduction to Phone

## 1.1 Appearance



## 1.2 Phone Use and Preparation

### 1. Battery charging

Charge the battery before using the Phone for the first time.

2. Use the charger and data line authorized by our company only. Unauthorized charger or data line may lead to battery explosion or damage your device.
3. If the battery power is used up, even if the device is being charged, the device cannot be started. Before attempting to start the device, let the used up battery be charged for several minutes.
4. After connecting power source to the power adapter, insert it into the right power source interface of the device, and it can charge your device.

5.USB charging: Connect one end of the USB data line to the USB power source (standard power source such as computer, and power adapter), and then insert the other end of the USB data line into the USB interface of the device.

### 1.3 Phone Status and Notice

	Mail notice		Mute
	Gmail notice		No SD card is inserted
	Computer and Phone is connected through USB line.		Uploading/downloading
	Things to be done		Download is completed.
	Start alarm clock		General notice (such as synchronization error)
	Music is being played.		More
	Data is being synchronized.		Battery mark
	SD card space is insufficient.		Battery is being charged.
	WIFI service is connected and network is available.		Flying mode
	GPS positioning		Bluetooth is connected.
	3G service is being connected and data is being exchanged.		SIM card information, roam, and no signal
	Dial/receive		Reject the call

### 1.4 Key Functions


#### Descriptions on Key functions:

Power Source key	<ul style="list-style-type: none"> <li>● Long press this key to start</li> <li>● In start status, long press this key to pop up the Close option.</li> <li>● In start status, press this key to close the screen.</li> </ul>
------------------	--

	<ul style="list-style-type: none"> <li>● In start status or when failure occurs to the machine, long press the Power Source key for 7 seconds to let your device enter the Close status.</li> </ul>
Volume	<ul style="list-style-type: none"> <li>● Press Volume+ to turn up the volume, Volume- to turn down the volume</li> </ul>

## 1.5 Start screen in close status

If the screen is in close status, you can short press the power source key or long press the return key to start the screen. After the start, the screen enters lock status, use your finger to press and hold “Lock” icon and slide toward right to unlock the screen.

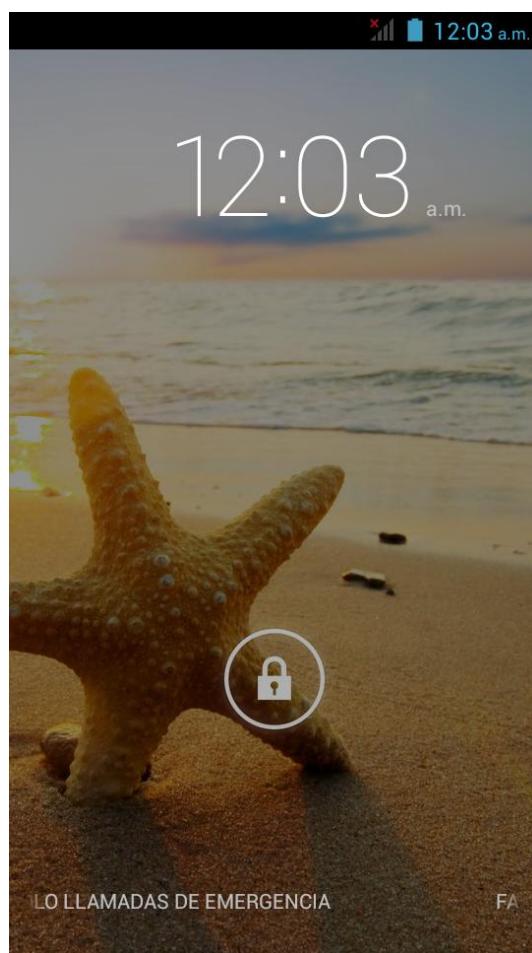

**Figure 1-7**

## 1.6 Use of Touch Screen

### Operation modes in the Phone

There are multiple methods to view the home screen, menu and application programs on your Phone.

### Choose by pointing

When you want to use screen keyboard to input information and choose items on the homepage interface such as application programs, you only need to point with your finger.

### Press and hold

If you want to start the available option of a certain item (such as text box or link in the webpage), or move the shortcut and the main program menu on the homepage interface, you only need to press and hold this item.

### Quick slide or slide

Quick slide or slide means using finger to make quick vertical or horizontal drag action in the picture.

### Drag


Before beginning to drag, you must use your finger to press, hold, and apply certain pressure and do not loosen your finger before you drag the item to the position you desire.

### Rotation

Regarding most pictures, you only need to rotate the Phone sidewise, and the screen can be automatically turned from horizontal to vertical direction, such as the cases when you input words and see a movie.

## 1.7 Homepage Interface

The main menu screen will display all the application programs on the native computer. You can use the application programs, shortcut and customize the wallpaper of your homepage interface.

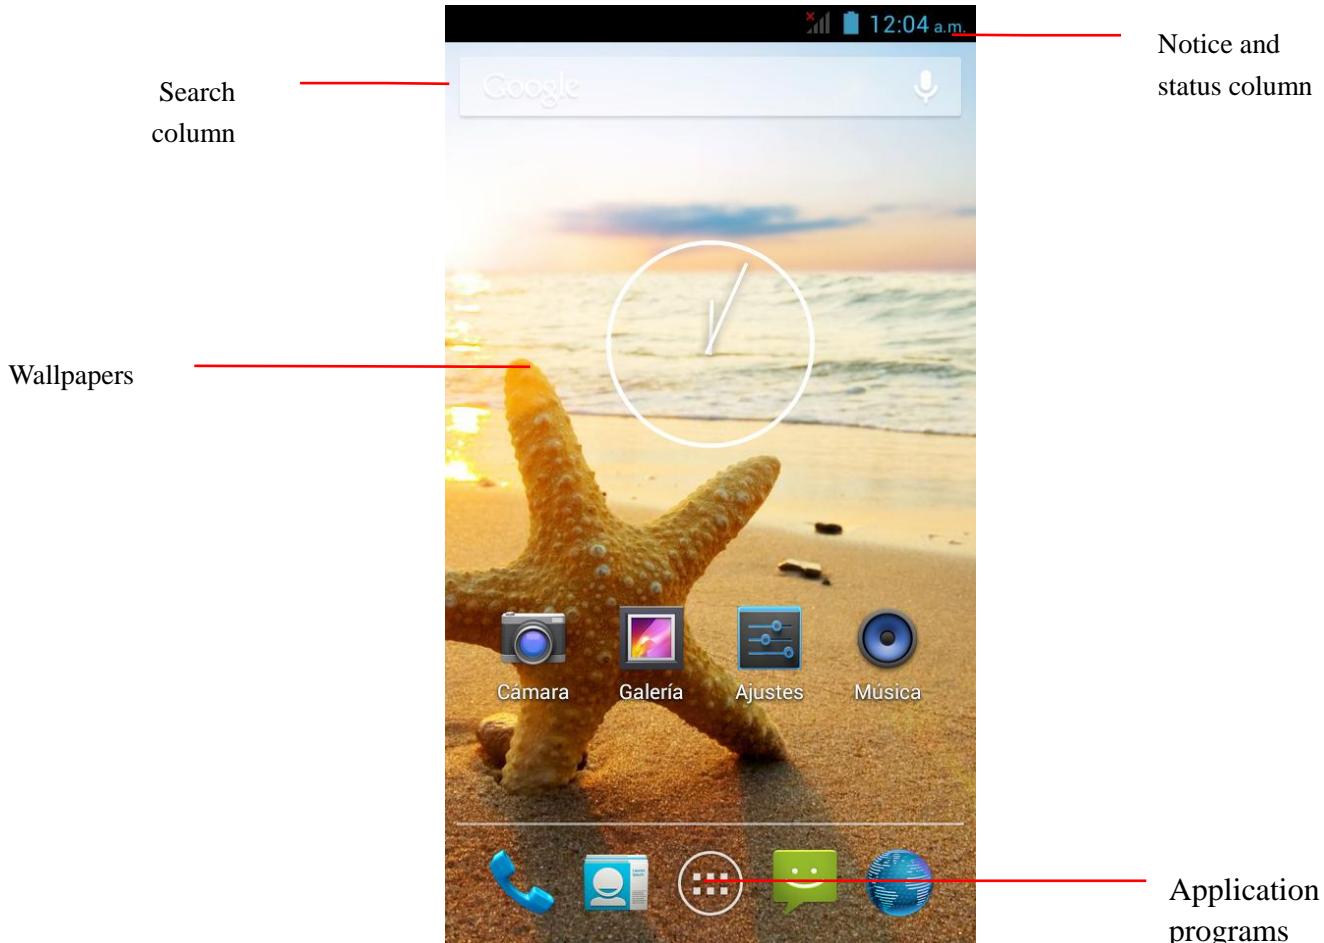

**Figure 1-8**

**Skill:** In any application programs, it is possible to press the Homepage key to return to the homepage interface.

## 1.8 Conversation Function


### Dial phone calls

You can dial a phone call through the dial application, or choose a number from contact person application for dialing. When you are in a conversation, you can click the key to use other functions. If you want to return to the phone call interface, slide the status column downward and click the current conversation.

※When dialing or receiving a phone call, do not contact or touch the receiver and the loudspeaker to avoid influencing the conversation quality.

Dial a phone call through dialing application.

1. On the main screen, click and choose the application program, and dial to open the phone call application.
2. Click the digit key to input the phone call number.
3. Click the dial icon to dial a number.

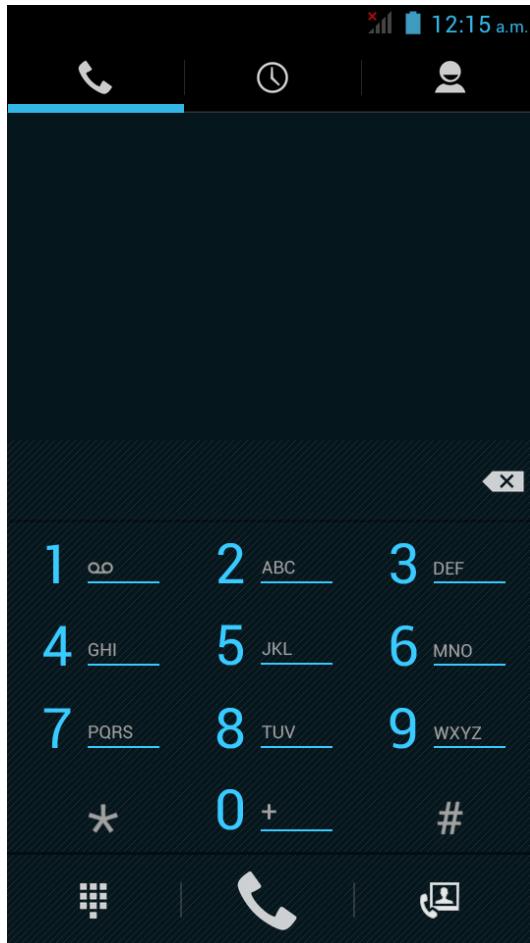

**Figure 1-9**

Dial a phone call through contact person.

1. On the main screen, click and choose the application program, and the dial to open the phone call application.
2. Click the contact person icon to the contact person tab, and click a contact person to dial a phone call.

Dial a phone call through conversation record

1. On the main screen, click and choose the application program, dial to open the phone call application, and switch to the conversation record tab.
2. Click the key on the right side of the conversation record to dial this number.

### **Receive or Reject a phone call**

Receive a phone call

When there is an incoming phone call, drag the phone call icon toward the right to receive a phone call.

End a conversation.

In a conversation, click the Hook-on icon to end the conversation.

Reject an incoming call.

When there is an incoming phone call, drag the phone call icon toward the left to reject the phone call.

※ You can also drag it upward to the short message icon, reject the phone call and send a short message to the caller.

## 1.9 Access Application Programs

### How to access the application programs of the Phone:

1. Click the application program menu, as shown in Figure 1-10
2. Choose the application program to be accessed.
3. When wanting to exit from the program interface, press Return key to return to the preceding interface or press Homepage key to directly return to the homepage interface.

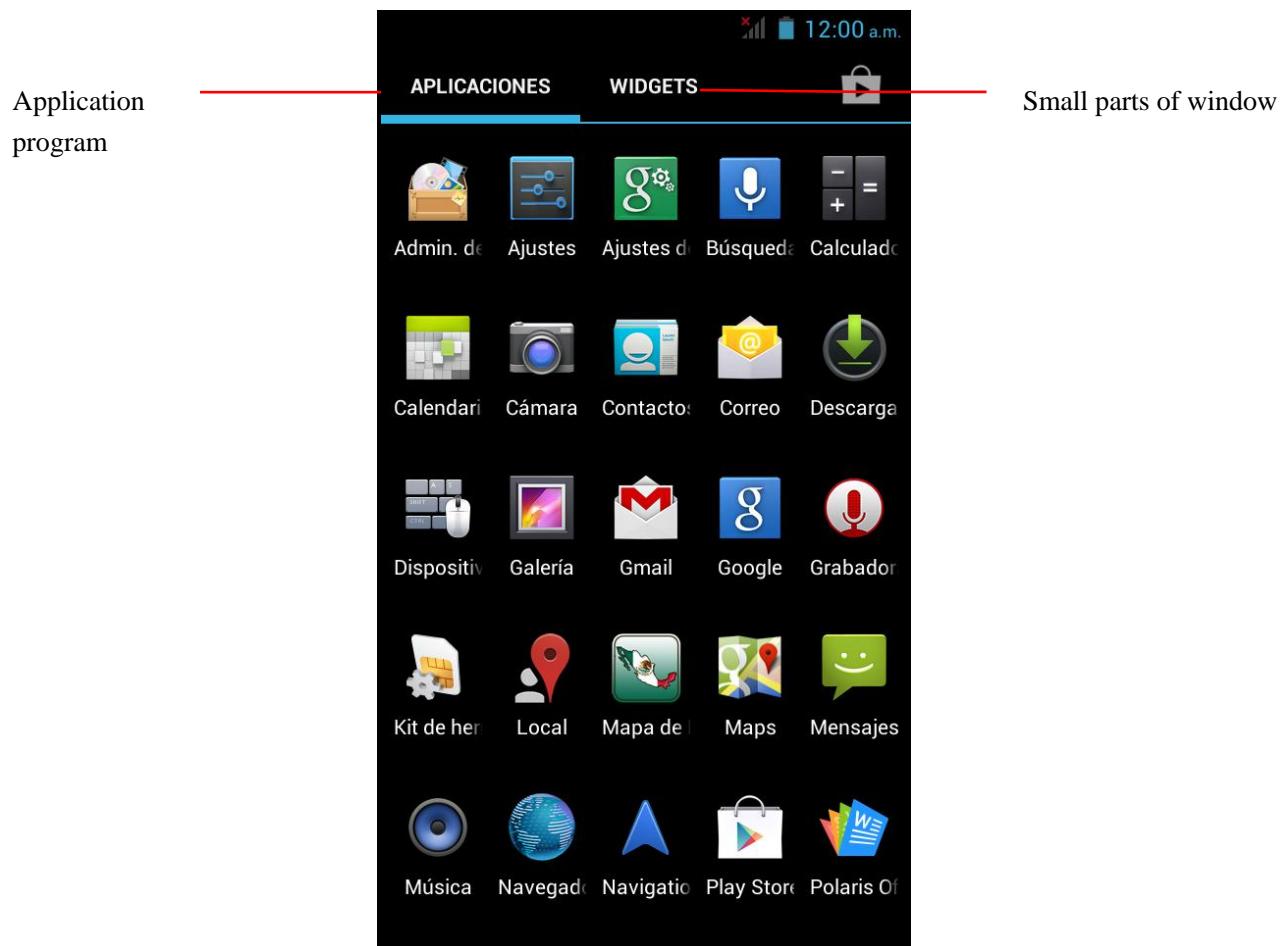


Figure 1-10

## 1.10 USB Connection

### Phone Storage Setting

Before transmitting the file, you must firstly set up storage mode for your Phone:

1. Use USB transmission line to connect the Phone and the computer. A notice prompt will appear in the notice column.
2. Click status column, and status column option appears.
3. In the status option, click and choose **USB connected**, and then click and choose

### Open USB Storage Device.

4. At this time, the USB is connected successfully.



Figure 1-11

### Copy the file to the storage card

1. Use the USB cable to connect the Phone and the computer.
2. After **setting up according to the storage of the Phone**, it connects to the computer successfully.
3. Open your computer to check the content in “Removable Disk (x)” in **My Computer**.
4. Find the file you want to copy and copy it to “Removable Disk (x)”.

5. After the copy is completed, click “Delete Hardware Safely” in Your Computer Task column for unloading.

### **Content of Phone Storage Device**

1. NAND FLASH storage device and the Phone themselves serve as the space for storing files.
2. TF mobile storage card.
3. Both of the abovementioned two types of storage device can connect your computer through the USB for access.

Attention: When your Phone is connected to the USB cable, if you have enabled the **USB storage device**, you can access the storage card through the Phone. If you want to access the storage card in the Phone, you only need to disconnect the USB cable.

## **1.11 Storage card**

### **Copy the file to the storage card**

You can transmit files between your Phone and the computer, such as music and picture. When wanting to check the files in your Phone, you only need to click and choose the file browser, and you can browse the contents in the SD card.

### **Delete file on the storage card of the Phone**

1. Find the file you want to delete.
2. Press and hold the filename you want to delete, and a file menu pops up.
3. Click and choose **Delete**.

### **Remove storage card in the start status of the Phone**

If you need to remove the storage card in the start status of your Phone, you must firstly unload the storage card in order to avoid storage card failure or damage.

1. In the homepage interface, press Menu key, and then click and choose **Setting**.
2. Drag Setting menu downward, and then click and choose **Storage**.

## **1.12 Input Words**

### **Use screen keyboard**

When you start the program or choose the text box into which you need to input words or numbers, the screen keyboard appears. For the keyboard, there are the following input methods available for choosein:

1. Android keyboard
2. Third party input method (users can install it by themselves)

## Choose the input method you want to use

According to pre-setting, the Phone will display Android keyboard when you want to input words.

1. In the homepage interface, press Menu key, and then click and choose **Setting**.
2. Click and choose **Language and keyboard**.
3. In the text setting area, all input methods already installed in your Phone are listed out.
4. Add a tick after the input method you need.

## Use and switch input method

1. On the words input interface, click the keyboard icon under the status column till Edit text menu pops up. Then click and choose the input method.
2. Choose the input method you need.

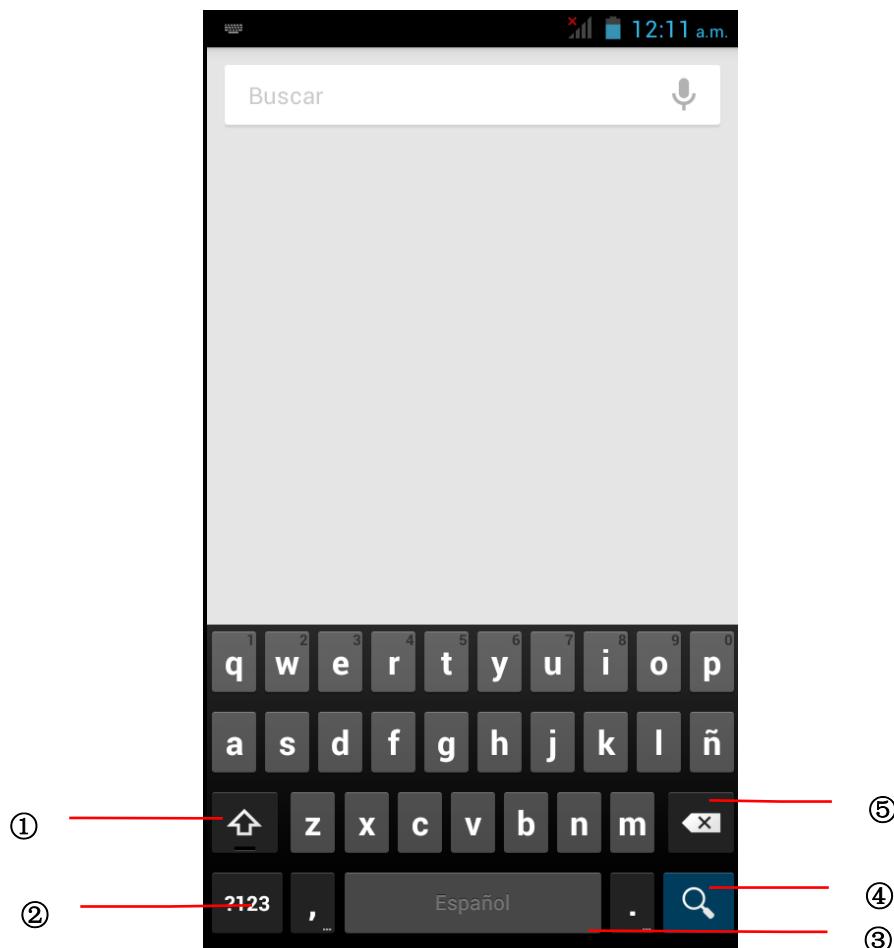


Figure 1-12

1	Switch inputting uppercase and lowercase.
2	Switch words input mode and sign/number input mode.
3	Blank space can be inserted by clicking and choosing.
4	Enter can be executed by clicking and choosing.
5	By clicking, choosing, pressing and holding, it is possible to delete the character on the left of the cursor.

## 2. Create Connection

### 2.1 WIFI connection

Your Phone can connect to the Wi-Fi network, and the connection operation is:

1. On the homepage interface, click and choose Menu key to pop up Setting menu.
2. Click and choose **System setting**.
3. Click **Wi-Fi** to open the wi-fi switch.
4. After Wi-Fi is open, the device in the window on the right automatically scan out the searched Wi-Fi network.
5. Choose the Wi-Fi network you want to connect. If it is encrypted, a window pops up for inputting password. Input the corresponding password.
6. Click **Connect**.

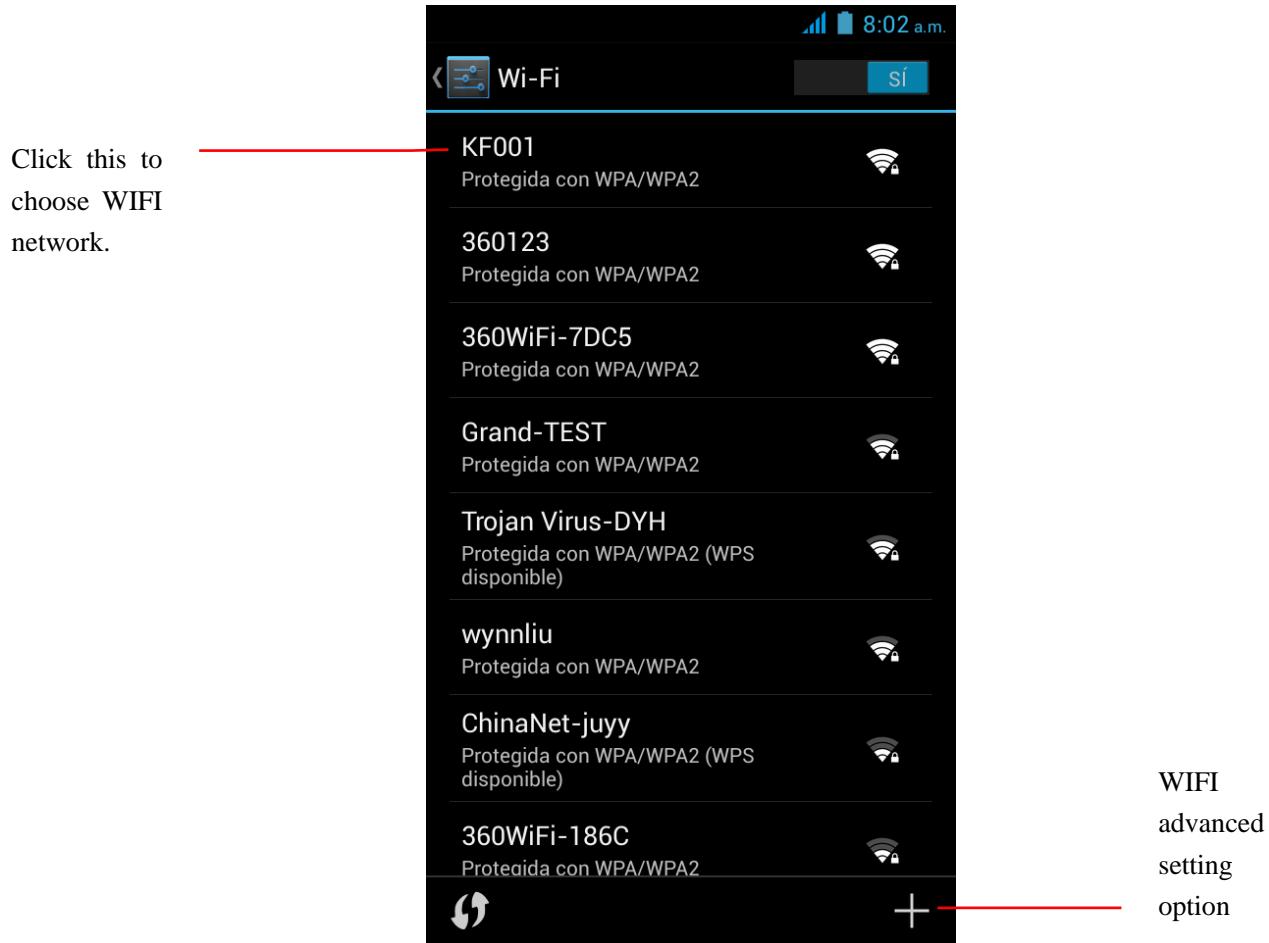


Figure 2-1

## 2.2 Bluetooth connection

### Bluetooth functions:


1. You can exchange files between 2 Bluetooth devices. You can exchange files with other computer, mobile phone call and so on.
2. You can connect to mobile phone call, pad, and notebook PC that support Bluetooth.

### Use Bluetooth functions (as shown in Figure 2-2):

1. Setting steps for entering Bluetooth: Settings -> Bluetooth setting, open Bluetooth device.
2. Device name: Click Settings option, choose Rename Phone.
3. Detect ability: Click the place at the name of Bluetooth device, and this function can be opened, which indicates your Phone Bluetooth can be searched by other Bluetooth devices. The default time of this opening is 120 seconds.
4. Scan to search for device: By using this function, you can detect the device you want to connect.

5. Bluetooth devices: After you have scanned to search for the device, the Bluetooth devices your Phone has searched will be displayed under this function.

Click this to open and detect function.

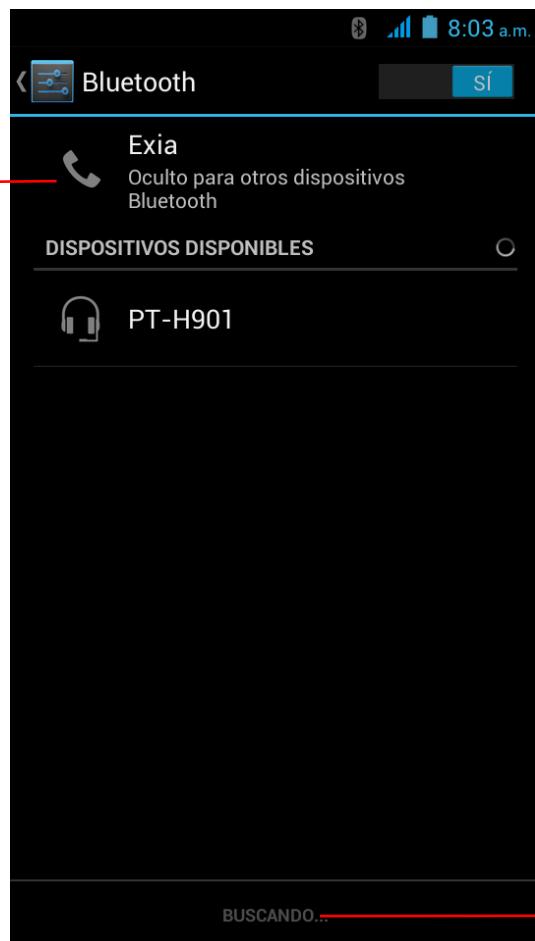

**Figure 2-2**

Click this to scan and search for devices.

## 2.33G connection

1. Insert the corresponding SIM card in the close status.
2. Start and enter the main interface of the system, click and choose **menu key**.
3. Click and choose **Settings**.
4. Click and choose the option **More**, choose **Enable Data access over Mobile network**, and in several seconds, you see the SIM signal icon light up on the notice column.
5. After several seconds, your Phone can be connected to the 3G network



Figure 2-3

### 3. Other main Application

#### 3.1 Camera

##### Picture taking function

1. Click and choose **camera**.
2. The system enters the camera interface.
3. Click and choose **Take a picture** button, and a picture can be taken with ease.
4. Can also set functions such as picture size, storage position, white balance and focal length setting.
5. A preview thumbnail is displayed after the picture is taken.


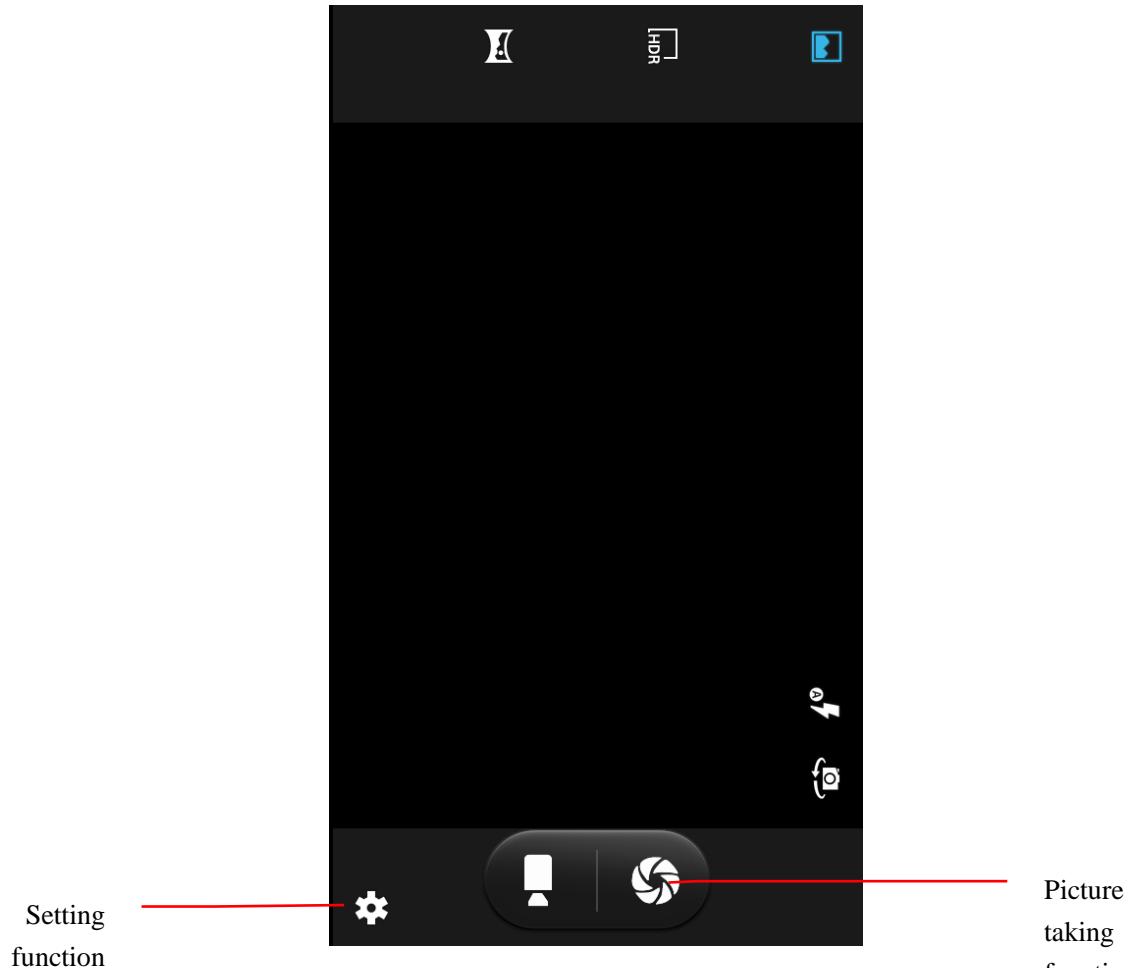


Figure 3-1

### Video recording function

1. Click **video recording** icon, and switch to video recorder mode.
2. Click and choose red **Video recording** button, and video can be recorded.
3. Can also set functions such as color effect, white balance and video picture quality.
4. Click and choose **Video recording** button again to end video recording, and can see previewed video.

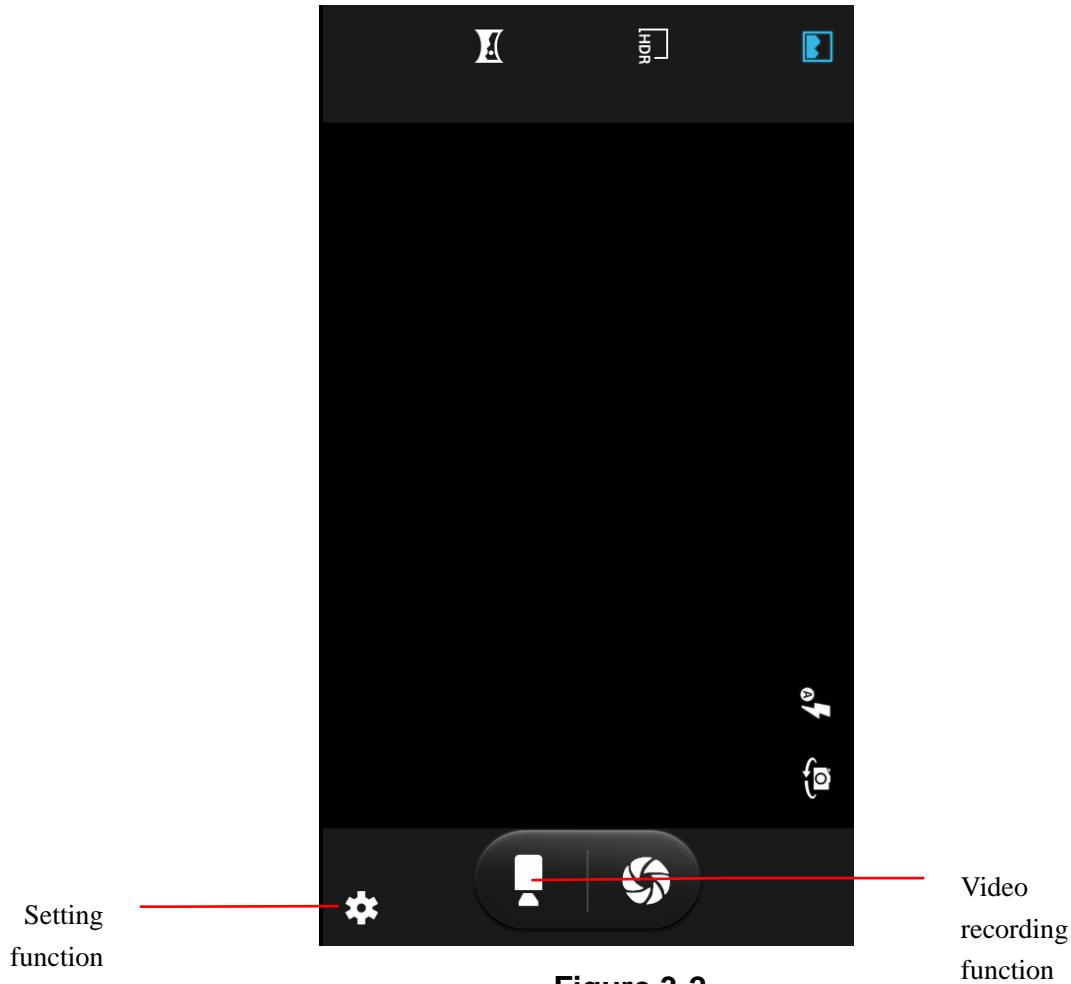

**Figure 3-2**


### 3.2 Internet

#### Enter homepage

The browser always habitually opens the last webpage browsed by the user. Upon entering the browser after starting, the homepage appears.

#### Change your Home Page


1. Click and choose **Browser**.
2. Press **Main menu key** to pop up browser Setting menu.
3. Click and choose **Settings**.
4. Click and choose **Set homepage**.
5. Input website, click and choose **Confirm**.

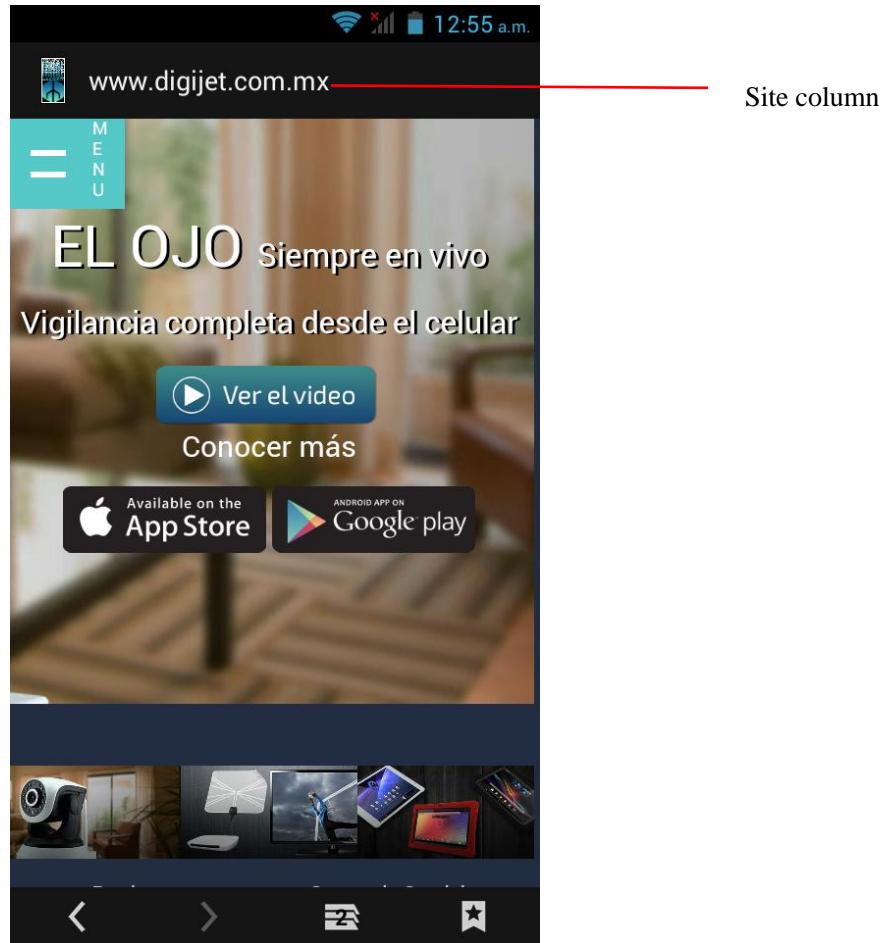

**Figure 3-3**

### Access webpage

1. Click and choose **Browser**.
2. On the site column, input your website.
3. On the soft keyboard, click and choose **Begin**.

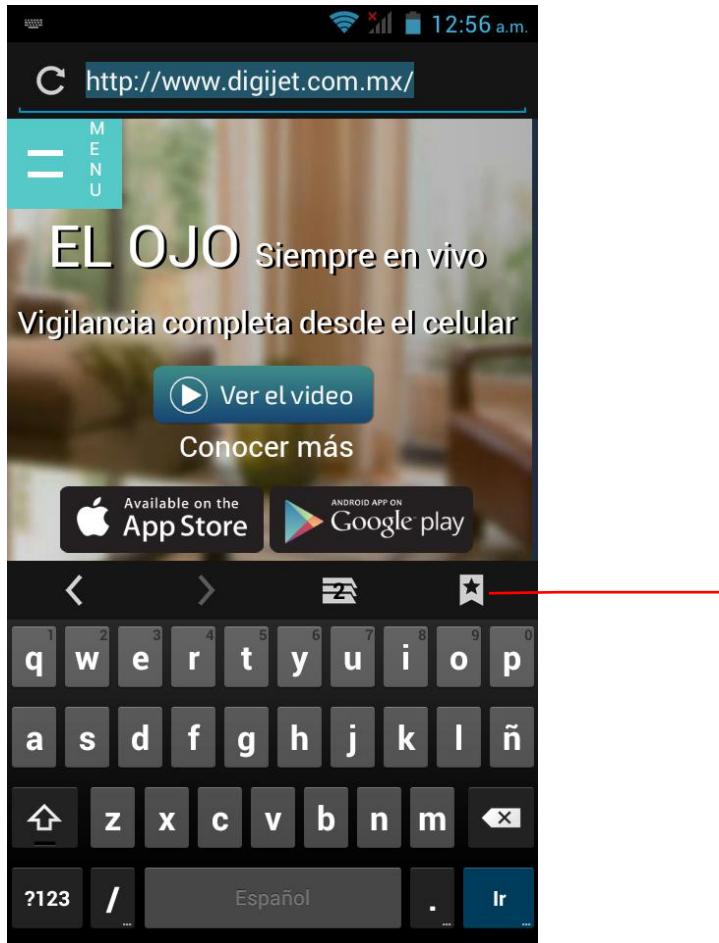

**Figure 3-4**

### **Browse webpage**

Upon opening the webpage, you can slide your finger on the screen to browse and check other parts of the webpage.

### **Zoom in or zoom out the webpage**

Upon opening the webpage, when you drag the webpage, you can zoom in and zoom out the webpage by double clicking the screen or dragging with two fingers.

### 3.3 GPS

1. On the homepage interface, press Menu key to pop up Set menu. (As shown in Figure 3-5)
2. Click and choose **Settings**.
3. Click and choose **Location access**.
4. Click, choose and tick **Use GPS satellites**, and the GPS switch can be opened.
5. You can install search GPS satellites application program of a third party or map program for location navigation.

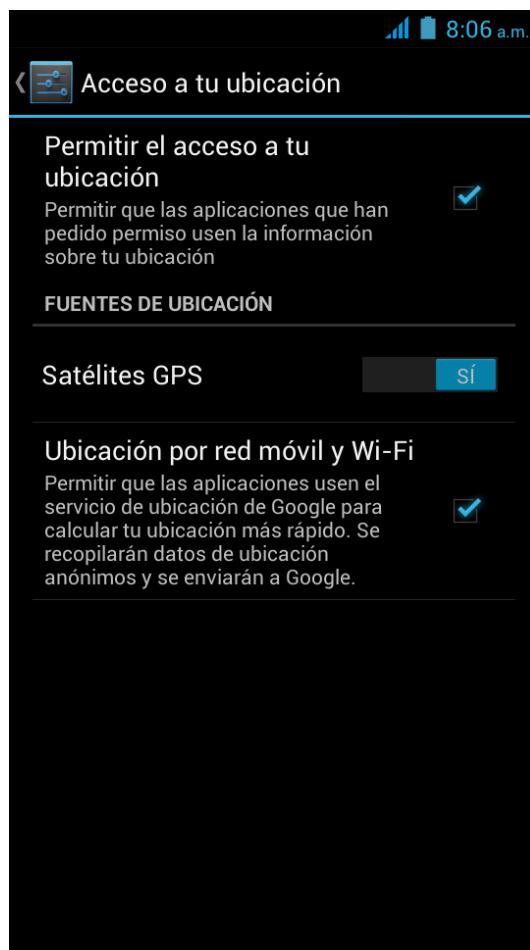


Figure 3-5

# 4. Solutions to Problems

## 1. The first startup of Phone is slow

After the Phone system upgraded, the first startup need to install the pre-installed application softwares, the lead time is around 2-3 minutes, the startup afterwards will be much quicker.

## 2. Phone can't connect Wi-Fi

Make sure the wireless router of internet service can work in normal.

Ensure the Phone and wireless router in certain distance, and no wall or other barrier between them.

Ensure the user name and password both correct.

## 3. Phone feels hot

When many application procedures are used in meanwhile, or the brightness of screen open to the lightest or under charging, Phone may feel fever. It is normal.

## 4. Email can't be set or Registration of application procedure.

Ensure your internet is well connected.

Make sure your email setting way is correct.

Keep your system time and local time consistent.

## 5. The system is abnormal and can't work.

When you install some third party application procedure, it may cause abnormal work, you can press **Reset key**(next to power port) to reset the system.

## 6. The webpage can't be opened

Please keep the distance between from route to Phone in effective range.

Please restart WIFI and try again.

## 7. Phone works terribly slow sometimes

It is normal phenomenon. Please turn off some application you don't need in advanced task management, or uninstall some third party application to release more system resource.

## 5. Specification

\* Processor : **MTK 6750**

\* RAM : **2g DDR3**

\* Storage : **16 GB flash**

\* Display : **5 " FHD LCD(1920X1080), capacitive touch screen.**

\* Wi-Fi Networking : **IEEE 802.11 /b/g/n 2.4g/**

**BT** **BT BLE**  
**BT 3.0+EDR**

**GSM/WCDMA/LTE** **Support**

\* Audio Output : **3.5mm headphone**

\* PC Interface : **Micro USB 2.0 Hi-speed and USB 2.0(OTG).**

\* Additional Features : **Built-in microphone. Front facing camera(5M).  
Rear camera(13M). 8Ω/0.8W\*1 Speaker.**

\* Operating System : **Android 6.0**

\* Power : **Rechargeable Li-poly battery (3.8V, 3220 mAh).  
power Adapter(DC 5V,1.5A).**

\* Time(hours) : **Playback About 7 hours for music. About 4 hours for video. About 4 hours for web browsing.**

# FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ▶ -Reorient or relocate the receiving antenna.
- ▶ -Increase the separation between the equipment and receiver.
- ▶ -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ▶ -Consult the dealer or an experienced radio/TV technician for help.

## Specific Absorption Rate (SAR) information:

This Rokit Jupiter meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

## FCC RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: Rokit Jupiter (FCC ID: 2ALTHI04) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.245W/kg and when properly worn on the body is 0.792W/kg. This device was tested for typical body-worn operations with the back of the handset kept 10mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 10mm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

## Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 10mm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.