

尺寸：108mm*160mm

108mm

160mm

Zoweetek Guarantee:

100% Zoweetek Guaranteed Product Satisfaction.

We promise 1 year warranty.

If you have any questions, please feel free to contact us through Amazon or obtain assistance through technical support, we will try our best to provide you best service.

Technical support and troubleshooting

✉ support@zoweetek.cn

🌐 www.zoweetek.cn

Self resolution of common problems:

1. When the switch is turned on, there is no sound from the speaker

- A.** The screen light is not on, the power supply is dead, and the charging problem is solved.
- B.** The volume adjustment is in the minimum position, and the volume is adjusted appropriately.
- C.** Re-pairing manually:
Step 1, short press the M button of the speaker to select the wireless mode;
Step 2, long press the M button of the speaker to enter the wireless waiting pairing;
Step 3, long press the “ + ” & “ - ” buttons on the microphone at the same time for 3 seconds, then wireless pairing.

2. The speaker has obvious howling

- A.** Aim the microphone at the corner of the mouth, and keep the microphone 6-10ft away from the host;
- B.** When the space becomes small, the volume should be properly turned down to avoid howling.

If you still have the above problems, please contact ZOWEETEK after-sales customer service.

FCC Warning Statement

This device complies with Part 15 of the FCC Rules.Operation is subject to the following two conditions:(1)This device may not cause harmful interference, and(2)this device must accept any interference received, including interference that may cause undesired operation.

 
NOTE: This equipment has been tested and found to complywith the limits for a Class B digital device, pursuant to Part 15of the FCC Rules. This equipment generates uses and canradiate radio frequency energy and, if not installed and usedin accordance with the instructions, may cause harmfulinterference to radio communications. If this equipment doescause harmful interference to radio or television reception,which can be determined by turning the equipment off andon, the user may be able to correct the interference by thefollowing measures:

Reorient or relocate the receiving antenna.Increase the separation between the device and receiver.Connect the device to an outlet on a circuit different fromthat to which the receiver is connected.Consult the dealer or a radio/ TV technician for help.

This device has been evaluated and found to comply withtypical RF exposure requirements. This device may be usedin portable applications without restriction..



Portable Speaker

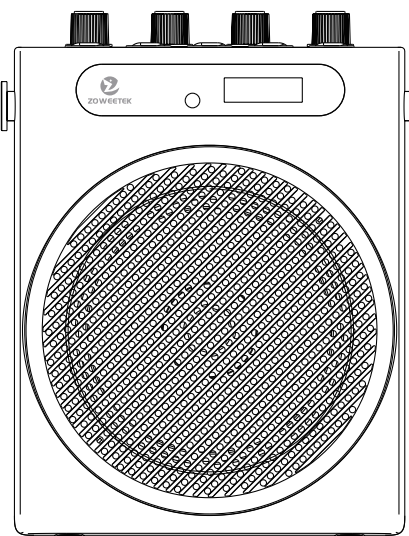

S4PLUS

USER MANUAL

封底

ZOWEETEK S4PLUS is a voice amplifier with 2 wireless microphones that amplifies your voice without making it mechanized in sound quality. Enjoy the freedom of expressing yourself confidently, without the fear of your voice getting lost in the crowd. It's not just a voice amplifier, it's also a portable speaker.

Please read the following introduction carefully before using it.



Note: Before turn on the amplifier, ensure that the MIC don't point at the amplifier, this will eliminate any annoyance associated with howling.

The speaker and microphone are paired automatically when you turn them on, no need to pair them manually.

Specifications:

Charging Voltage:	5V-2A	Frequency Range:	100HZ-15KHZ
Charging Time:	4-5 hours	SNR:	≥70DB
Play Time:	6-9 hours	Bluetooth:	≈10m / 30ft

  Product Introduction:

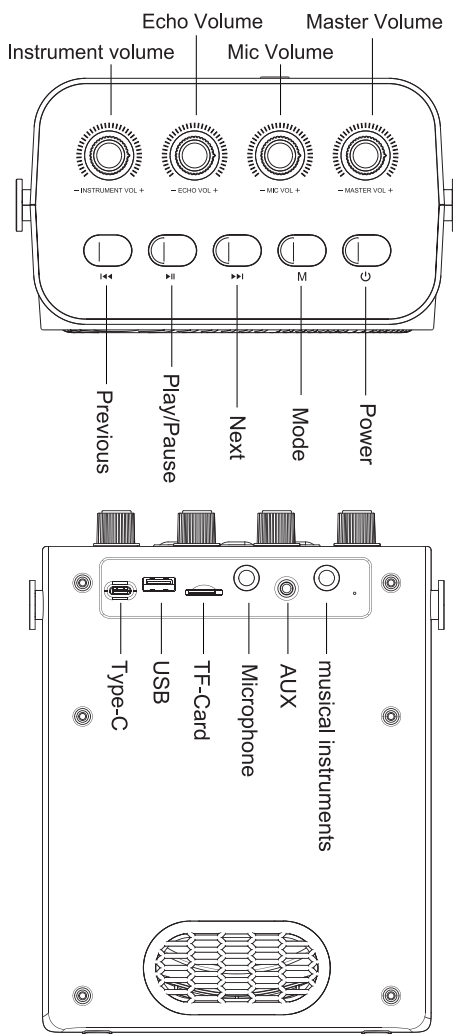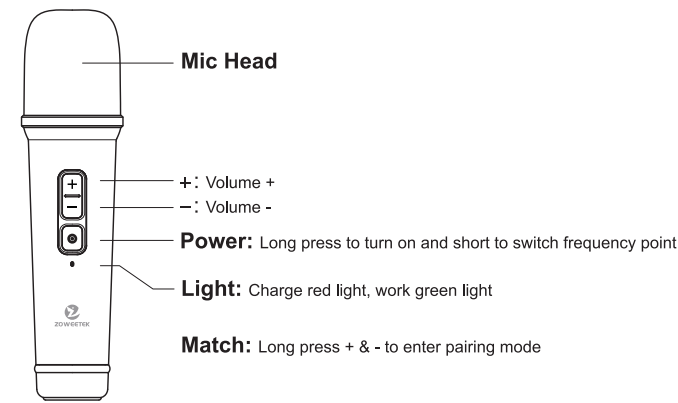

Instructions:

Power on / off: Long press for 3 seconds to turn on or off

Bluetooth mode: Short press “ M ” key to enter bluetooth mode

Clear bluetooth pairing: Long press the “ M ” key in Bluetooth mode

Mode switch: Short press “ M ” key to switch

Wireless mode: Long press “ M ” key to enter pairing mode in wireless mode

Wired microphone: Insert 6.35 socket

Aux mode: Insert AUX to switch automatically

Tf card mode: Insert TF card to switch automatically

U disk mode: Insert U disk to switch automatically

Play/pause: Short press Play/Pause key, Long press to switch to single playback or loop playback. (TF card or USB mode only)

Previous: Short press “ ⏮ ” key, Long press to fast back (TF card or USB mode only)

Next: Short press “ ⏭ ” key, Long press to fast forward (TF card or USB mode only)

Charge: Plug the power adapter (5V 2A) into the Type-C port (Plug not included, charging cable included)

Charge status: The red light comes on when charging and goes off when full

Master Volume + / - : Rotary volume up / down

Mic Volume + / - : Rotary volume up / down

Echo Volume + / - : Rotary volume up / down

Instrument volume + / - : Rotary volume up / down

Application Notice:

• In order to achieve the best effect of microphone sound reinforcement, please place the microphone 1-2cm in front of the mouth and aim at the microphone to pronounce. If there is a howl, you can appropriately reduce the volume or slightly extend the distance between the machine and the microphone to prevent mutual interference.

• Try to avoid plugging and unplugging the microphone socket frequently to avoid loose socket and poor contact. Do not plug the microphone and sound source incorrectly.

• Do not drop, throw or step on this product. Do not disassemble this product without authorization, or you will not enjoy our free warranty service.

• Please unplug the adapter timely afterfully charged the charging time is normally 4-5 hours.

• In order to achieve the best effect when using the speaker for the first time, it is recommended to be fully charged before use.

• When charging, please turn off both the speaker and microphone, and do not use them during charging.

• This product may become slightly hot during charging and normal use, which is a dry normal phenomenon.

• When the user does not use this product temporarily, please turn the power switch of the product to the off state to avoid the loss of battery power.

• Do not put the product and accessories into water, fire or any overheated environment.

• Do not open or disassemble or repair the battery module by yourself.