INSTRUCTION

- 1. This unit has rechargeable battery, when the battery power is drained, please plug the switch into an electrical socket according to the input voltage.
- 2. Please note if voltmeter is going below 12V which shows battery is getting low, it means the unit needs to charge. When the unit is charging, please make sure the ac/dc switch is on. Once charged, please unplug the socket from the electrical outlet safely. You have to charge the battery for 10 to 12 hours for first use. And 8 to 10 hours for all future uses. The battery can last 2 to 4 hours according to the volume of the speaker.
- 3. If you change the fuse, please use 10amp fuse only.

ATTENTION

- 1. In order to prolong the battery life, please charge the battery after each use. If the speaker is not used or charged fully frequently, battery damage may occur.
- 2. If any issue with the product arises, please contact a professional to handle any repairs as this unit is a high power electronic.
- 3. Please keep away from children.






Bassbox Sound 15" Wireless Portable Speaker System

Model: FBX1520

⚠ Please carefully read the operating instruction before using our product


PANEL FUNCTION DECLARATION

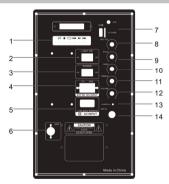

- 1.

 ☐: INTERCHANGE (Jump to LINE-IN, USB, FM and BLUETOOTH mode)
 - : REC
 - : REPEAT
 - ■: PREVIOUS SONG
 - ▶ : PLAY/PAUSE (on FM mode, long press Pause button to Auto Scan channel)
- ▶ : NEXT SONG 2. LIGHT SWITCH
- POWER ON/OFF
- DC INPUT
- 5. AC INPUT
- ANTENNA
- USB/AUX/TF CARD PORT
- 8. MIC. LEVEL
- 9. ECHO LEVEL
- 10. BASS LEVEL 11. TREBLE LEVEL
- 12. VOLUME CONTROL
- 13. CHARGE / FULL
- 14. MIC. INPUT

REMOTE FUNCTION DECLARATION

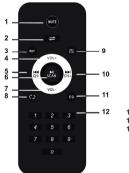

- 1. PRESS FOR MUTE
- 2. SHUFFLE (Jump to LINE-IN, USB. FM and BLUETOOTH mode)
- 3. RECORD 4. VOLUME UP
- 5. PREVIOUS SONG
- 6. PLAY, PAUSE, AND SCAN 7 VOLUME DOWN
- 8. REPEAT SONG
- 9. RECORD PLAY
- 10. NEXT SONG
- 11. EQ
- 12. 0-9 SELECTION FOR CHOOSING SONGS

BLUETOOTH FUNCTION DECLARATION

- 1. Press the mode button on front panel to launch the Bluetooth application. You will then see that "Fisher-FBX1520" shows on the screen.
- 2. Slide the "Bluetooth" switch to "on" on speaker. Make sure Bluetooth is activated on the device you wish to connect. Your device (cellphone, computer, etc.) will automatically begin scanning for nearby bluetooth devices.
- 3. Tap the entry for the bluetooth accessory when your device has detected the speaker and displayed on the speaker screen. Bluetooth is now ready to operate.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Recrient or relocate the receiving antenna
- Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- -Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.