

USER MANUAL OF H1011



FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

* RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

DONGGUAN HARMONY TECHNOLOGY CO.,LTD
www.audio-harmony.com

Thank you for purchasing the Bluetooth V4.1 Wireless Headphones. Before using, please read over this manual on how to properly use your headphones and for other product specifications.

PACKAGE CONTENTS

Bluetooth Headphone, Micro USB charging cable, 3.5mm audio cable, User Manual

WARNING



HIGH VOLUME MAY AFFECT YOUR HEARING.



FOR TRAFFIC SAFETY, DO NOT USE WHILE DRIVING OR CYCLING.

WIRED CAPABILITY

Note: the headphones can be used as wired headphones for devices without Bluetooth capability. If using as wired headphones, all functions on the headset will not work. If you are paired via Bluetooth to a device and then use the wired connection on another device at the same time, you will hear audio from both devices.

2

TO CONNECT

1. Disconnect your first phone from headphones from your Bluetooth settings and then restart the headphones pairing mode. Turn on the Bluetooth function on the second phone and look for H1011. Pair your second device. Then turn on the Bluetooth function on your first phone and re-connect to GOGEN HBTM91B. Both devices should now be connected.
2. If you are on a call on one device and a call comes in on the second device you can:
 - a. Reject the incoming call on the second device by pressing the MF button for 1 second
 - b. Put the current call on hold and answer the call on the second device by pressing the MF button twice
 - c. Hang up the call on the first device and answer the call on the second device with a short press of the MF button
 - d. Go back to the original call after answering the second call by pressing the MF button twice
 - e. Hang up on the second call and go back to the original call with a short press of the MF button


CHARGING

Connect the provided Micro-USB cable to a computer or a USB charger. The LED lights will turn red while charging. The LED lights will turn blue when charging is finished.

LOW BATTERY

When the battery power is low, the headphones will automatically turn off. To maintain proper

5

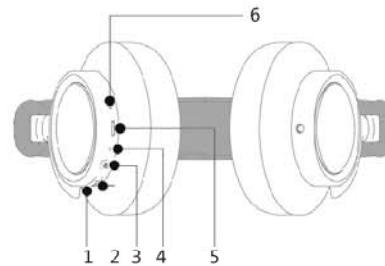

1. PREV/ VOL +
Bluetooth mode: Short Press for PREV; Long Press for VOL +
2. Next /VOL –
Bluetooth mode: Short Press for NEXT; Long Press for VOL -
3. Power switch : Long press to power ON/OFF
Short Press to PLAY/PAUSE
Short Press to Answer/Hang out incoming calls
Long Press to reject incoming calls
Press twice to redial the last number
4. LED indicator
5. Micro USB port
6. MIC
7. 3.5mm audio port

3

battery levels, charge the headphones at least once per month. If the headphones sit without being power on for long periods of time, they will need to be charged to maintain full battery levels.

WIRED MODE

You may use the included 3.5mm audio cable to directly plug the headphones into an audio device. When using the 3.5mm cable, all wireless functions, along with button functions will not work. To adjust volume levels or track selections, you must use the connected device's functions.

TO CONNECT

1. Insert the 3.5mm cable into the 3.5mm port on the headphones.
2. Insert the other end of the 3.5mm audio cable
3. Control functions of the headphones, volume, track, play/pause through the connected audio device.

TECHNICAL SPECIFICATIONS

Bluetooth Version: V 4.1
Wireless Working Range: 10 m
Frequency range: 2,402 GHz - 2,480 GHz
Charging: Micro-USB cable
Speaker Sensitivity: 112 ± 3 dB at 1 kHz; 1 mW
Speaker Frequency: 20 - 20 kHz
Rated Power: 10 mW - 12 mW
Input Voltage: DC 5 V
Battery: Rechargeable Li-polymer 3,7 V / 300 mAh
Play Time: Up to 12 - 15 h, Talk Time: Up to 17 h,
Charging Time: About 2,5 h,
Standby Time: Up to 600 h

6

LED INDICATOR

Bluetooth Mode: When in Bluetooth mode, the blue and red LED indicators will flash alternately. When connected, the LED will stop flashing.

Charging Mode: When charging, the LED light will remain red. When finished charging, the LED light will return blue.

BLUETOOTH PAIRING MODE

Turn on the headphone by holding down the power button. Keep pressing until the LED lights flash red and blue. Release the power button after LED's start flashing red and blue.

CONNECTING TO A BLUETOOTH DEVICE

1. When the headphones are in pairing mode, open the wireless setting on your device. Make sure the device's Bluetooth setting is turned on.
2. Search for H1011
3. Choose H1011 pair, your device should them show "connected".
4. The LED lights on the headphone will turn off once connected to your devices.
5. If your device asks you for a password to connect to the headphones, key in "0000". This is normally not needed.

MULTI-POINT CONNECTIONS

These headphones are capable of connecting to two devices at the same time.

4

WARRANTY

Our product is warranted for 2 full year from the date of purchase. The warranty is provided on all material defects and workmanship. Guarantee of 24 months does not apply to decrease in the accumulator's effective capacity caused by its use or age. Effective capacity gradually decreases depending on the method of use of the accumulator.

WE RESERVE THE RIGHT TO CHANGE TECHNICAL SPECIFICATIONS.

TO AVOID DANGER OF SUFFOCATION, KEEP THE PLASTIC BAG AWAY FROM BABIES AND CHILDREN. DO NOT USE THIS BAG IN CRIBS, BEDS, CARRIAGES OR PLAYPENS. THIS BAG IS NOT A TOY.

DISPOSAL OF OLD ELECTRICAL & ELECTRONIC EQUIPMENT (APPLICABLE IN THE EUROPEAN UNION AND OTHER EUROPEAN COUNTRIES WITH SEPARATE COLLECTION SYSTEMS)

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product

7