



Operation

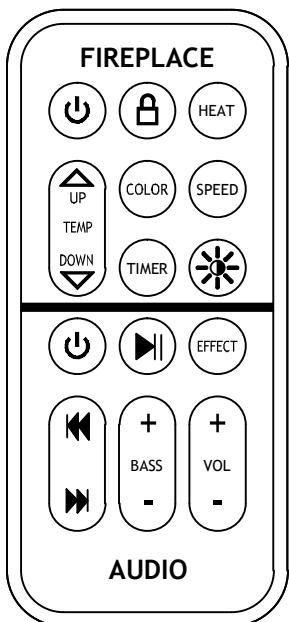

Remote Control (O)

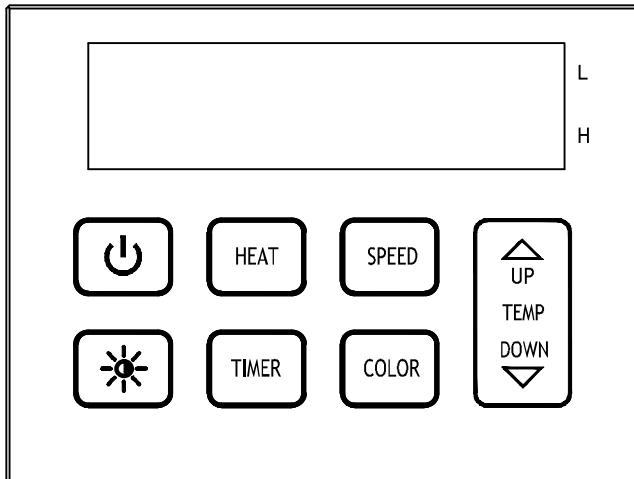

Control Panel on electric fireplace insert (N)



WARNING-The fireplace must be properly installed before it is used.

There are 18 buttons on the remote control and 8 corresponding buttons on the control panel of the electric fireplace insert.

FIREPLACE

< > Turns the flame and logs On/Off.

< > Controls the brightness of the flame and logs.

<HEAT> Controls the functions of the heater. Press the button once to set the heater to HIGH (1,500 watts/hour). Press the button twice to set the heater to LOW (750 watts/hour). Press the button three times to turn the heater OFF.

<COLOR> Controls the color of the flame. The default setting for the flame color is YELLOW. Each time the flame button is pressed, the color of the flame will change. The last setting causes the flames to automatically and continuously cycle through all colors, changing every 15 seconds. Pressing the COLOR button one more time will return to the default color.

<SPEED> Controls the speed at which the flame effect turns. There are 5 speed levels. The default speed is level three. There are two slower speeds and two faster speeds which can be set by pressing the SPEED button.

<TIMER> Controls the duration of the heater timer. Press the TIMER button to increase the timer setting by 1 hour each time this button is pressed (settings from 0 hour to 8 hours). When the control panel shows "OH", the TIMER function has not been activated.

<UP> increases the temperature. Press once, temperature will increase by 1°F. Long press this button, temperature will go up continuously. The options are between 60°F-97°F.

<DOWN> decreases the temperature. Press once, temperature will decrease by 1°F. Long press this button, temperature will go down continuously. The options are between 60°F-97°F.

< > Press this button for more than 2 seconds to lock the fireplace. This prevents misuse by children and interference by other remote controls of other home devices. Press this button for more than 2 seconds again to unlock this function.

Operation (continued)

AUDIO

This fireplace include Bluetooth speaker, the Qualified Design ID (QDID) is 91284.

<  > Turns the Bluetooth either on or off. When the Bluetooth is on, press the button once to turn the Bluetooth off. "GOODBYE" will sound from the speaker. Press it again to turn the Bluetooth on. "HELLO" will sound from the speaker. During waiting for a connection, "Wait pair" will sound from the speaker. When the Bluetooth connection is successfully paired, "Ok" will sound from the speaker. At this point, you can play music from the phone. When the Bluetooth is disconnected, "disconnected" will sound from the speaker.

<  > Pause button. During Bluetooth Music playing, press this button to pause the music, press this button again to continue playing.

<EFFECT> Controls the sound effect mode. Each time the EFFECT button is pressed, the sound effect scene mode changes. Available settings are Opera, Rock, Classic and Jazz.

<  &  > Previous and next song selection button. During music playing, press  button to go back to the previous song; press  button to go to the next song.

<  &  > Control the Bass of the music. Press  or  to increase or decrease the bass by one level. Press and hold to scroll up or down through the 12 levels.

<  &  > Control the volume. Press  or  to increase or decrease the volume by one level. Press and hold to scroll up or down through the 12 levels.

Other Important Features

- To protect the heater, the fan will continue turning for a few seconds after heater is shut down.
- If the temperature inside of the electric fireplace insert (N) becomes abnormally high, the temperature protection mechanism will turn on automatically and the heater will be shut down within a few seconds. Please remove the power cord from outlet and wait a few minutes for heater to cool down or until temperature protection mechanism reconnects, then plug in the power cord to resume.

CARE AND MAINTENANCE

- **ALWAYS** disconnect the power cord from the electrical outlet before any internal maintenance or replacement of parts is done.
- Dust the fireplace on a regular basis using a soft, lint-free cloth and a high-quality furniture polish. Always avoid "dry dusting" the fireplace as dusters can scratch the wood finish.
- Always use the same type of furniture polish when dusting the fireplace. Alternating between different types of furniture polish can cause clouding of the wood finish.
- Avoid using soap/water to clean the fireplace. Soap can damage the wood finish and water can penetrate the wood causing damage. Anytime liquid comes into contact with the fireplace, it should be dried immediately to avoid damage to the wood.
- If possible, the fireplace should be placed in a location where it will not be exposed to direct sunlight for long periods of time. Sunlight can cause damage to wood finishes, so minimizing its exposure will lengthen the life of the fireplace.
- Use caution when opening the metal cabinet of the electric fireplace insert during inspection and maintenance.
- **Battery Replacement:** The remote control requires 1 lithium coin cell battery (size CR2025).

FCC Information

NOTE:


This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Shelf Weight Capacity

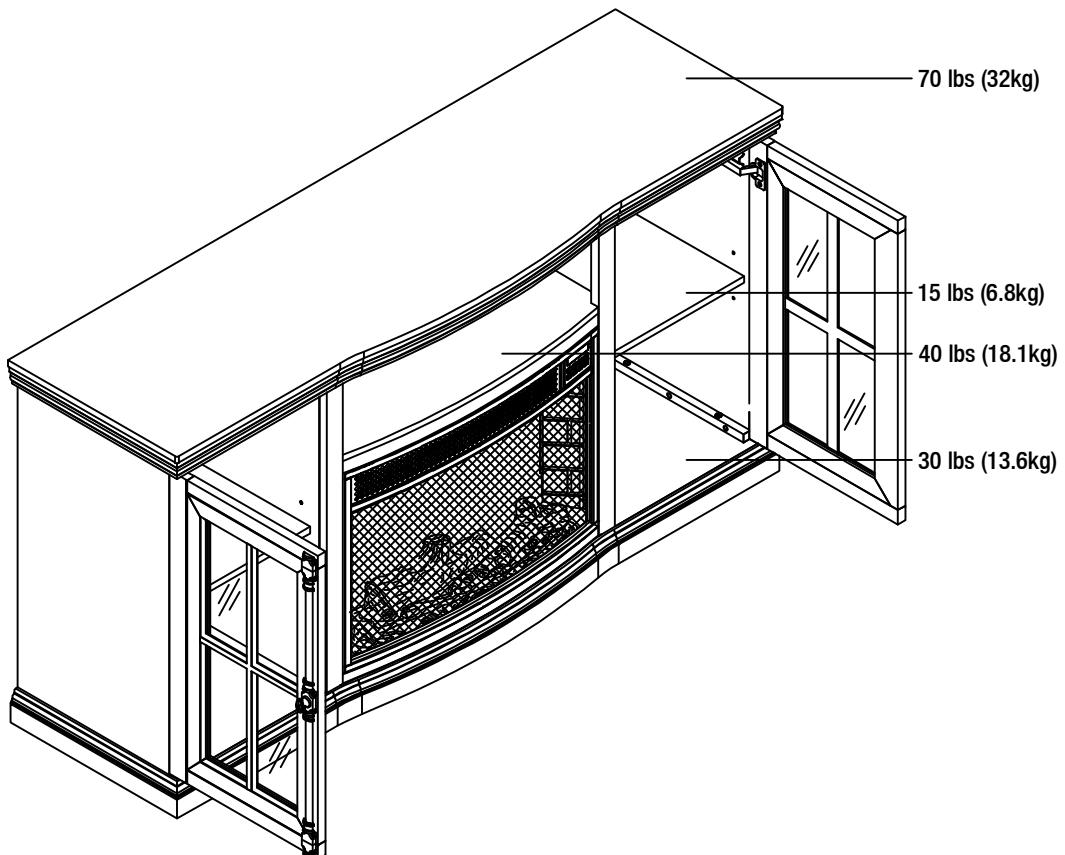

CAUTION: This cart (or stand) is intended for use only with the maximum weights indicated. Use with products heavier than the maximum weights indicated may result in instability causing possible injury.