

ZEKI

8" TABLET

User's Guide for Model TBQG838B-2120-01



Warnings & Precautions

Important Safety Instructions

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

FCC Warnings

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Additional Warnings

- **CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.**
- Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
- **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain, moisture, dripping, or splashing.
- **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- Lithium batteries, like all rechargeable batteries, are recyclable and should be recycled or disposed of according to state and local guidelines. They should never be disposed of in normal household waste, and they should never be incinerated, as they might explode. Contact your local government for disposal or recycling practices in your area.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- Batteries should be recycled or disposed of as per state and local guidelines.



WARNING : This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov. **This product meets and complies with all Federal regulations.**

Table of Contents

Specifications

Hardware & Features–5
Includes–5
Supported File Types–5

Using the Tablet

Charging the Battery–6
Power Button–7
Gestures–8
Front View–10
Rear View–11
Included Accessories–12
Screen Orientation–13
Lock Screen & Security–13
Apps–14
Android™ OS Updates–14

Wi-Fi & Internet

Wireless Connections–16
Google™ Search–16

Camera

Pictures, Video & Gallery–17

The Tablet & Other Devices

USB Connections–18
Micro SD Cards–19

Customer Support

Contact Information–20
International Support–20
Warranty Information–20

Specifications

HARDWARE & FEATURES

- » Android OS 8
- » Quad core 1.2 GHz processor
- » Built-in 1GB RAM
- » 8GB installed flash memory
- » 8" TFT LCD display: 1280x800 resolution
- » Expandable memory and Micro-SD card reader (up to 256 GB)
- » Built-in 802.11b/g/n Wi-Fi
- » 0.3M pixel front camera & 2.0M pixel rear camera
- » G-Sensor for screen rotation
- » Built-in microphone
- » Micro-USB port
- » 3.5mm headphone jack
- » Built-in speakers
- » Built-in rechargeable battery lasts approx. 2.5 hrs

INCLUDES

- » Micro-USB to USB cable
- » One pair of earbuds
- » AC/DC power adapter
- » User's guide

SUPPORTED FILE TYPES

- » Video: MOV, MKV, AVI, RM, RMVB, FLV, WMV, MP4, VOB
- » Audio: MP3, WAV
- » Photo: JPEG, BMP, GIF, PNG
- » eBook: PDF, PDF DRM, EPUB, EPUB DRM

Specifications and software are subject to change without prior notice.


Using the Tablet

CHARGING THE BATTERY

It is necessary to charge your tablet before it can be powered on. The initial charge time is approximately 5 hrs. It is normal for the body of the tablet to become warm during charging and after extended periods of use.


Charge the Battery with the AC/DC Power Adapter:

- » Connect the AC/DC power adapter to a standard power outlet and the Micro-USB port on the tablet.

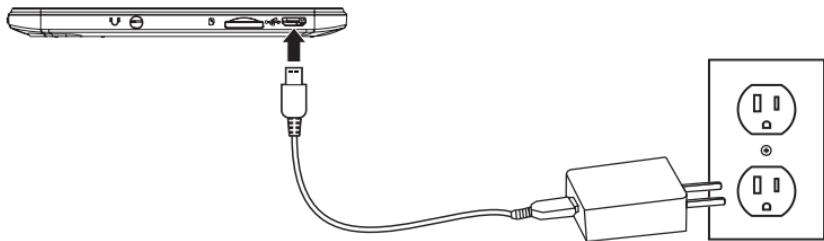

Charge the Battery with the Micro USB charging cable and a PC:

- » Connect the charging cable to the USB port of a powered on PC and the Micro-USB port on the tablet. A window will appear asking how you want to use the USB connection, select "Charge this device" (for additional information on USB connections see pg. 18).

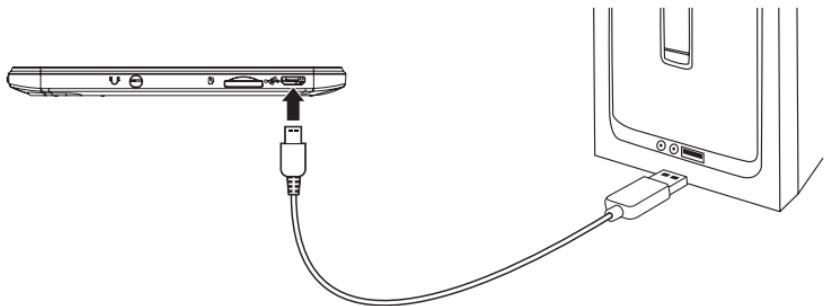

POWER BUTTON

The Power Button will power the tablet on, off, or put the tablet into Sleep Mode. Sleep Mode is a power saving mode that disables certain functions, namely, the screen. Your tablet will still do things like play music, and remain ready to use at a moments' notice.

Power Your Tablet ON


- » Press and hold the power button and wait for the screen to activate.

Put Your Tablet in Sleep Mode

- » Press the power button once to put the tablet to Sleep.

Power Your Tablet OFF


- » Press and hold the power button to turn the tablet OFF completely.

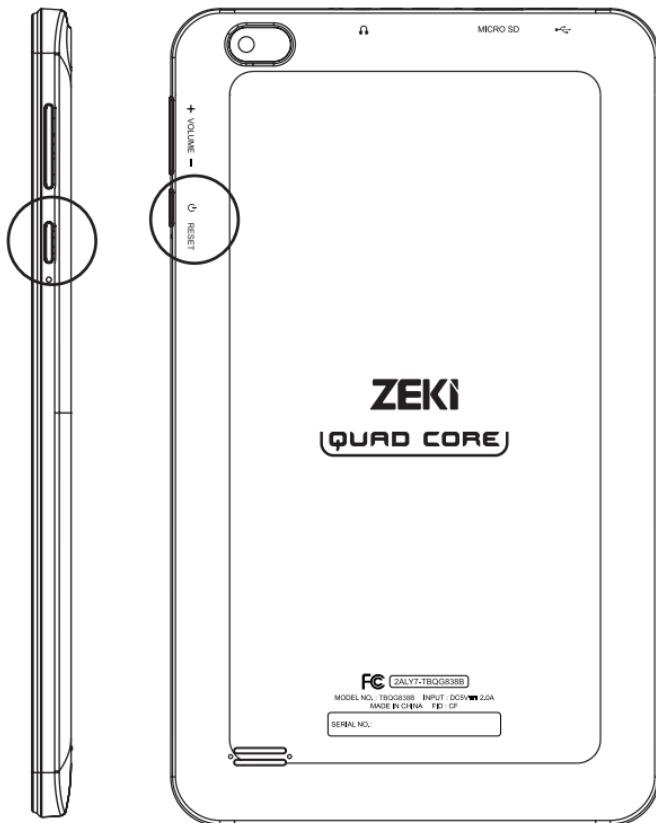

Using the Tablet


GESTURES

The screen on your ZEKI tablet is capable of accepting up to five points of contact at once, and by using these simple hand gestures you can interact with the tablet and its various functions.

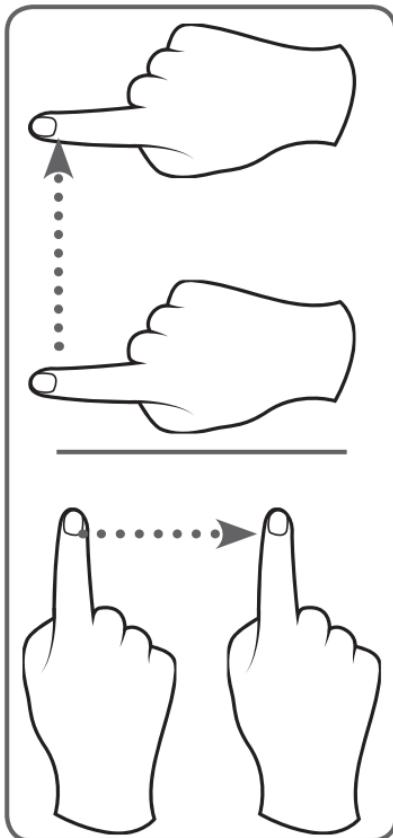

Swipe


Touch and drag your finger in any direction on the screen.

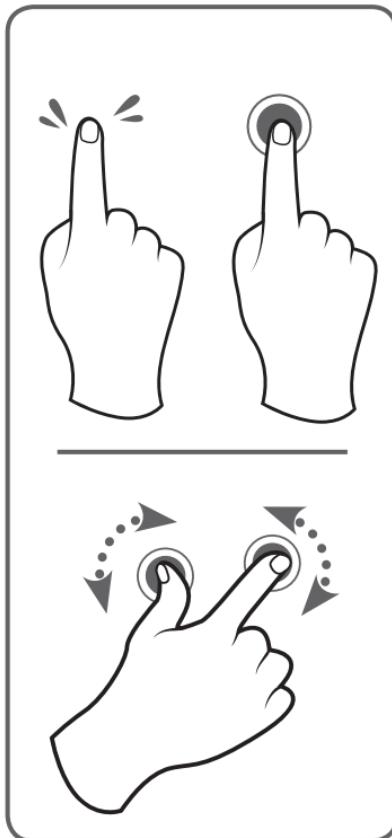

Tap / Hold / Rotate


Briefly tap the screen to select an icon, item, or app. Press and hold to bring up menus or other options.

Hold and turn two fingers to rotate things like pictures and games.

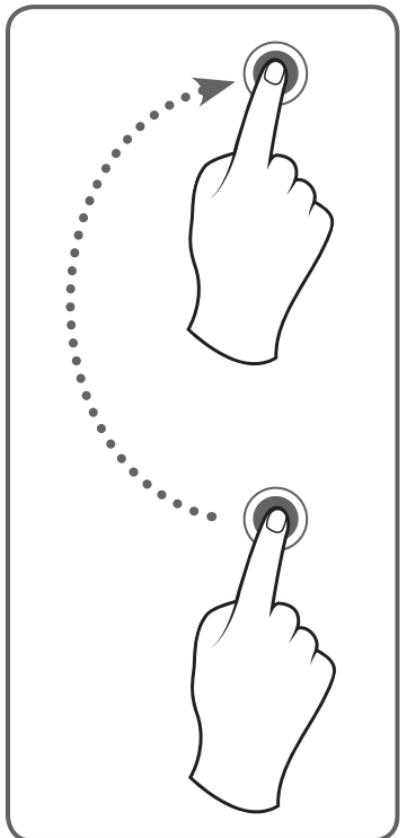

Hold & Drag

Touch and hold any item on the screen, such as an app, to move it.

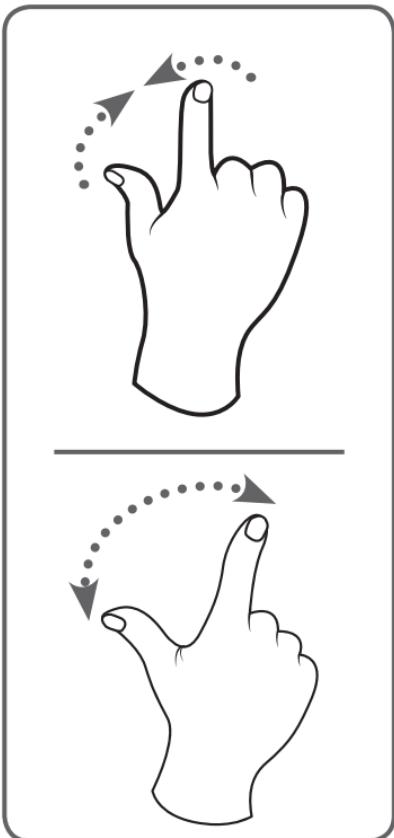


Zoom In / Zoom Out

Touch the screen with two fingers and pinch in or out. In some cases, you can also zoom in and out by quickly tapping the screen twice.

Using the Tablet

FRONT VIEW

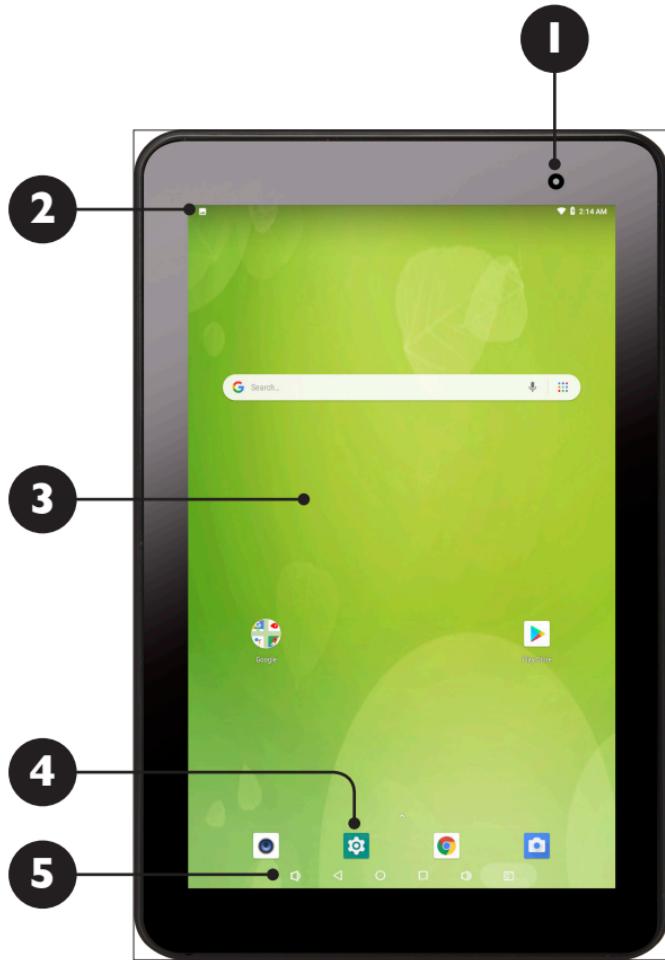

- 1. Rear Facing Camera
- 2. Notifications Bar
- 3. Touch Screen
- 4. Apps
- 5. Navigation Bar

- Back
- Home
- View Open Apps
- Volume
- Take Screenshot

REAR VIEW




- 1. Forward Facing Camera
- 2. Headphone Jack (3.5mm)
- 3. Micro SD Card Slot
- 4. Micro USB Port
- 5. Volume
- 6. Power/Sleep button
- 7. Speaker

Using the Tablet

INCLUDED ACCESSORIES

AC/DC Power Adapter

Use the Power Adapter to charge from a standard power outlet.

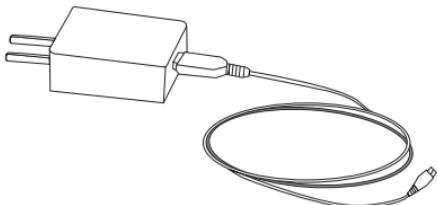

Micro-USB to USB Cable

Use the Micro-USB to USB cable to connect to a computer and transfer files or charge the tablet.



Stereo Earbuds

To avoid hearing damage, make sure that the volume on the tablet is turned down before connecting the earbuds. After placing earbuds in your ears, gradually increase the volume until a comfortable listening level is reached.



SCREEN ORIENTATION

Your tablet will automatically adjust from portrait to landscape mode as you rotate it.

You can disable this feature by dragging the **Quick Settings** tab down from the top right of the screen and tapping **Auto-Rotate**.

Landscape



Portrait



LOCK SCREEN & SECURITY

Disable the Lock Screen by dragging upwards anywhere on the screen. If you want to make your tablet more secure you can choose from several different options by going to **Settings > Security > Screen Lock**.



Using the Tablet


APPS

Downloading Apps

- » Press the Google Play Store app icon to search for and download new apps to your tablet.

App Information & Options

- » Press and hold an app icon, a fly out menu will appear to view app options, add widgets (if available), and information.

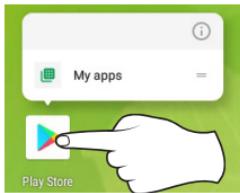

Press and hold to view app info

Adding Apps to Your Home Screen

- » Swipe upwards on any part of the screen, this will open the Apps Screen, which contains all of the apps installed on the tablet.
- » Press and hold an app, then drag it away from its current position. The screen will change back to the Home Screen and you can place it there.

Moving Apps on the Home Screen

- » Press and hold any app on the screen, then drag it to a new location.

Grouping Apps Together

- » Press and hold any app on the screen, then drag it on top of another app.

Removing an App or Widget from the Home Screen

- » Press and hold the app or widget and drag it to “X Remove” at the top of the screen.

Deleting Apps from Your Tablet


- » Press and hold the app icon of the app want to delete. When the fly-out menu appears, press Additional Info and press the button marked “Uninstall” to delete it from your tablet.

ANDROID OS UPDATES


The Android operating system may periodically be improved and updated. New versions of the OS may include bug fixes, security enhancements, and other new features. It is recommended to check for updates regularly and run the most current version of the software.

Check for Updates

- » Go to *Settings > System > System Update*

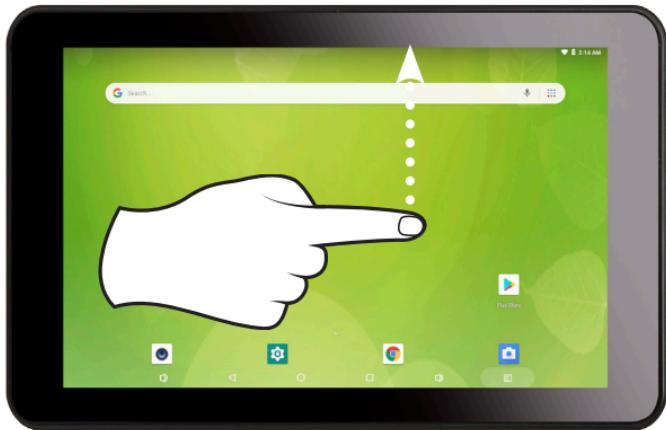

Swipe upwards anywhere on the Home Screen

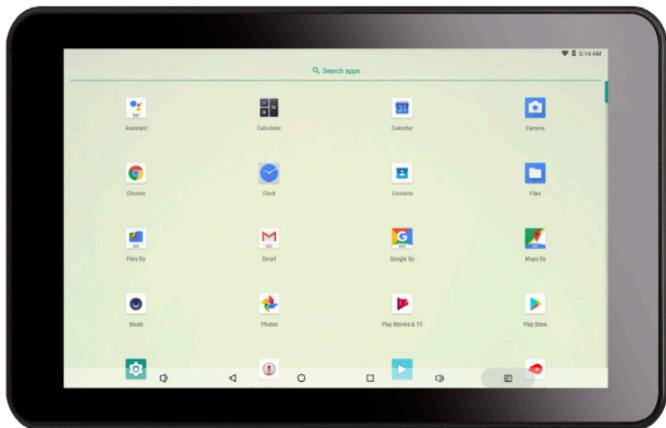

This will open the App Screen and Menu

Wi-Fi & Internet

WIRELESS CONNECTIONS


To access the internet or use other online services you must have the tablet's Wi-Fi enabled and connected to a wireless network or "hotspot". Your tablet will automatically guide you through the process of setting up your Wi-Fi connection when you activate it for the first time. Follow the guide and enter the correct information when prompted. It will be useful to have your router's ID and password on hand if you don't already know them.

Connect to a Wi-Fi Hotspot Manually

- » Swipe downwards from the top of the screen and press the  icon. Go to **Network & Internet > Wi-Fi**.
- » Be sure the Wi-Fi indicator is in the **ON** position, select the desired network from the list, and tap **Connect**. If the network is secured with a password you will be prompted to enter it using the keyboard.
- » Once completed, the display will show "**Connected**" under the name of the network, as well as the Wi-Fi signal strength.

GOOGLE SEARCH

- » Use the **Google Search Bar** for web searches. Use the keyboard to enter your search term and begin searching the web.

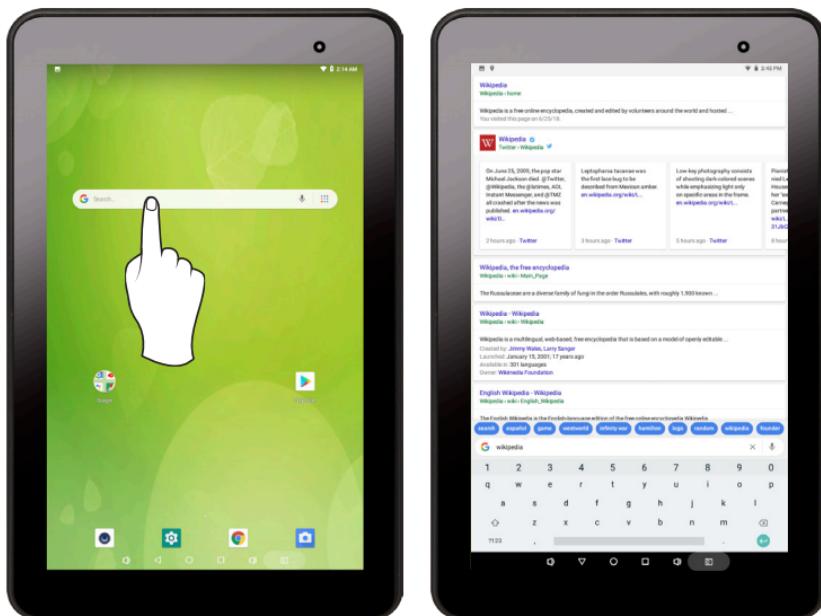

Camera

PICTURES, VIDEO & GALLERY

Your tablet is equipped with front and rear facing cameras for capturing images and video.

Taking Snapshots

- » Press the  icon from the apps menu or screen.
- » When you are ready, press  to capture the image.
- » After taking a photo, a small thumbnail of the image will appear in the corner of the camera view. Press the thumbnail to view the image and the gallery.

Taking Video

The camera takes still images by default, and must switch modes to take video.

- » While in camera mode, swipe right from the left part of the screen and select **Video**.
- » When you are ready, press  to begin recording video. Press again to stop recording.

Camera Functions & Options

- » Press  to switch between Auto and Night Mode light balance.
- » After swiping right to select Camera or Video, press  to adjust resolution camera resolution and other settings.



Swipe to the right for the Camera or Video option.

Front/Rear camera

Grid Overlay

Timer

The Tablet & Other Devices


USB CONNECTIONS

Transferring files with a PC/Mac

- » Using a Micro-USB to USB cable (included), connect to the Micro-USB port on the tablet and a USB port on a computer.
- » A notification will appear on the screen asking how you want to use the connection (see image below).
- » Using the connected computer's file browser, you can now access and transfer files, photos and other media to or from the tablet.

Closing a connection to a PC/Mac

- » Select the tablet in the connected computer's file browser and **Eject** it to safely close the connection. This will reduce the risk of losing any data on both the computer and the tablet.
- » Unplug the Micro-USB to USB cable from the PC/Mac and the tablet.

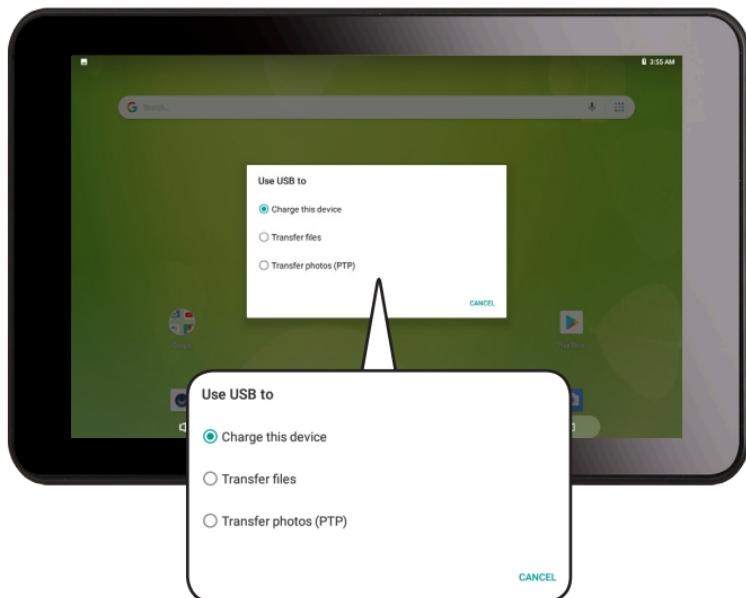

MICRO SD CARDS

The tablet will read Micro SD cards up to 256GB.

Connecting a Micro SD card

- » Insert a Micro SD Card into the Micro SD Card Slot on the top of the tablet.
- » The SD card will be detected automatically and a notification will appear at the top of the screen in the notification area indicating that it is ready to use.




Accessing a Micro SD card

- » To view files on a Micro SD card, swipe downwards from the top of the screen and press **Explore**. This will open the file browser and the contents of the cards.

Unmount a Micro SD card

- » To safely unmount a Micro SD card, swipe downwards from the top of the screen and press **Eject**. It is now safe to manually remove the Micro SD card from its slot.
- » When the card has been unmounted it is safe to remove the card from the tablet.

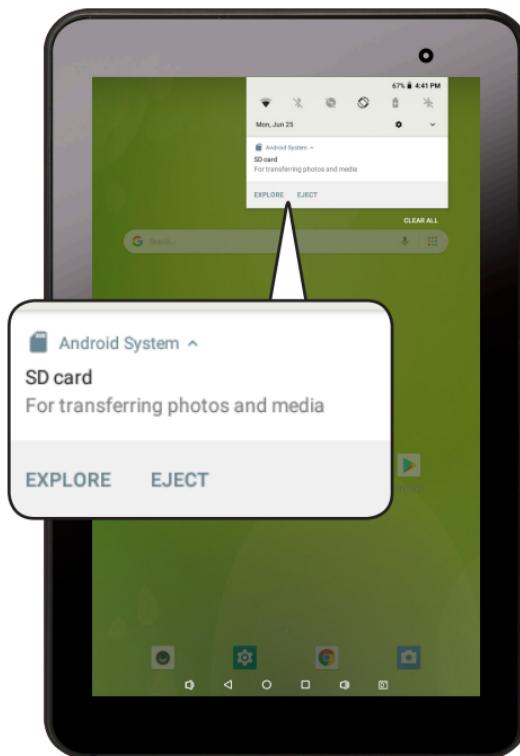

Customer Support

CONTACT INFORMATION

Website: www.zekitablet.com
Email Support: prodinfo@dpiinc.com
Email Parts: partsinfo@dpiinc.com
Phone Support: 1-888-999-4215

WARRANTY INFORMATION

For Warranty Information and the most up-to-date version of this User's Guide, go to: www.zekitablet.com

INTERNATIONAL SUPPORT

To download this User's Guide in English, Spanish, or French, or to get answers to frequently asked questions, visit the support section at: www.zekitablet.com

Para descargar este Manual del Usuario en inglés, español y francés, o para obtener respuestas a preguntas frecuentes, visite la sección de apoyo en: www.zekitablet.com

Pour télécharger ce guide de l'utilisateur en anglais, espagnol ou français, ou pour obtenir des réponses à des questions fréquemment posées, consultez la rubrique d'assistance sur: www.zekitablet.com



*Protect for Today
Sustain for Tomorrow*

Copyright © 2018 Digital Products International (DPI, Inc.) All other trademarks appearing herein are the property of their respective owners. Specifications are subject to change without notice.

Google, Android, Google Play and other marks are trademarks of Google LLC.

Product Name: Tablet

Model No.: TBQG838B

FCC ID: 2ALY7-TBQG838B

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.