



**SPECIFICATIONS**  
 Rated: 120VAC/60Hz/BA1 000W Resistive  
 Frequency: 2450. MHz  
 Range: 20m (65 ft.)  
 Battery: Two AA (not included)




## INSTRUCTIONS:

1. Insert two AA alkaline batteries (not included) as indicated by the (+/-) polarity signs. (See illustration A).
2. Plug receiver into standard 120 Volt AC, grounded electrical outlet. Designated for indoor use only.
3. Plug into the receiver the electrical device (lights) you want to control. (See illustration B). Device must not exceed voltage and frequency ratings in above Specifications.

**NOTE:** Magic Wand has different addresses noted on each unit by a sticker with an alphabet letter located on the top of the box, bottom of wand, and on the receiver. To avoid issues when using multiple units, note that Wand A can only control Receiver A, Wand B controls Receiver B, etc.

**ON:** To activate Magic Wand, press the ON Button on the Wand. The yellow LED light in the star will light, and you will hear the sound. The red LED power indicator on your receiver will go on to indicate the power is on.

**OFF:** To turn off, press the OFF Button on the Wand. The LED light in the star will light together with the sound. The red LED power indicator on the receiver will go off.

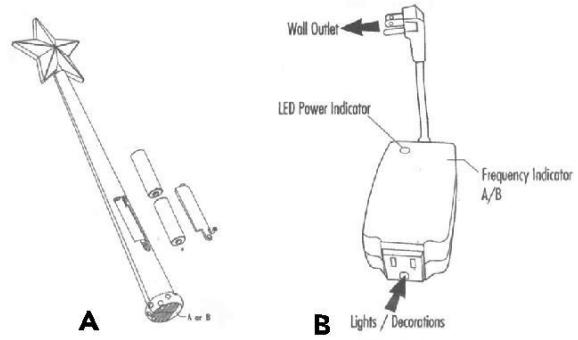

## BATTERIES:

To replace, open battery box on back of Wand with a Phillips screwdriver, and insert new batteries.

1. Use only batteries specified, and match the (+/-) polarity signs.
2. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
3. Do not mix old and new batteries.
4. Extend battery life by removing batteries when product is not being used.
5. Do not dispose of batteries in fire. Batteries may explode or leak. Batteries should be kept away from small children. If swallowed, seek medical attention.

### FCC Notice:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## WARNING:

- Changes or modifications could void authority to operate.
- Do not exceed rated voltage and frequency specification.
- Only plug into properly grounded outlet that meets codes.
- Do not disassemble or repair.
- Unplug when not in use for an extended period.
- Do not install in area that may exceed 120°f (49°c).
- Keep Magic Wand dry.
- Do not use for other than intended purpose.
- Read and follow all instructions.
- This product is not a toy. Adult supervision should be exercised when product is used by children.

MADE IN CHINA