
Single Outlet Grounded Indoor Socket BTM-51188

With 8-Button transmitter MH-240







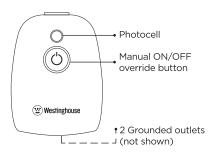

LED active ← − − − − indicator (not shown)

Control up to 3 Bluetooth Outdoor Remote Sockets with your remote control



SPECIFICATIONS

Rated: 125VAC/60Hz 15A/1875W Resistive 8A/1000W Tungsten

Remote uses: CR2032 lithium battery (included)

- 1. Download the HYBLU app from the Google play or Apple App store.
- 2. Plug your socket in
- 3. Open the HYBLU App.
- 4. The HYBLU App will automatically discover new sockets
- 5. To change the name of your socket, tap on the default name created by the App.
- 6. Tap on modify device name
- 7. Name your new socket and press done. (Sometimes pressing back button or return key on the keyboard is necessary to reveal "Done" located at the bottom right corner of the screen.

Each Bluetooth socket is paired with a default password (123456).

To prevent anyone on the outside from connecting to your sockets follow the steps below.

- 1. Tap on the name of socket
- 2. Tap on modify password
- 3. Input the new password and confirm password. Passwords must match.
- 4. Tap on "done" at down right side to submit the new password.
- 5. If the password of your Bluetooth socket does not match the app, the home screen indicates a small red icon at top right side of the sockets on/off icon.
- 6. Tap on the red icon
- 7. Input the correct password and submit
- 8. The red icon will disappear if the password is correct
- If you forget the password. Located the Manual on/ off override button on the Bluetooth socket. Press and hold the button for 8 seconds. The socket will reset to default password.

TIMER FEATURES

The HYBLU app features a built-in timer function to schedule all your Bluetooth devices around the home. Follow the steps below for timer programming.

- 1. Open the HYBLU app.
- On the home screen, depending on what type of socket you have (indoor/outdoor), a timer icon will appear to the right of the socket name.



INDOOR



- 3. Tap on the small icon.
- 4. Tap on the timer icon located on the lower right corner of the app's screen.
- 5. The app gives you the option of setting a weekly, countdown or vacation timer

WEEKLY TIMER

You can set 16 separate on/off programs with the HYBLU app. (The current time and day is automatically set your phone.)

In the program field start with Program 1.

- Set the "ON" time in the SET ON TIME field. Tapping on this field will bring up a scrolling menu to select the day or days of the week. If you set a program with multiple days, the OFF time field will be set automatically.
- 2. Set the "OFF" time in the SET OFF TIME field.
- 3. Repeat steps above for programs 2-16.

COUNTDOWN TIMER

- 1. Tap the Countdown Timer tab to reveal the countdown setting options.
 - The current time is set automatically by the app. The countdown timer will begin counting down from the current time.
- 2. Preset countdown options are 1 HOUR, 2 HOURS, 3 HOURS, 4 HOURS, 5 HOURS, 6 HOURS, 7 HOURS, 8 HOURS. These presets were made to allow you to set your timer quickly.

If none of the presets are what you require, a manual hour/minute field is located under the preset countdown timers: enter the number of hours/minutes you would like the device to shut down in.

VACATION MODE

Vacation mode is an additional daily timer that will give your home an appearance that someone is home.

- 1. Tap on the "Set On Time" to set. A scrolling window will appear to set.
- 2. Tap on the "Set Off Time" to set, A scrolling window will appear to set.

TO REVIEW/DELETE TIMER SETTINGS

1. To review your timer settings press the timer icon located to the right of the socket name (On your home screen).



- 2. A list of timer settings for that device will appear.
- 3. To delete this setting tap the delete button located to the right of the timer setting
- 4 Vacation timer will not have a delete button but rather an exit button. Press the Exit button to turn off the vacation mode setting

REMOVING UNPLUGGED/UNUSED SOCKETS

- 1. Place your finger on the right side of the on/off button (Device home page) for the device you would like to remove.
- 2. Press and hold until a red minus sign appears. Tap on the red minus sign and press ok to confirm.
- 3. The device is now removed until it is plugged in again.

FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- --Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver. -- Connect the equipment into an outlet on a circuit different from that to which the
- receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement

This device complies with ECC RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.