

1 x Transmitter

1 x Receiver

2 x Wall-mounted plastic board

4 x Installation accessories (screws and wall anchors)

1 x User's Manual

The diagram illustrates the components of the alarm system. On the left, a vertical rectangular unit contains a Microphone at the top, followed by an LED indicator, a Ring Button (bell icon), another LED indicator, and a Message Button (speech bubble icon). To the right is a larger vertical rectangular unit, the Wall Mount Board, which houses the Battery Chamber. Below these units is a horizontal rectangular unit containing a Speaker.

Diagram illustrating the components of the Chime Receiver:

- Power Switcher
- Message Receiver Button
- Speaker
- Wall Mounted Board
- Battery Chamber
- Volume Button
- Chime Switch Button

Prepare 6 AA batteries for the transmitter and receiver. Remove the batteries cover and insert the batteries into the doorbell kit.

Step1. Press both volume button and chime switch button on the right of receiver simultaneously until the blue and green LED light start flashing alternately and quickly.

Step2. Press both chime button and message button on the transmitter simultaneously until the blue LED light flash one time.

- Before install the transmitter and receiver, you need to prepare a drill, a cross-headed screwdriver, a flat-headed screwdriver, a level (not included in the package)
- Avoid installing the transmitter or receiver on the metal surface, because it might reduce the signal strength of transmitter.

Step4: Attach the transmitter and receiver on the plastic board. Test the wireless doorbell.

- For best results, use good quality alkaline batteries. Always replace old or weak batteries.
- Keep doorbell dry. If wet, dry immediately. Do not use cleaning solvents on electronic products. Solvents contain chemicals that can damage circuitry. Use damp towel or cloth to clean. Dry immediately.
- Do not expose the receiver unit to rain or immerse in water, it is not Waterproof. Do not immerse transmitter in water as it is not waterproof, it is water resistant to Ip44.

Wireless maximum transmit power	18.3dBm
Wireless Receiver Sensitivity	-109dBm
Operating frequency	433.3 Mhz
Wireless bandwidth	50KHz
Wireless transmission rate	50Kbps
Transmission distance	1000 Feet
Audio amplifier output power	maximum 3W
Ringtone bit rate	256Kbps
Speech bit rate	128Kbps
Number of ringtones	6
Max number of voice messages	12
Voice message duration	up to 30 seconds per message
Standby current	<50uA

The warranty for this appliance is for 12 months from the date of purchase. The appliance has been manufactured with care and meticulously examined before delivery. Please retain your receipt as proof of purchase. The warranty is void in the case of abusive and improper handling, use of force and internal tampering not carried out by our authorized service branch. Your statutory rights are not restricted in any way by this warranty.

If you have meet any difficulty while using this Tervis wireless doorbell, please contact us directly by the email address below.

Email Address: techsupport@tervis.com