


The reader / writer in the photo is a sample.
Please refer to "External photo" for the official photo as it is different from the actual reader / writer.

Service Manual

Cashbox RFID Tag Reader/Writer (R/W) removal and mounting


Cashbox RFID Tag R/W

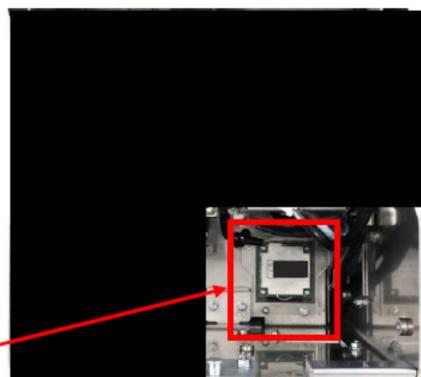

Cashbox RFID Tag Reader/Writer

- 1) With the Middle Cover and the Connecting Base detached, remove the 2 screws (Phil Pan Head SEMS (SW, PW) M4 x 8 and remove the Cashbox RFID Tag R/W connector, and remove the Cashbox RFID Tag R/W.

Loosen the harness clamp
and remove the Cashbox
RFID R/W connector.

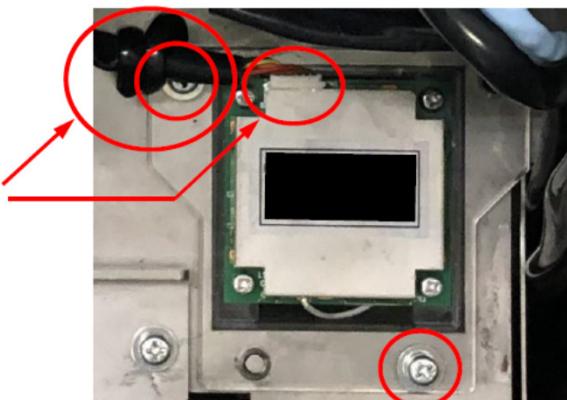


Cashbox RFID Tag Reader/Writer removal

- 2) To mount the Cashbox RFID Tag R/W, reverse the above steps.

* This RFID Tag reader writer module complies with part 15 of the FCC rules. The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the device.

Removed Cashbox RFID
Tag R/W

This does not apply to the
resin case.

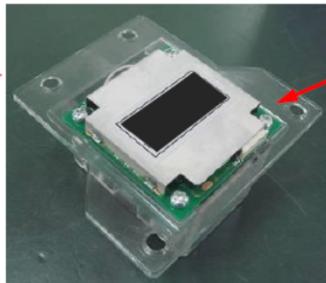

Removed Cashbox RFID Tag Reader/Writer