

ChronoVolt CV16 Kid's Smartwatch

Quick Start Guide

Battery

This device has a non-removable battery.

Do not attempt to remove the battery or try to disassemble the watch as this could result in personal injury, safety hazard, damage to the battery or the device.

Trying to remove the battery will void the warranty.

Note: Never expose the battery to temperatures higher than 140°F (60°C)

Charging your device

Plug the wall charger into an electrical outlet.

Plug the USB connector into your watch's wall charger and connect the charging block with magnets to the back of the watch.

Notice:

Before using your device, please fully charge it for two hours. Never leave the device charging for more than 5 hours as this will shorten the life expectancy of your battery.

Ensure the gold connector pads and magnetic charging pins are clean. If necessary, clean the charging pins with a cotton swab, microfiber cloth or an alcohol wipe cloth to remove dirt and debris.

Don't attempt to charge until all of the connection points are fully dry.

About Side Buttons

Upper Side Button

At power off status, long-press (>2s) the upper side button to Turn ON your device.

At power on status, long press (>2s) the upper side button to Power Off or Restart your device.

Short press (<2s) the upper side button to go to the Home Screen. When on Home, short pressing the upper side button will turn the display on and off.

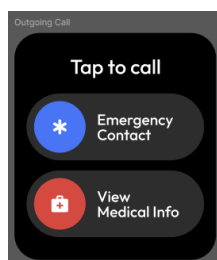
Quickly pressing the upper side button twice (2x) will enable the camera function.

Bottom Side Button

Long-press (>2s) the bottom side button will start calling your emergency contacts directly. Call the next Emergency contact if the first call is not answered within 20 seconds.

Short-press (<2s) the bottom side button will enter the Emergency / Med ID Screen. Press the **top button on the screen** to begin calling Emergency Contacts. The watch will call the next Emergency Contact if the first call is not answered within 20 seconds.

Press the **bottom button on the screen** to view important Medical Information (this info can be updated in the watch settings menu).



Quickly pressing the bottom side button twice (2x) will open your Contacts screen

911 Call:

1x Short-press(<2s) Upper Side Button, 2x times Short-press Bottom Side Button: 911 SOS Call screen opens. Slide left to right to begin calling 911.

Activate Your eSIM

Before using your watch, you must activate your eSIM as follow step:

Swipe to the left from the Watch Home Screen to find Settings  Settings > eSIM Setup. The watch will automatically start searching a Discovery Server and will install your eSIM. If it is not found, you can choose to either scan the QR Code which is provided by your Carrier or select your Carrier to automatically activate the eSIM.

Home Screen

Your watch has a touch screen. Just swipe right or left multiple times to access the Main Application Menu or Popular Applications. A Quick Settings menu can be seen if you swipe down from the Home Screen. You can also access the Notifications screen by swiping up from the Home Screen. When in any Application, swipe right to reverse an action or go back to the previous screen.



Long press (>3s) the Home Screen to change the Watch Face.



Popular Applications

Contacts

From the Home Screen, swipe left to open the Contact List  then select the contact you want to call.

Camera

From the Home Screen, swipe left and press the Camera  to take pictures and record videos.

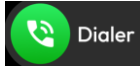
Message

From the Home Screen, swipe left and press the Message  to access your messages

Clock

From the Home Screen, swipe left and press the Clock  to set reminders, tasks, timers or use stopwatch

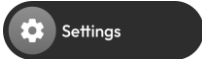 
Dialer

From the Home Screen, swipe right and press the Dialer  to display the phone keypad. Enter the phone number you want to call and press 

Gallery

From the Home Screen, swipe left and press the Gallery  to review your pictures or videos.

Settings

From the Home Screen, swipe right and press the Settings  to configure features and settings.

Notice: Icons may vary according to the watch model.