

**Ghostek**

Cannon Headphones

GHOHP018

**User Guide**

YIXINFA Electronics(Shenzhen)

# Getting started

## **Battery**

Before you use it for the first time, the Ghostek RD-28 must be fully charged. To do this, connect the Ghostek RD-28 into your computer via the USB to micro-USB cable. Indicator light is on in red to show that the device is charging. Once charging is complete, the light is on in blue.

When the battery is off, if you use Jack to Jack cable to connect the headset to the music player, you can still use Ghostek RD-28 to listen to the music, however you cannot use it to answer calls and its Bluetooth® function.

## **Switching the Ghostek RD-28 on/off**

Long press the "open key" button located on the right side to turn on/off the Bluetooth® function. When the indicator light is on, means the Bluetooth® function is on.

## **Wearing the headset**

Adjust the band without forcing it, so that the headphones will fit comfortably over your ears, then put the headset on, using the letters(L) and (R) to help you distinguish left and right. These letters can be seen on the headband.

*Note: The switch is located on the right side, "Plus key" button, "minus key" button and "open key" button.*

## **Bluetooth® Connection**

Before the RD-28 can be used with your telephone or Bluetooth® audio player, the two devices must be paired. Once the two devices have detected each other, it is no longer necessary to pair each other, it is no longer necessary to pair each time.

From your telephone or Bluetooth® audio player, start a search for Bluetooth® peripherals. Select "RD-28".

If you need to take the initiative to cut off the Bluetooth function, at the same time, please long press the "minus key" button and "plus key" button until the indicator light turns red and blue flashing state, and then re-boot into a new pair.

Once your telephone is paired with the RD-28, the two devices will connect to each other automatically each time that the Ghostek RD-28 is switched on. It is not possible to simultaneously connect several devices to the Ghostek RD-28.

## **Indicator light**

### **Bluetooth® indicator light**

*Note: The Bluetooth indicator is located between the right handset Micro USB and the 3.5 Audio*

*Jack.*

When using USB to Micro USB cable to connect the device to the computer:

If the light is on and in red, means the device is charging;

If the light is on and in blue, means the device is fully charged.

When not using any cable to connect the device to neither computer nor any music players:

If the light blinks in red and blue, means the device is pairing;

If the light blinks in blue, means the device has connected to a Bluetooth® music player;

If the light blinks in red, means the power is below 10% and the device needs to be charging.

## Music

### **Connecting the Ghostek RD-28 to the audio source**

Connect the Jack to Jack cable supplied to the Ghostek RE-28's right headphone and connect the other end to your audio player.

### **Volume**

To increase the volume, press the "plus key" button shortly. To reduce the volume, press the "minus key" button shortly.

### **Next/previous**

If your audio player is connected to the RD-28 via Bluetooth®:

To return to the previous track, long press the "plus key" button .

To move to the next track, long press "minus key" button.

### **Pause/Play**

To pause the music, press the "open key" button shortly.

To start playing again, press the "open key" button shortly again.

## Telephone

### **Receiving a call/Redial the last number**

An incoming call is indicated by a ring tone.

If you want to accept the call, press the "open key" button shortly.

If you want to refuse the call, double press the Bluetooth® button shortly.

If you double press the "open key" button shortly when you are during a call, it will redial the last number.

### **Use during a call**

To increase the volume during a call, press the " plus key" shortly. To decrease the volume during a call, "minus key" shortly. The volume is saved for future calls.

To hang up, press the "open key" button shortly.

## **Troubleshooting**

### **Reset**

In the event of a problem, you can reset the RD-28 by keeping long pressing the "open key" button keeping pressing again to turn on the Bluetooth® function.

### **For more information**

For more information or to visit our website at [www.ghostekproducts.com](http://www.ghostekproducts.com)

## **General information**

### **Warning**

- Listening to music at high volumes for long periods can lead to hearing problems. We do not recommend using these headphones at maximum volume, particularly for long periods of time. To protect your hearing, turn down the volume of your music player before connecting your headphones. After putting on the headphones, gradually turn up the volume until you reach a suitable level. Sound levels are measured in decibels(dB). Exposure to sound 85 dB or above may result in gradual loss of hearing. Monitor your use. Hearing loss depends on the intensity of the sound and the duration. The higher the volume, the less your exposure capacity will last. The lower the volume, the longer your exposure period can be.
- Be responsible: pay attention to your environment(acoustic) when you are wearing your headphones and listening to music on the radio.
- Avoid hazardous behavior that may cause an accident for you or somebody else(pedestrians, motorcyclists, drivers, cyclists) or cause damage to property when you are wearing your headphones.
- Ghostek would like to inform you that the use of stereo headphones is strictly forbidden when driving a motor vehicle. Ghostek also recommends not listening to music or the radio through your headphones when riding a bicycle, a scooter or any other means of transport for

which it is not compulsory to wear a helmet. Ghostek cannot accept any responsibility if you choose to ignore these warnings.

### **Security information**

- Do not disassemble, open, drop (mechanical abuse), crush, bend, deform, puncture, or shred.
- Do not modify or re-manufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, or expose to fire or excessive heat including soldering irons, or put in microwave.
- Only use the battery with the charging system specified by the manufacturer/supplier.
- Do not short-circuit a battery or allow metallic or conductive objects to contact both battery terminals simultaneously.
- Replace the battery only with another battery that has been qualified with same characteristics. Use of an unqualified battery may present a risk of fire, explosion, leakage, or other hazard.
- Dispose of used batteries promptly according to the manufacture/supplier's instructions.
- Improper battery use may result in a fire, explosion, or other hazard.
- Battery usage by children should be supervised.

### **Warranty**

Without prejudice of legal warranty, Ghostek products are warranted during 1 year from the date of purchase for defects in materials and workmanship, provided that no deterioration to the product has been made, and upon presentation of proof of purchase (date of purchase, location of sale and product serial number) to the retailer. Warranty does not cover: upgrading of the software items of the Ghostek products with Bluetooth® cell phones for compatibility purpose, data recovery, deterioration of the external aspect due to normal use of the product, any damage caused by accident, misuse, misapplication, or Ghostek products. Ghostek is not responsible for storage, loss or damaged to data during transit or repair. Any product wrongfully declared to be defective will be returned to sender and inspection, process and carriage costs will be invoiced to him.

### **Information relating to the battery and to the charger- Safety precautions**

Only use the provided charger. Never use a damaged charger. Remember to charge the device before storing for a long period of time. Do not leave your device in hot or cold areas (car in direct sunlight or parked in a garage in winter). Always store in area where temperatures remain stable. The charger and the device can become hot during charging. Do not cover. Do not use your device in the rain or in/near any damp area. Do not disassemble the device. In the event of battery leakage, avoid contact of the liquid with skin and eyes. If contact occurs, rinse affected areas with plenty of water and contact a physician.

### **Correct disposal of This Product (Waste Electrical & Electronic Equipment)**

This marking shown on the product or its literature indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly. Reset to promote the sustainable reuse of material resources. Household

users should contact either the retailer where they purchased this product, or their local government office for details of where and how they can take this item for environmentally safe recycling. Business users should contract their supplier and the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

### **Modifications**

The explanations and specifications in this guide are given for information purposes only and may be modified without prior notice. They are deemed to be correct at the time of going to press. The utmost care has been taken when writing this guide as part of the aim to provide you with accurate information. However, Ghostek shall not be held responsible for any consequences arising from any errors or omissions in the guide, nor for any damage or accidental loss of data resulting directly or indirectly from the use of the information herein. Ghostek reserves and without any obligation to notify users. If so, a later version of this guide might be available in electronic format at Ghostek's website at [www.ghostekproducts.com](http://www.ghostekproducts.com).

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.