# User's Manual

IF-4G

**Cellular Wireless Emergency Response System** 



### **TABLE OF CONTENTS**

System Components	2
Installation3	3
Affects on Signal Range	.4
In Case of Emergency	.4
Testing	5
Testing Log	6
Cellular Communications	.7
Warranty & Liability Information	7
Important Information	8
Important! Please test your system at least o	once a
month (See Page 5).	

# **System Components**

Your system may contain these or additional components.




Work with acessary pendant below



## **Installation**


- 1 Place the console in a CENTRAL location in your home. Be sure it is on a flat, stable surface away from other electrical devices (i. e. cordless phones, fans, radios, fluorescent lamps, etc.).
- 2 Plug the power supply into an **un-switched** 120 VAC power outlet (an outlet that is not controlled by a wall switch).
- 3 Turn unit ON.

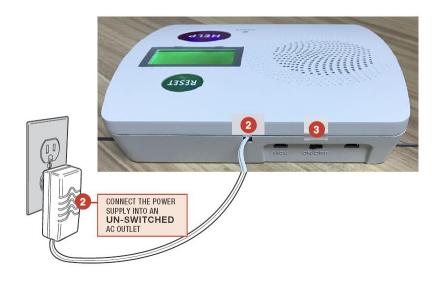

#### **AFFECTS ON TRANSMITTER SIGNAL RANGE**

It's important to properly position your console within your home.

Since console is wireless communication based, the console relies solely on adequate cellular reception within the installation area in order to function.

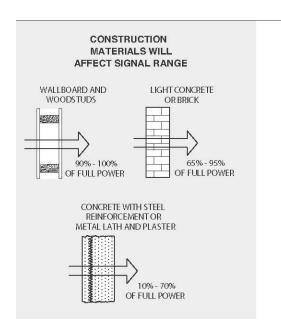



# **In Case of Emergency**

A call for help can be made with the Pendant or Console.







OR CALLING FOR HELP
WITH THE CONSOLE

- (1) IF YOU NEED HELP, PRESS THE BUTTON ON THE CONSOLE OR YOUR PENDANT FOR AT LEAST TWO SECONDS. Do not press the HELP button more than once per emergency. (Note: The pendant must be within approximately 600 feet of the console. Distance will vary with installation and environment.)
- You will hear "EMERGENCY CALL BEING PLACED" from the console's speaker.
- 3 Wait to hear the operator's voice from the console (the average wait should be less than two minutes).
- (4) Follow the instructions from the operator.

DO NOT PRESS RESET BEFORE TALKING TO THE OPERATOR OR YOUR CALL WILL NOT BE SUCCESSFULLY PLACED.

# **Cellular Communications**

# Important information regarding your console communications.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2)this device must accept any interference received, including interference that may cause undesired operation.

This equipment should be installed and operated with minimum distance 7.9 inches (20 cm) between the radiator & your body.

Note: This equipment has been tested and found to comply with the limits for a

Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not

installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- —Reorient or relocate the receiving antenna.
- —Increase the separation between the equipment and receiver.
- —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- —Consult the dealer or an experienced radio/TV technician for help.

Warranty Provisions

Liability Information

**TBD**