



Outdoor Mini Speaker

with Built-in Phone Mic



Model No.: SC-1454IPX

Read before use and retain for future reference.

SAFETY INSTRUCTIONS

- Clean only with dry cloth.
- Do not block any ventilation openings.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, objects have fallen into the apparatus, does not operate normally, or has been dropped.

WARNING!

This is not a toy. Adult supervision is recommended. Do not allow small children to use this product. The presence of small parts may present a choking hazard. Do not use this product with non-compatible stereo devices.

SPECIFICATION

- Bluetooth Version: 5.1
- Operating Distance: 33FT
- Output Power: 2 x 5W
- Input: 5V / 500mA, 3.5mm Aux, Micro USB
- Battery: 1800mAh
- Frequency Response: 20Hz-18KHz
- Driver: 40MM
- IPX6 water resistant
- Charging: Approx 3-4 hours
- Playback: Approx 3-4 hours
- Dimensions (LxWxH): 193.5 x 37.5 x 80mm
- Rechargeable: Micro USB cable (INCLUDED)
- 3.5mm auxiliary cable (INCLUDED)

(Note: Battery life & charging time may vary based on usage & types of devices used.)

INSTRUCTIONS FOR USE

CHARGING THE DEVICE

Before using this speaker for the first time, charge for 24 hours.

1. Plug the Micro end of the charging cable into the port on the speaker. Plug USB end into a

computer's USB port or a compatible AC wall adapter.
2. The red LED will turn on to indicate the device is charging.
3. Once fully charged, the red LED will turn off. When Battery is low, approximately 3-4 hours of charging time is needed to fully recharge the battery.

PAIRING THE DEVICE

1. Place speaker within 30ft of Bluetooth enabled device.
2. Power On/Off: Press and hold the ON/OFF button for 2-3 seconds
3. On your device's Bluetooth menu, find and select "SC-1454IPX"

BASIC INSTRUCTIONS

To turn speaker on, press and hold the ON/OFF button for 2-3 seconds. The speaker will have a voice prompt and a blue LED will flash quickly. The blue LED will stay on when pairing is complete. The blue LED will flash slowly when playing music. To turn speaker off, press and hold the ON/OFF button for 2-3 seconds.

LED INDICATOR

Charging: Red LED on
Fully Charged: Red LED off
Pairing Mode: Blue LED will flash quickly
Connected: Blue LED stay on
Playing: Blue LED will flash slowly

SPEAKER BUTTON FUNCTIONS



1. Power On/Off: Press and hold the ON/OFF button for 2-3 seconds
2. Previous song: Press once to go to previous song.
3. Next song: Press once to go to next song.
4. Volume down: Press once or hold it to decrease the volume.
5. Volume up: Press once or hold it to increase the volume.
6. Play/ Pause/ Phone Answer / Reject and Redial button
When you receive a call, press the button once to answer/ hang up. Press and hold to reject the phone call. Press twice to redial last number. When the call ends, music will resume playing.
7. AUX IN: 3.5mm audio input (line-in)
8. DC5V: Use the included Micro USB cable to connect device to a computer USB port/ AC power adapter with USB to charge.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

LISTENING TO FM RADIO

1. Plug the AUX cable end of the included USB cable into the charging port, and leave the other end of the cable open. The AUX cable serves as FM antenna while in FM radio mode.
2. Short press the Power Button to switch to FM radio mode.
3. Short press the pause button to activate automatic channel search.
4. Short press the pause button to stop automatic channel search.
5. Short press the or button to switch selected stations.
6. Press once or hold the or button to Increase / Decrease the volume.

TROUBLE SHOOTING

NO POWER

- Recharge your speaker using the micro-USB cable. If the problem persists, try another micro-USB cable.

NO RESPONSE FROM THE UNIT

- Ensure your Bluetooth device supports an A2DP, AVRCP, or HFP profile.
- Check if both devices are paired and connected to each other.
- Restart the device and try to reconnect.

BATTERY INFORMATION

SPEAKER BATTERY

WARNING: The device is equipped with an integrated lithium battery. The battery cannot be replaced. Do not attempt to remove the battery from the device.

DISPOSAL



Waste electrical production should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

Warranty

Basic Warranty StatementSupersonic Inc. ("Supersonic") warrants this product to the original purchaser ONLY, to be free from defects in materials and workmanship under normal use, for ninety (90) DAYS from the date of original purchase. Proof of purchase (receipt) required. Please visit <http://www.supersonicinc.com/warranty> for additional information.

Garantía

Declaración básica de garantía Supersonic Inc. ("Supersonic") garantiza este producto al comprador original SOLAMENTE, para estar libre de defectos en materiales y mano de obra bajo uso normal, por noventa (90) DÍAS a partir de la fecha de compra original. Se requiere una prueba de compra (recibo). Visite <http://www.supersonicinc.com/warranty> para obtener información adicional.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced technician for help.
Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.