

WIRELESS EARPHONES


FOR ITEMS : BC
V40041WN-DSW

In the Box



Micro USB
Charging Cable

Take a Look

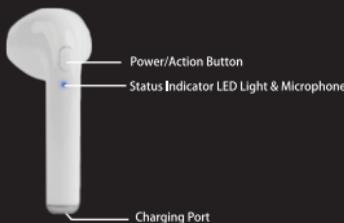

Wireless Earphones

Charging



Charging Earphones
Charge Time = 1 hourum

- (red) = Charging
- (blue) = Charged



Powering On/ Wireless Pairing



Press & Hold for
3-4 Seconds



Ready For Wireless Pairing

Controlling Your Earphones



One Click: Play/Pause/Answer Incoming Call/End Call

Two Rapid Clicks: Redial Last Number

Hold 1.5 Seconds: Next Track (When Not Receiving a Call)

Hold 2-3 Seconds: Reject an Incoming Call

Hold 3-4 Seconds: Power Off (When Not Receiving a Call)

Troubleshooting



- If only one earbud is working, press the other earbud to reconnect.
- If earbuds won't connect, power both on and when both indicator lights flash blue and red, double click one of the earbuds.
- Remember to always charge earbuds.
- Keep earbuds within range of smartphone (30 feet).

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

To Obtain Warranty Service and Troubleshooting Information:

Call 1-800-592-9541