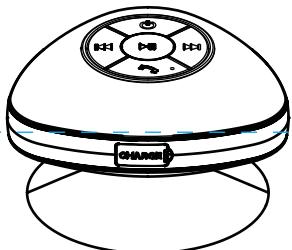


9"

**SHARPER
IMAGE®****bluetooth suction
SHOWER SPEAKER**
with built-in mic**1 YEAR LIMITED WARRANTY**Register your product at: www.ginsey.com/registration

- Read all instructions carefully before use.
- Carefully remove all contents from the packaging and inspect the product to make sure all components have been received.

INSTRUCTIONS


Press the power button for five seconds to turn the speaker on. A flashing blue LED and sound indicate that the device is now turned on.

1. Bluetooth Connection

- Speaker will automatically pair with the last device. A quick blue LED flash indicates the speaker is pairing mode. (The pairing time will be different depending on the device)
- Turn on the Bluetooth in your smartphone settings, search for "SI BT speaker" and choose to pair with it. The blue LED will flash slowly once pairing is successful.
- Play music wirelessly once pairing is successful.
- Answering and ending a call works the same way: simply click the  button on your speaker unit. Some smartphones automatically use Bluetooth when answering calls.

2. Volume Control

Press and hold the  buttons to adjust the volume.

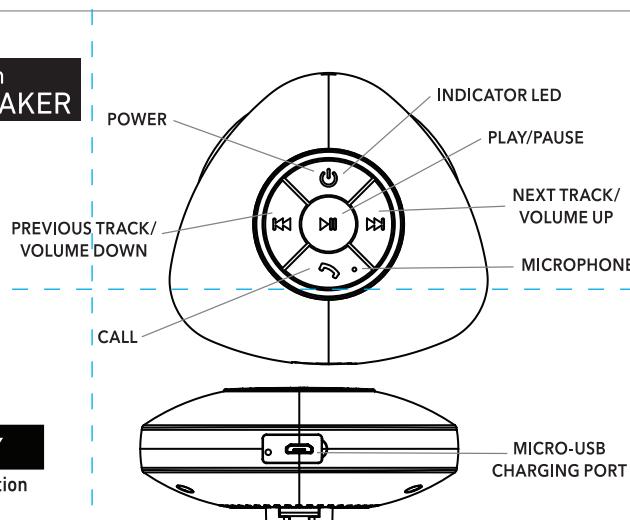**Packing List**

1x Shower Speaker, 1x User Manual, 1x USB Charging Cable

3. Song Selection

Tap the  buttons to skip to the previous or next track.

4. Answering the Phone

Press the  to answer an incoming phone call. The built-in microphone allows for hands-free operation. Press the  to hang up the phone.

5. Connecting to a computer or tablet

Please ensure you have Bluetooth capability on your device then pair the Bluetooth using the same steps above.

6. Charging the Speaker

Charge the device by Micro USB cord or any USB AC adapter. The red LED indicates the device is charging, LED light will turn off when fully charged. LED indicator will flash red when speaker has low battery. The charging time is about two hours.

7. Instructions for LED indicator

Blue LED flashing quickly indicates pairing mode.
Blue LED flashing slowly indicates successful pairing.
Solid red LED indicates the device is charging.
Flashing red LED indicates low battery.
Red LED turns off when fully charged.

Product Features

- Coated in Silicone with IPX4 grade water-resistance.
- High-sensitivity microphone optimized for hands-free calls.
- Supports APE, CD(WAV), MP3 and WMA formats in Hi-Fi sound quality.
- Works with a range of Bluetooth enabled platforms including iOS and Android devices.

Product Specification

- Bluetooth Version 4.1+EDR(A2DP)
- Bluetooth Transmission Range: 26 - 32 ft. (8 - 10 m)
- Output Power: 2W
- USB Charging Voltage: DC 5V
- Battery Capacity: Built-in 400mAH Li-ion battery, 5V
- Playback time: 1.5 hours*

*approximate duration while playing at 50% volume level.

CAUTION:

- The shower speaker is water resistant. If it falls in the shower or gets completely submerged in water, quickly dry it off with a towel. Shake the speaker to get as much water out as possible. Blow into the speaker with a few quick bursts of air to clear the water out of the speaker holes.
- DO NOT attempt to disassemble or open the speaker housing as this will void the warranty.

FCC INFORMATION

- Model No: 01345
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ONE YEAR LIMITED WARRANTY

For warranty service contact:

Ginsey Home Solutions
2078 Center Square Road
Swedesboro, NJ 08085
1-800-257-7844
service@ginsey.com

Customer Service is available
8:30am - 5:00pm (EST)
Monday - Friday

**SHARPER
IMAGE**

For more information on
Sharper Image products, please
visit: www.sharperimage.com

SHARPER IMAGE® name and logo are
registered trademarks. Manufactured and
Marketed by Ginsey Home Solutions under
license. © Sharper Image. All Rights Reserved.

100% SCALE

FOLD LINE - - - - -

6"