


REMOTE CONTROL EGG VIBRATOR

QUICK INSTRUCTIONS

Please read carefully before using this product


Egg vibrator Key Description

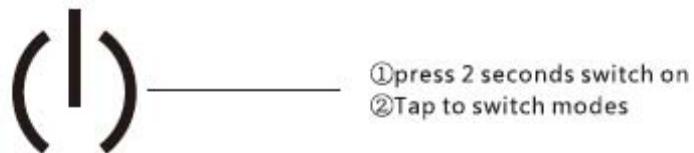

Long press: ON/OFF

Short press: switch mode

Remote Control Key Description

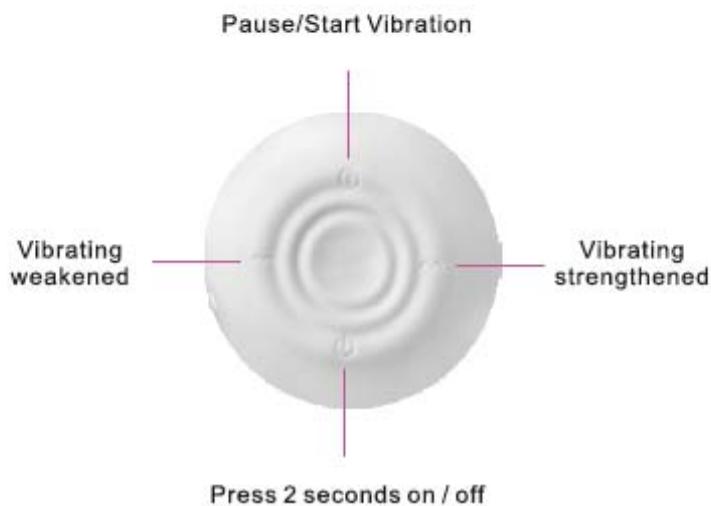

Long press: ON/OFF

Remind:please kindly noted that power on the product firstly, Then turn on the remote control. if the product is vibrating, but cannot be controlled, it means the battery power is not enough, Please change a new battery.

Product instruction



1. Color: purple
2. Size: 39x165mm
3. Power supply to egg vibrator: built-in Li-Ion battery
4. Power supply to remote control: a 23A dry battery
5. Working hour: 3 hours
6. Material: high-quality silicone
7. Waterproofing: IPX7
8. Vibrator volume: less than 50 decibels
9. Product features: 10 different vibrating mode : high speed

Vibration motor rating 11000r/min, with mini fashionable remote control

Operation instructions



A :4Keys of remote control--

On/Off: Pause: vibrating
strengthened: vibrating
weakened

1.1 "On/Off Key--press it for 3seconds to switch on the remote control.(Note:the egg vibrator cannot be switched on with remote control.)After switching on the egg vibrator: it works on level 1 vibrating : red indicator goes off in 5 seconds.

1.2 "Vibrating switch Key--After pressing this,7 different vibrating levels which varies from weak to strong will be cycled.

1.3 "Pause Key--press it do control the egg vibrator to stop and go on working.

B: Key of egg vibrator


1: Press it for 3seconds to switch on the egg vibrator: the red indicator goes off in 5 seconds.

2: Tap it to switch vibrating mode: then 7 different vibrating levels which varies from weak to strong will be cycled.

C:Product maintenance

1.The remote control is not waterproof: do not wash it.

Remote Control Battery installation

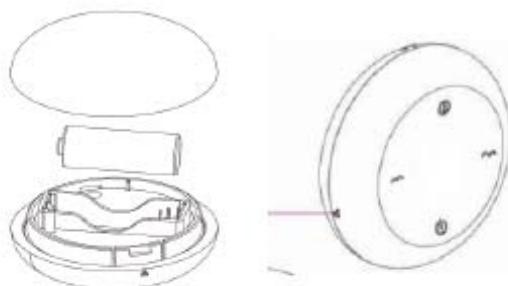

- ①Press and hold the Switch of battery cover
- ②Open the remotecontrol back cover
- ③Put a 23A battery (please pay attention to positive and negative marking)
- ④Cover remote control Back cover

Remote control cover installation instructions



- ①when install the back cover, please make sure the dots on up cover and back cover are correctly aligned with each other.
- ②There are two buckles nearby both dots, please install one side first.



③Then fastening another side according to the arrow direction.

Charging instructions



- ①Unscrewing egg Vibrator according to arrow direction
- ②Connect one end of The USB interface to USB charging hole
(Can be also connected To the computer USB Port)

Tips :

- 1 if not used for a long time, remove the batteries to avoid the battery damage and products corrosion
- 2,if not used for a long time, please recharge vibrator at least once every three months, in order to avoid battery aging;
- 3,remember keep the product away from heat and dirt, And never press the product for long time to avoid distortion;
- 4,the remote control is not waterproof, do not wash.

Federal Communications Commission (FCC) Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by **Shenzhen Yoyo Technology Co., Ltd** may void the FCC authorization to operate this device.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.