

FCC statement:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement

This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Speaker box

MODEL: F115LED



Operating/Safety instructions


Caution: Please read and understand these instructions before installing or operating this unit. These instructions contain important safety information regarding the use and maintenance of this unit.



Caution! Do not remove the cover under any conditions. There are no user serviceable parts inside this unit. Do not attempt any repairs yourself; doing so will void your manufacturer's warranty. Refer all servicing to qualified personnel.

Warning! To prevent or reduce the risk of electrical shock or fire, do not expose this unit to rain or moisture.

- Do not expose this apparatus to dripping or splashing liquids. Do not place objects filled with water on the apparatus. Do not expose it to rain or moisture, and do not use it near water.
- Clean only with a dry cloth.
- Do not attempt to remove or break off the ground prong from the electrical cord. This prong is used to reduce the risk of electrical shock and fire in case of an internal short.
- Do not attempt to operate this unit if the power cord has been frayed or broken.
- Disconnect from main power before making any type of connection.
- Always be sure to mount this unit in an area that will allow proper ventilation. Allow about 6" (15cm) between this device and a wall.
- Do not attempt to operate this unit, if it becomes damaged.
- This unit is intended for indoor use only, use of this product outdoors voids all warranties.
- Unplug this unit during lightning storms or when unused for long periods of time.
- Always mount this unit in safe and stable matter. Always use proper lighting safety cables when hanging lights and effects overhead.
- Protect the power cord from being walked on or pinched.
- Do not install near any heat sources such as radiators, heat registers, stoves, or any other apparatus that produce heat.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

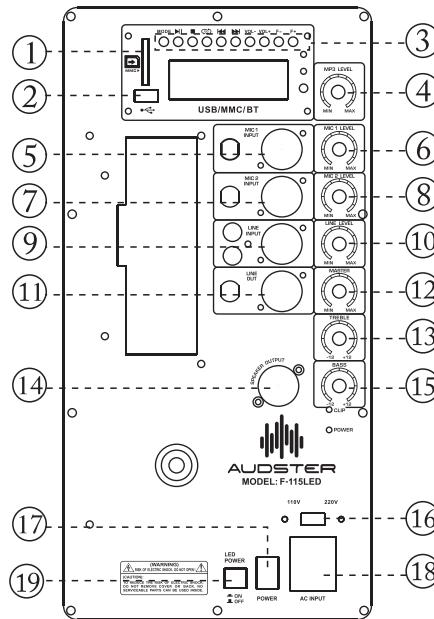

1. MEMORY CARD

2. USB PORT

3. CONTROL BUTTON OF USB.MEMORY CARD.BT

MODE	Short press: Switch between <u>USB/MEMORY Card/BT</u> Long press: <u>ON/OFF MP3</u>
▶ 	<u>Play/Pause</u>
EQ	Short press: Switch between <u>RA/RO/RR</u> Long press: <u>Switch between EQ mode (11types)</u>
◀	<u>Short press: Last_Song</u>
▶	<u>Short press: Next_Song</u>
VOL-	<u>Volume down</u>
VOL+	<u>Volume up</u>
F-	<u>File down</u>
F+	<u>File up</u>



4. MP3 LEVEL

5. MIC 1 INPUT

6. MIC 1 LEVEL

7. MIC 2 INPUT

8. MIC 2 LEVEL

9. LINE INPUT

10. LINE LEVEL

11. LINE OUT

12. MASTER LEVEL

13. TREBLE

14. SPEAKER OUTPUT

15. BASS

16. VOLTAGE SWITCH

17. POWER ON/OFF

18. POWER PORT

19. LED POWER ON/OFF

Technical specification:

1. 2-way amplified plastic loudspeaker
2. Woofer: 15" 60oz, 75mmVC
3. Tweeter: 44mm driver, 23oz
4. Frequency response: 45Hz-20KHz
5. Sensitivity: 98±2dB
6. USB,Memory Card,MP3,BT,Speaker out function
7. Voltage: 220/110V, 50/60Hz