




SWISS TECH

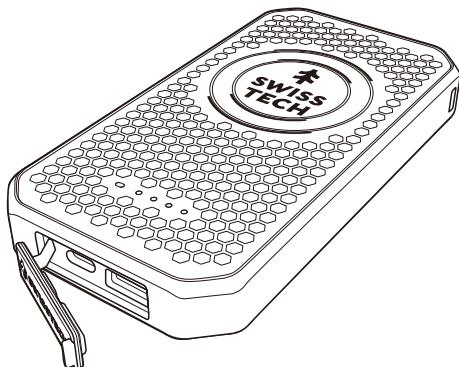

ANTREIBEN M2 10,000 mAh Wireless Power Bank

Rugged reliability for any adventure.



POCKET-SIZED POWER

ANTREIBEN M2

10,000mAh Wireless Power Bank

Stay charged and prepared for any situation with the Swiss Tech Antreiben M². This rugged, portable power bank provides pocket-sized power to any device, with 10,000mAh and a 20W max charge to ensure your device keeps going wherever you are. The Antreiben M² features 1 USB-A and 1 USB-C input/output ports plus a wireless charging pad on one side for ultimate versatility as well. Durable construction that is weatherproof and impact-resistant, maintains a good grip in all conditions with a rubberized and textured casing. The Antreiben M² provides power for any adventure in a size that can go anywhere.

Discover more of Antreiben M² at swisstechoutdoors.com

Swiss Tech 10,000mAh Wireless Power Bank Vendor Stock Number: 88632


Questions, problems, or missing parts?

Before returning to the store, contact

GreatStar Customer Service

9AM-4PM CST, M-F

Call: 1-855-782-3013 or Email: help@swisstechoutdoors.com

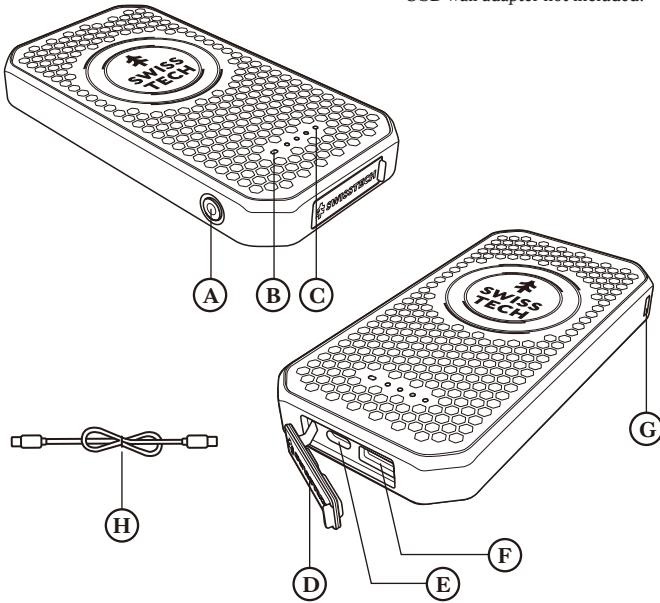

USB wall adapter not included.

WARNING

- Read all instructions before using this power bank.
- To reduce the risk of injury, close supervision is necessary when the power bank is used near children.
- Best to not expose power bank to rain or snow, because this power bank is IP54 weatherproof only.
- Protect the power bank from potentially dangerous locations such as places with heat source, extreme temperatures, direct sunlight, strong jolts, explosives or flammable gases, vapors and solvents.
- Exposure to fire or temperature above 212°F (100°C) may cause explosion.
- This power bank can be operated in open-air conditions. It should not be operated in an enclosed, unventilated space such as a closed car, carrying bag, pocket, purse or bedding. Failure to follow these instructions may damage the power bank by overheating.
- Do not place anything on top of the power bank during or after each use to prevent potential fire.
- Use of power supply or charger non-qualified may result in a risk of fire or injury to people.
- Overload outputs above rating may result in a risk of fire or injury to people.
- Do not use the power bank that is damaged or modified, which may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- Never modify the power bank or any of its parts as this may result in serious personal injury.
- Do not disassemble the power bank. Take it to a qualified service person when service or repair is required.
- Store this power bank in room temperatures below 86°F (30°C).
- Prevent the power bank from undergoing any mechanical stress.
- Do not store or transport the power bank with metal objects.
- Be cautious of drops, bumps, abrasions, or other impacts to this power bank. If there is any damage to the power bank such as dents, punctures, tears, deformities, or corrosion due to any cause, discontinue use it and Contact Manufacturer or dispose of it in an appropriate manner at your local battery-recycling center.
- Keep the power bank clean and free from oil and grease.
- Clean only with dry cloth; avoid cleaning the power bank with rough or chemical objects.
- Please handle the power bank carefully. Jolts and impacts can damage the power bank.
- Also observe the safety and operating instructions of any other devices connected to the power bank.
- Never use the power bank immediately after it has been brought from a cold room into a warm one.
- Allow the power bank to warm up to room temperature before connecting and using it. This may take a few hours.
- Condensation could destroy the power bank.
- Never leave the power bank unattended during use.
- The power bank is not a toy. Keep it out of the reach of children and pets.
- If this power bank is accessible to or may be used by a minor, purchasing adult agrees to

CONTENT

PART	DESCRIPTION	QUANTITY
A	Power ON/OFF Button	1
B	Wireless Charging Indicator	1
C	Battery Capacity Indicator	4
D	Silicone Cover	1
E	Input/output Charging Port (USB-C)	1
F	Output Charging Port (USB-A)	1
G	Lanyard Hole	1
H	Charging Cable	1

be solely responsible for providing supervision, instruction, and warnings. Purchaser agrees to defend, indemnify, and hold Manufacturer harmless for any claims or damages arising from unintended use or misuse by a minor.

All power banks have gone through a thorough quality assurance inspection. If you find that your power bank is excessively hot, is emitting odor, is deformed, abraded, cut, or is experiencing or demonstrating an abnormal phenomenon, immediately stop all power bank use and contact Manufacturer.

- Switch off the power bank by double press when not in use.

If your power bank is not used for an extended period, please take the flowing steps once every three months to ensure proper function:

- Charge the power bank
- Discharge the power bank by using it to supply power to a mobile device
- Recharge the power bank for at least 2-4 hours
- Store the power bank in a cool, dry place to avoid short-circuiting and damaging the power bank
- If it is no longer possible to operate the power bank safely, stop using it and prevent further or accidental use.
- Never dispose of batteries in the garbage. Disposal of batteries in the garbage is unlawful under state and federal environmental laws and regulations. Always take used batteries to your local battery - recycling center.
- Make sure not to squeeze, bend or in any way damage the cable.

SAFETY INFORMATION

- Be sure to charge the power bank in room temperatures from 32°F to 104°F (0°C to 40°C)
- While charging, if the room temperature is out of the range from 32°F to 104°F (0°C to 40°C), the product would stop charging due to protection setting, then the 4 indicator lights flash quickly until it returns to normal condition and restart charging.
- Be sure to use the power bank to charge other devices in room temperature from 14°F to 140°F (-10°C to 60°C)
- While charging to other devices, if the room temperature is out of the range from 14°F to 140°F (-10°C to 60°C), the product would stop charging to others due to protection setting, then the 4 indicator lights flash quickly until it returns to normal condition and restart charging.
- Never use this power bank around flammable liquids such as gasoline, or in potentially dangerous locations such as places with heat source, extreme temperatures, direct sunlight, strong jolts, explosives or flammable gases, vapors and solvents.
- Do not operate the power bank in an enclosed, unventilated space such as a closed car, carrying bag, pocket, purse or bedding.
- If there is any damage to the power bank such as dents, punctures, tears, deformities, or corrosion due to any cause, discontinue use it.
- To avoid electrical shock, do not put power bank in water or any other liquids.
- Do not store this power bank where it can easily fall into tub/sink/pool of water.

- Safe operation can no longer be guaranteed if the power bank:
 - is visibly damaged
 - is no longer working properly
 - has been stored for extended periods in poor conditions
 - has been subjected to any serious transport - related stress
- If it is no longer possible to operate the power bank safely, stop using it and prevent further or accidental use.
- Do not operate this power bank after it has malfunctioned.
- Incorrect reassembly may result in a risk of fire or injury to persons.
- Do not use the power bank more than its output rating, and always make sure the power source conforms to the rating on this power bank. Hence, it must always be used in accordance with all electrical and safety codes and ordinances, including the most recent National Electric Code (NEC) and with the Occupational Safety and Health Act (OSHA) Volume 1 on General Industry Standards and interpretations.
- Do not use or permit use of the power bank in beds or sleeping bags as this fixture can melt fabric and may result in burn injury.

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experience radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

ELECTRICAL INFORMATION

- The charging cable is compatible with a qualified USB wall adapter.
- To ensure proper charging, use the enclosed USB charging cable.
- To use a qualified PD cable and PD wall adapter can enlarge the output and input efficiency.
- Pull by plug rather than cable when disconnecting power bank to avoid damage to electric plug and cable.

SPECIFICATIONS

Power bank Weight	277g	Power bank Length	5.83-inches
Power bank Width	3.07-inches	Power bank Thickness	0.77-inches
Rated Capacity: 10000mAh/3.70V/37.0Wh			
Actual Capacity: 5800mAh/5V			
Input: (USB-C) 5V---3A, 9V---2A, 12V---1.5A			
Output: (USB-C) 5V---3A, 9V---2.22A, 12V---1.67A (PD 20W) (USB-A) 5V---3A, 9V---2A, 12V---1.5A, 22.5W(Max) (TX Wireless) 5V---1A (5W) (All Ways of Above) 5V---4.5A(Max)			

OPERATING POWER BANK

- CHARGING THE POWER BANK BY CABLE

- Plug one end of the cable (USB-C) into the power bank.
- Plug the other end of the cable (USB-C) into the computer or wall charger.
- Power bank fully charge time: 2 to 4 hours.
- Battery indicator lights show the actual power, fully charged when all 4 lights are on.
(You can also use your own qualified compatible cable with USB-A & USB-C ends to charge your devices.)

USB INPUT	EST. RECHARGE TIME
12W	4h 10min
15W	3h 30min
18W	2h 55min

- CHARGING OTHER DEVICES BY CABLE

- Plug one end of the cable (USB-C) into the power bank
- Plug the other end of the cable (USB-C) into the devices
- The 4 indicator lights show the actual power capacity when charging
(You can also use your own qualified compatible cable with USB-A & USB-C ends to charge your devices.)

USB OUTPUT	EST. CHARGE TIME
12W	2h 40min
15W	2h 10min
18W	1h 45min
20W	1h 35min

- CHARGING DEVICES BY WIRELESS PAD

- Be sure the device is compatible with the wireless charging function
- Place the device on the power bank's wireless charger and center to match the pad
- Press the Power ON/OFF Button to show the remaining power capacity and ensure the device is charging
- Double press the Power ON/OFF Button to stop charging
- Wireless charging indicator light is blue when charging, and turns off when fully charged
- If the blue charging indicator isn't activated when trying to charge, check the following:
 - Be sure the device is matching to pad correctly
 - Be sure the power bank has enough capacity for output, press the Power ON/OFF button to activate the capacity indicator lights and check again
- If the charging Indicator flashes blue when charging, there could still be an issue: Be sure there is no metal material making contact with the pad

WIRELESS OUTPUT	EST. CHARGE TIME
5W	4h 25min

TROUBLESHOOTING

If the power bank does not work, check the following:

- Fully charge the power bank before use.
- Be sure to press the Power ON/OFF button to start charging.