

# HYPNOLIGHT ® User Manual

## POWER

The power adapter can handle 120-240 volts. Foreign users need to obtain an adapter to match plugs. If you're using an extension cord, it needs to be rated 2A for each 10 attached HypnoLights. See the section on Chaining HypnoLights for extension cord details.


**ALWAYS UNPLUG FROM WALL  
BEFORE MANIPULATING PLUGS!**

**DO NOT IMMERSE IN WATER! HYPNOLIGHTS ARE  
WATER-RESISTANT, NOT WATER-PROOF!**

**ALWAYS USE A PROPER RATED EXTENSION CORD!**

## SETUP

- 1 If the wall plug (1) wire is not already connected to the HypnoLight, align the notch on the plug (2) on the power wire with the plug (3) on the HypnoLight, and plug in. **DO NOT FORCE.**

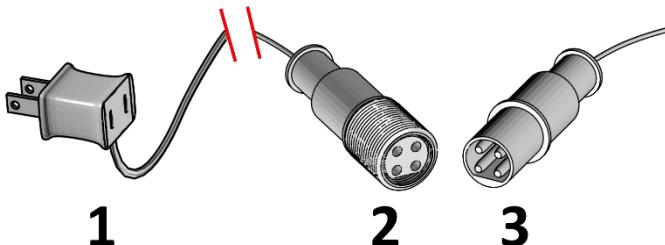

- 2 Once the plugs (2) and (3) are pressed snugly together, screw the weather cover over them for safety.
- 3 Ensure the end cap is covering the far end of the HypnoLight (which is a plug that looks like (2)).
- 4 Plug in the power plug (1) to a power outlet, and enjoy the show!
- 5 If the remote does not work, see the **SYNC REMOTE** section.

## CHAINING HYPNOLIGHTS

HypnoLights can be chained end to end, up to 10 in a row, easing larger installations like houses and yards. The 11<sup>th</sup> one will blink red as a warning you have exceeded the supported number of strands.


### Extension cords must be rated 2A or more for each 10 HypnoLights.

To power 1 to 10 of them, you need 2A, to power 11 to 20 of them, you need 4A, etc.

- 1 Remove the water cover from the far end of the **first** HypnoLight, leaving a plug which looks like plug (2) above on the end.
- 2 Disconnect the plugs (2) and (3) on the **second** HypnoLight.
- 3 Plug the **first** HypnoLight plug (2) into the **second** HypnoLight plug end (3), making a longer string of lights. Repeat up to 10 of them.
- 4 **Leave the last HypnoLight plug covered with the weather plug.**
- 5 The remote for the first one controls the entire length.
- 6 The first one in the strand will transmit settings to the rest.

## REMOTE CONTROL

Here are what the buttons on the remote do.

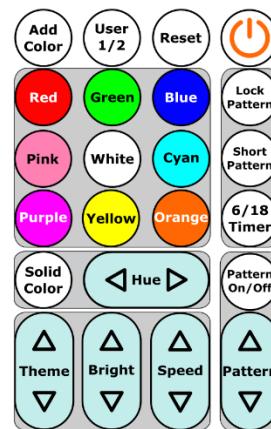

Button	Effect
<b>On/Off</b>	Turns HypnoLight on/off. Also syncs remote - see <b>REMOTE SYNC</b> section.
<b>▲ Theme</b> ▼	Next/previous theme. Default is All (all colors), then cycles in chronological order, looping at ends. All (all colors) Christmas (Red + Green), Thanksgiving (Yellow + Orange + Tan), Halloween (Red + Green + Purple), 4 <sup>th</sup> of July (Red + White + Blue), Easter (Blue + Red + Green), St. Patrick's Day (Green + Orange), Valentine's Day (Red + Pink)
<b>▲ Pattern</b> ▼	Previous/next pattern. If blinks red, the pattern has been removed from the current playlist. Pressing <b>Pattern On/Off</b> will re-add it.
<b>Colors</b>	Pressing any of the 9 colors changes to the selected color. Multiple colors can be added with <b>Add Color</b> for patterns.
<b>Add Color</b>	After selecting the first pattern color, pressing <b>Add Color</b> , then another color, will add the color to the playback, up to 4 colors.
<b>▲ Bright</b> ▼	Increase or decrease brightness.
<b>▲ Speed</b> ▼	Increase or decrease speed of movement.
<b>Solid Color</b>	Change to a static, solid color. Select color with color buttons and fine tune with <b>▲ Hue ▾</b> . Press again to return to animated patterns.
<b>▲ Hue ▾</b>	Fine tunes the color when showing a solid color.
<b>6/18 Timer</b>	Enables (blinks green) or disables (blinks red) a 6 hour on, 18 hour off timer, to simplify 24-hour use cycles.
<b>Lock Pattern</b>	When enabled (blinks green after press) the current pattern plays forever. When disabled (blinks red) patterns automatically transition from one to the next.
<b>Short Pattern</b>	When enabled (blinks green), each pattern plays around 10 seconds. When disabled (blinks red), each pattern plays around 60 seconds.
<b>Pattern On/Off</b>	When pressed, the current pattern is removed (blinks red) or is added (blinks green) to the current playlist.
<b>User 1/2</b>	Select between two playlists. Blinks yellow or blue depending on which playlist is active. Example: create a slow, dim nightlight mode and a fast, bright party mode.
<b>Reset</b>	Reset device to factory settings. Click twice (first blinks red, second blinks green and resets the device). <b>Erases user settings.</b>



# HypnoLight® User Manual

## The HypnoLight

Thanks for purchasing the HypnoLight, a beautiful light string that plays artistic visualizations indoors or outdoors, with user selectable colors and many built in themes, to provide novel lighting for every situation.



### Features and uses

- Over 16 million colors
- 30+ patterns, infinite variations
- User selectable color themes, speed, brightness
- 50 LED lights
- 28 button remote
- 12 feet long
- 6/18 hour timer
- Tiles seamlessly end to end
- Built in holiday themes
- Christmas house, tree, yard
- Indoor and outdoor use
- Chain end to end up to 10 for large uses, 500 lights!
- 100% effective protection against unicorn attacks
- Sports themed parties
- Home security
- Kids room lighting
- Beautiful deck lighting
- Night lighting
- Man cave lighting

## Other Hypnocube products

If you like the HypnoLight, here are other popular gadgets made by **Hypnocube, LLC**, made up of Gene on electronics, Chris on software, and Nufe as office mascot and couch warmer. Purchase directly from [www.hypnocube.com](http://www.hypnocube.com).

### The Hypnocube

*The Hypnocube is a 4x4x4 LED cube displaying beautiful algorithmic visualizations. The Hypnocube impresses wherever it is shown.*

- 50+ patterns
- 10+ Transitions
- Never repeats
- A novelty piece like no other
- Hypnotize your boss and coworkers
- Available finished or as a kit



### The HypnoSquare

*The HypnoSquare is an artistic visualization square displaying random evolving light patterns with hypnotic timing.*

- 50+ patterns
- 10+ Transitions
- Never repeats
- Looks great on a desk at home or work
- Available finished or as a kit



## SYNC REMOTE

Each HypnoLight ships with a wireless remote, which should be synced to that HypnoLight from the factory. In case the remote does not seem to work, here is how to sync a remote to a HypnoLight.

1. Unplug the HypnoLight from the wall.
2. Wait 10 seconds.
3. Plug in the HypnoLight.
4. As soon as the HypnoLight lights, press and hold the On/Off button on the remote.
5. The HypnoLight blinks green if it learned the remote. If not, repeat steps 1-4 a few times.

Note it is possible to train multiple HypnoLights to listen to the same remote, but it is hard to make them all act in sync since wireless signals are somewhat noisy and unpredictable. It's better to connect ones you want to act together in a chain (at most 10) and control them all from the remote for the first HypnoLight.

## TROUBLESHOOTING

### HypnoLight shows nothing:

- Unplug from wall, set let 10 seconds, plug back in.
- Make sure power outlet works by testing other items.
- Check in darker room, in case the brightness is set low.

### HypnoLight not responding to remote:

- Make sure remote blinks. If not, replace battery.
- Do the **SYNC REMOTE** procedure.

### Behaving oddly:

- Use the Reset Button (see **REMOTE CONTROL** section).

If these fail, email us at [support@hypnocube.com](mailto:support@hypnocube.com), and we'll help you figure out how to make it work.

## HYPNOCUBE LIMITED WARRANTY

Hypnocube warrants this product to be free of manufacturing defects. Should any such defect develop or become evident within one year from the date of purchase, Hypnocube will replace the entire product, or, at its option, repair or replace the defective part(s) without charge.

Contact Hypnocube customer service at [support@hypnocube.com](mailto:support@hypnocube.com) to determine whether or not it is necessary to return the unit. To return, securely pack the entire unit. Be sure carton clearly identifies sender by name and address. Attach a letter or card describing defect and original sales receipt. Obtain the mailing address from the contact above.

The warranty is void if damage or malfunction is due to abuse or failure to operate product in accordance with instructions and on recommended electrical current.

For your records:  
Date: \_\_\_\_\_ Model: \_\_\_\_\_

## WARNING

### CHOKING – SUFFOCATION HAZARD

Keep product and plastic bags away from small children and pets. Contains small parts and plastic bags.

### FIRE – ELECTRIC SHOCK HAZARD

- Use product only as indicated in instructions. Do not modify or alter product.
- Ensure all live trees are well maintained. Do not use product if tree is dry, needles are brown, or needles easily break. Keep product away from water. Ensure tree is secure and stable before decorating.
- Inspect product before each use. Do not use parts that have cut, damaged, or frayed wire insulation or cords. Do not use parts with loose connections or exposed copper wire. Do not attempt repairs on product. There are no user-serviceable parts.
- Use only included power cord and power supply. Do not use plug adapter or replace plug. Plug directly into wall outlet. Do not use extension cord. Do not use adapter with other products.

### FLASHING LIGHTS

If you have epilepsy or unusual reactions to flashing lights or patterns, consult a medical professional before using product.

### CALIFORNIA RESIDENTS

WARNING: This product contains a chemical known to the State of California to cause cancer, birth defects, or reproductive harm.



## FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.