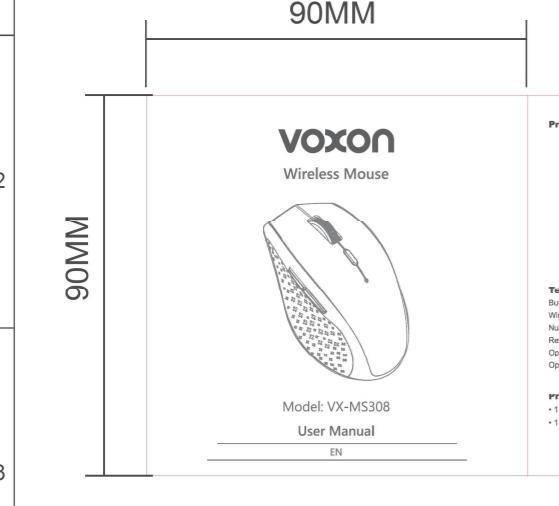
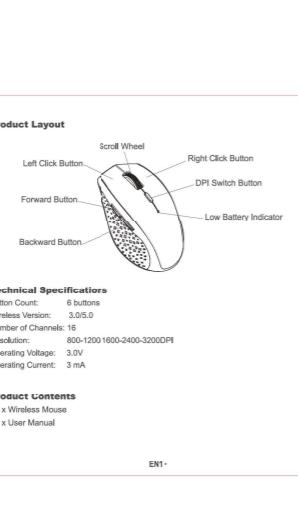


A	B	C	D	E	F	G	H	I	J																																																										
1																																																																			
																																																																			
<p>VOXON Wireless Mouse</p> <p>Model: VX-MS308</p> <p>User Manual</p> <p>EN</p>																																																																			
<p>Product Layout</p> 		<p>System Requirements</p> <ul style="list-style-type: none"> PC with a Pentium processor or equivalent AMD processors Windows 98/ME/2000/XP/VISTA/Windows7/Windows8/Win10 <p>Note: The scroll wheel only works under the operating systems listed above. If you use the mouse under a different operating system, the mouse may either not work or lose its enhanced features.</p> <p>Instructions</p> <p>Battery Installation</p> <p>The mouse uses two AA batteries (not included).</p> <ol style="list-style-type: none"> Open the battery cover. Insert the batteries into the compartment. Close the battery cover. Switch on the mouse by adjusting the power switch underneath the mouse. The red LED of the power indicator at the top of the mouse will flash. <p>Note: Make sure that the polarity of the batteries is correct. The positive (+) and negative (-) ends of each battery must match the positive (+) and negative (-) markings in the battery housing.</p>		<p>24-Month Battery Life</p> <p>The mouse consumes little power and offers a long battery life of up to 24 months without changing batteries. However, the actual battery life may vary based on user and computing conditions.</p> <p>Pairing</p> <ol style="list-style-type: none"> Turn on the Bluetooth function of your device. Manage BT devices BT On Your PC is searching for and can be discovered by BT devices Switch on the mouse, press the pairing button for 2-3 seconds and the LED indicator will flash. Now the mouse is in pairing mode. The mouse will be detected by your device. Select "VOXON MS30X 3.0" or "VOXON MS30X 3.0" based on the Bluetooth version (3.0 or 5.0) of your device. It will take a few seconds for pairing. Your device will show "Connected" if successful. Now the mouse is ready for use. 		<p>Intelligent Power Saving (IPS)</p> <p>The mouse is equipped with Intelligent Power Saving (IPS) function.</p> <ul style="list-style-type: none"> The PC is switched off, the mouse will be switched off automatically for the purpose of power-saving. When the mouse is not operated for 3 seconds, it will automatically drop to the first level of IPS. To wake the mouse, click any button or move the mouse. When the mouse is not operated for 10 seconds, it will automatically drop to the second level of IPS. To wake the mouse, click any button or move the mouse. When the mouse is not operated for 8 minutes, it will automatically drop to the third level of IPS - sleep mode. To wake the mouse, click any button or move the mouse. <p>DPI Switch</p> <p>The mouse supports 800 - 1200 - 1600 - 2400 - 3200DPI. The default setting is 1200DPI. Click the DPI button once to switch from 1200DPI to 1600DPI, click twice to upgrade to 2400DPI, the third click to upgrade to 3200DPI, click once again to switch back to 800DPI.</p> <p>Low Power Indicator</p> <p>When the battery power gets low during the period of use, the indicator under the scroll wheel will flash. Please replace the battery.</p> <p>Note: We recommend you to use AA alkaline dry cell batteries.</p> <p>EN4</p>																																																													
<p>To reconnect</p> <p>There is a connection code for this mouse. High temperatures, electro-magnetic fields or vibration may influence the code signal and the mouse may need to be reconnected. Press the pairing button for 2-3 seconds to reconnect.</p> <p>Attention</p> <p>1. To maximize battery life, it's recommended to use the mouse on a white or light color surface. As the mouse might not work smoothly on some special surfaces, such as smooth, dark or black, reflecting and 3D mouse pads surfaces.</p> <p>2. Do not use the mouse on a glass or mirrored surface, as these surfaces will cause the mouse to fail temporarily.</p> <p>3. Avoid using the mouse on a metal surface. Metals, such as iron, aluminum or copper, shield the radio frequency transmission and may slow down the mouse presenter's response time or cause the mouse to fail temporarily.</p> <p>4. If your PC has a metal case that contains aluminum or magnesium, use the mouse by the side of the PC. The display panel may interfere with the radio frequency if you use the mouse directly in front of the PC.</p> <p>Note on handling batteries</p> <ul style="list-style-type: none"> Keep batteries out of the reach of children. Replace old or weak batteries promptly. Remove the batteries if the mouse is not going to be used. <p>Safety Measures</p> <ul style="list-style-type: none"> Keep the mouse away from young children. Any attempt to disassemble, adjust or repair the mouse may result in exposure and other safety hazards. <p>EN5</p>										<p>IMPORTANT SAFETY INSTRUCTIONS-CAREFULLY FOLLOW THESE INSTRUCTIONS.</p> <ol style="list-style-type: none"> SAVE THESE INSTRUCTIONS - This sheet contains important safety and operating instructions for your VOXON product. It is very important that you read and understand all instructions and markings on the product, accessories and device using our product. Before using the product, read all instructions and caution markings on the product, accessories and device using our product. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. What is the warranty period? All above warranties are null and void if the VOXON product is not provided to VOXON LIMITED or its supplier upon VOXON LIMITED's request at the sole expense of the purchaser, or if VOXON LIMITED determines that the VOXON product has been improperly installed, altered in any way, or tampered with. The VOXON Product Warranty does not cover damage to the product resulting from liquid damage, lightning, fire, theft, normal-use wear and tear, erosion, depletion, obsolescence, abuse, damage due to low voltage disturbances (e.g. brownouts or sags), non-authorized program, or system software, or normal wear and tear. How to claim the warranty Please contact retailers or visit VOXON website or email support@voxon.com for more information. To extend the warranty period, please visit VOXON website and register your VOXON products within 90 days of purchase. Disclaimer Every effort has been made to ensure that the information and procedures in this guide are accurate and complete. Liability can be accepted for any errors or omissions and we reserve the right to make any changes without further notice to any products mentioned herein. <p>EN</p>		<p>Limited 12-Month Warranty</p> <p>12 MONTH</p> <p>Correct Disposal of This Product</p> <p>(Waste Electrical & Electronic Equipment)</p> <p>This Marking shown on the product or its literature, indicate that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, this waste must be disposed of in accordance with applicable laws and regulations for the safe treatment, recovery and recycling of waste of this product. Households user should contact either the retailer where they purchased the product, or their local government office, for details of where and how they can dispose of their waste product. Business users should contact their supplier and check the terms and conditions of the purchase contact. This product should not be mixed with other commercial wastes for disposal.</p> <p>FCC Statement</p> <p>This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:</p> <ol style="list-style-type: none"> (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. <p>Warranty: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p> <p>NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio communications, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none"> Increase the separation between the equipment and receiver. Connect the equipment and an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. <p>FCC Radiation Exposure Statement:</p> <p>This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.</p> <p>EN</p>																																																							
<p>尺寸: 90x90mm 材质: 80G书写纸 单色印刷 十字折</p>										<p>备注:</p> <ol style="list-style-type: none"> 要求符合铭冠以下三大文件: <ol style="list-style-type: none"> 《键盘类外观检验标准T-WQ-007/鼠标类外观检验标准TG-WQ-008/耳机类外观检验标准TG-WQ-005》 《键盘&鼠标可靠性试验管理规范TG-WQ-004/耳机可靠性试验管理规范TG-WQ-006》 《TG-HSF-300环保要求》 产品须符合本公司环保最新Reach和RoHS等。 标注：“*”为重点检测尺寸，重点在实际试配。 背胶粘合性：以实物粘贴，粘贴时用2kg力压紧，常温下24小时，无翘边，翘角，起泡。 剥离强度：粘合性测试后，用1kg力才能撕下来。 																																																									
<table border="1"> <thead> <tr> <th colspan="4">DIMENSIONAL TOLERANCE</th> <th rowspan="2">DRAWN BY: 刘小花 2022/5/31</th> <th rowspan="2">MATERIAL</th> <th rowspan="2">VER.</th> <th rowspan="2">A0</th> <th rowspan="2">TO GRAN</th> <th rowspan="2">东莞市铭冠电子科技有限公司</th> </tr> <tr> <th>DIM</th> <th>标签/贴纸类</th> <th>吊卡/说明书类</th> <th>印刷/镭雕类</th> </tr> </thead> <tbody> <tr> <td>0~50</td> <td>±0.10</td> <td>±0.25</td> <td>±0.15</td> <td rowspan="5">CHECKED BY:</td> <td rowspan="5">1</td> <td rowspan="5">SHEET</td> <td rowspan="5">1/1</td> <td rowspan="5">TO GRAN</td> <td rowspan="5">东莞市铭冠电子科技有限公司</td> </tr> <tr> <td>51~100</td> <td>±0.15</td> <td>±0.50</td> <td>±0.20</td> </tr> <tr> <td>101~150</td> <td>±0.20</td> <td>±0.75</td> <td>±0.25</td> </tr> <tr> <td>150<</td> <td>±0.25</td> <td>±1</td> <td>±0.30</td> </tr> <tr> <td>纸箱</td> <td>单坑</td> <td>双坑</td> <td>三坑</td> </tr> <tr> <td>0~1000</td> <td>+3</td> <td>+4</td> <td>+5</td> <td rowspan="2">APPROVED BY:</td> <td rowspan="2">FINISHED</td> <td rowspan="2">UNITS</td> <td rowspan="2">mm</td> <td rowspan="2">DWG No.</td> <td rowspan="2">TO GRAN</td> </tr> <tr> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td>ITEM</td> <td>DESCRIPTION</td> <td>CHANGE BY</td> <td>DATE</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td>TO GRAN</td> </tr> </tbody> </table>		DIMENSIONAL TOLERANCE				DRAWN BY: 刘小花 2022/5/31	MATERIAL	VER.	A0	TO GRAN	东莞市铭冠电子科技有限公司	DIM	标签/贴纸类	吊卡/说明书类	印刷/镭雕类	0~50	±0.10	±0.25	±0.15	CHECKED BY:	1	SHEET	1/1	TO GRAN	东莞市铭冠电子科技有限公司	51~100	±0.15	±0.50	±0.20	101~150	±0.20	±0.75	±0.25	150<	±0.25	±1	±0.30	纸箱	单坑	双坑	三坑	0~1000	+3	+4	+5	APPROVED BY:	FINISHED	UNITS	mm	DWG No.	TO GRAN					ITEM	DESCRIPTION	CHANGE BY	DATE						TO GRAN	<p>说明书</p>	
DIMENSIONAL TOLERANCE				DRAWN BY: 刘小花 2022/5/31	MATERIAL							VER.	A0	TO GRAN	东莞市铭冠电子科技有限公司																																																				
DIM	标签/贴纸类	吊卡/说明书类	印刷/镭雕类																																																																
0~50	±0.10	±0.25	±0.15	CHECKED BY:	1	SHEET	1/1	TO GRAN	东莞市铭冠电子科技有限公司																																																										
51~100	±0.15	±0.50	±0.20																																																																
101~150	±0.20	±0.75	±0.25																																																																
150<	±0.25	±1	±0.30																																																																
纸箱	单坑	双坑	三坑																																																																
0~1000	+3	+4	+5	APPROVED BY:	FINISHED	UNITS	mm	DWG No.	TO GRAN																																																										
ITEM	DESCRIPTION	CHANGE BY	DATE						TO GRAN																																																										