

60 mm

billboard®

User Manual Wireless Gaming Controller



Instructions:

- The product is mainly used for game operation when Android/iOS/Win 7/8/10 system bluetooth connection and PS3 game host wireless connection.
- Applicable equipment: Smart phone/tablet/smart TV, TV box /PC /PS3 game console.
- LT/RT for the simulation function, pay more attention to the details of the experience, make the game precise and controllable.
- It can be used on PC/PS3 and other devices with a receiver. (receiver is not included)

Android use manual:

- At the same time, press and hold the "A" button + "HOME" button for 2 seconds, and the "LED 1" indicator flashes. (Connected devices can be connected back directly by pressing the "HOME" button)
- Turn on the bluetooth function of the Android device and click "scan".
- When a bluetooth device name "BB-BT" is found, select the paired connection.
- Successful connection, "LED 1" indicator light is always on.
- Play directly: Honor of Kings, Knives Out, PUBG, Mobile Legends. (Except that the game itself changes the rules)
 - "Up" button + "HOME" button: choose Honor of Kings;
 - "Right" button + "HOME" button: choose PUBG
 - "Down" button + "HOME" button: choose Mobile Legends
 - "Left" button + "HOME" button: choose Knives Out
 - Honor of Kings by default.
- Use the "ShootingPlus V3 App" to adjust the keys to play more games;
 - To install the Android version of "ShootingPlus V3 App", go to the Google Play Store and search for "ShootingPlus V3" to download. Or scan code.



B. How does Android "ShootingPlus V3 App" change keys

- Connect the bluetooth, install "ShootingPlus V3 App", and push the App to the background.
- After starting the game, click the "V3" floating ball icon on the screen or press the "START" button on the gaming controller to enter the interface of App.
- Drag the key icon in the interface to the desired position on the game. (Click the key icon to select key properties)
- Click "save", and then "confirm" to save.
- Click "close" or press "START" again.
- When playing game, you can press the "SELECT" button on the gaming controller to bring up the set key prompt

C. After installed the "ShootingPlus V3 App", you can also download the set game keys directly from the "cloud keys list" in the main App interface.

- MTK phone, Please press the "X" button + "HOME" button to enter the standard Android mode for use in the arcade.

Attention: If you are in the wrong apple mode, please cancel the bluetooth pairing and then re-pair to Android mode

IOS use manual:

- At the same time, press and hold the "Y" button + "HOME" button for 2 seconds, and the "LED 2" indicator flashes. (Connected devices can be connected back directly by pressing the "HOME" button)
- Turn on the bluetooth function of the IOS device and click "scan".
- When a bluetooth device name "BB-BT" is found, select the paired connection.
- Successful connection, "LED 2" indicator light is always on.
- Play directly: Honor of Kings, Knives Out, PUBG, Mobile Legends. (Except that the game itself changes the rules)
 - "Up" button + "HOME" button: choose Honor of Kings;
 - "Right" button + "HOME" button: choose PUBG
 - "Down" button + "HOME" button: choose Mobile Legends
 - "Left" button + "HOME" button: choose Knives Out
 - Honor of Kings by default.

- Support IOS system from 11.3 to 14.2.
- Use the "ShootingPlus V3 App" to adjust the keys to play more games;
 - To install the IOS version of "ShootingPlus V3 App", or to the APP Store and search for "ShootingPlus V3" to download. Or scan code.



B. How does IOS "ShootingPlus V3 App" change key

- Connect the bluetooth, install "ShootingPlus V3 App".
- After starting the game, take a screenshot of the game when playing game .
- Open ShootingPlus V3 App, click the "V3" floating ball icon on the screen or press the "START" button on the gaming controller to enter the interface of App.
- Long press the blank of the screen to load the screenshot of the game. Click on the selected image to select the screenshot of the game.
- Drag the key icon in the interface to the desired position on the game. (Click the key icon to select key properties)
- Click "save", and then "confirm" to save.
- Click "close" or press "START" again.
- When playing game, you can press the "SELECT" button on the gaming controller to bring up the set key prompt

C. After installed the "ShootingPlus V3 App", you can also download the set game keys directly from the "cloud keys list" in the main App interface.

Gaming controller charging/sleep/wake function:

- When the handle is charged under the state of powered off. (press the HOME button to turn it on/off) , "LED 4" indicator light flashes slowly, always on after full. When charging in the state of bluetooth connection, "LED 4" indicator light flashes slowly and lights up long after filling.
- Sleep/wake function: Game controller that is not used for up to 5 minutes

- goes to sleep. When it needs to be used again, press the HOME button to wake up and connect back.
- When the battery is low, "LED 4" indicator light flashes.

Operational usage mode:

System	Android		iOS	
	Android V3 Game mode	Android standard game mode	iOS V3 Game mode	iOS Game hall mode
Working mode	"A" button + "HOME" button	"X" button + "HOME" button	"Y" button + "HOME" button	"X" button + "HOME" button
Pair Mode (Long press for 2 seconds)	"A" button + "HOME" button	"X" button + "HOME" button	"Y" button + "HOME" button	"X" button + "HOME" button
Indicator light	LED 1	LED 3	LED 2	LED 3
Remark	Play games downloaded from the Android market	Play arcade games	Play games downloaded from the App Store	Play arcade games

Specification:

- Working voltage: DC3.7V
- Working current: 8mA
- Working time: up to 20H
- Sleep current: <10uA
- Charging voltage/current: DC5V/200mA
- Bluetooth transmission distance: up to 8M
- Battery: 400mA
- Standby time: up to 30 days

Attention:

- Please do not store this product in damp or hot places.
- Do not knock, beat, bang, puncture, or attempt to disintegrate the product to avoid unnecessary damage to the product.
- Product built-in battery, do not throw away with the garbage.
- Do not charge the gaming controller near a fire or other heat source
- Non-professional do not disassemble the product, otherwise it is not included in the after-sales warranty service.

Frequently Asked Question:

- Q: The gaming controller cannot be found when the bluetooth is turned on
- A: Cancel the bluetooth pairing device name between the handle and the phone, and restart the bluetooth search pairing of the phone.
- Q: Why isn't the new gaming controller turned on?
- A: Generally, the power of the new gaming controller is low. Please connect the 5V charger with the USB cable in the packaging box to charge the handle, when fully charged, press the power button to start the machine.

LIMITED WARRANTY

ESI Cases & Accessories, Inc., warrants to the first consumer purchaser that this product, when shipped in its original container to the original purchaser will be free from defective workmanship and materials for one year and agrees that it will, at its option, either repair the defect and replace the defective product or part thereof at no charge to the purchaser for parts or labor for the time periods described.

This warranty does not apply to any appearance items of the product nor to the additional excluded item(s) set forth below nor to any product the exterior of which has been damaged or defaced which design or construction. The limited warranty described herein is in addition to an applicable law. ALL IMPLIED WARRANTIES INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE PERIOD FROM THE DATE OF ORIGINAL PURCHASE SET FORTH BELOW.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. Neither the sales personnel of the seller nor any other person is authorized to make any warranties other than those described herein or to extend the duration of any warranties beyond the time period described herein on the behalf of ESI Cases & Accessories, Inc.

The warranties described herein shall be the sole and exclusive warranties granted by ESI Cases & Accessories, Inc. and shall be the sole and exclusive remedy available to the purchaser corrections of defects, in the manner and for the period of time described herein, shall constitute complete fulfillment of all liabilities and responsibilities of ESI Cases & Accessories, Inc. to the purchaser with respect to the product and shall constitute full satisfaction of all claims, whether based on contract negligence, strict liabilities and responsibilities of ESI Cases & Accessories, Inc. be liable or in any way responsible, for any incidental or consequential damages, so the above exclusion may not apply to you. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

This warranty does not cover cables that have become frayed, cracked, or broken from use. The user should immediately replace this, or any, charge cable that has become frayed, cracked, or broken, as it may constitute a serious safety risk, including electrocution, if it is continued to be used.

Send product with \$5.95 shipping & handling fee to:
Manufactured By ESI Cases & Accessories One GatewayCenter, Suite 2600 Newark, NJ 07102
Newark NJ 07102 Tech Support :212-883-8838
All other trademarks are the property of their Respective companies.

©2021 Billboard IP Holdings, LLC. All rights reserved. Billboard®, the Billboard logo, HOT 100 and associated Characters, trademarks, and design elements are owned and licensed by Billboard IP Holdings, LLC.

FCC Information

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received; including interference that may cause undesired operation. Federal Communications Commission (FCC) Statement

This Equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment. Tested to comply with FCC standard, FOR HOME OR OFFICE USE.

Warning :
This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or conjunction with any other antenna or transmitter.

Battery information
Your device is powered by a rechargeable battery. The full performance of a new battery is achieved only after two to three complete charge and discharge cycles. The battery can be charged and discharged hundreds of times, but it will eventually wear out. Do not leave a fully charged battery connected to a charger, overcharging may shorten its lifetime. If left unused, a fully charged battery will lose its charge over time. Never use any charger that is damaged. Leaving the device in hot or cold places will reduce the capacity and lifetime of the battery. Optimal temperature for the battery is between 15°C and 25°C (59°F and 77°F). A device with a hot or cold battery may not work temporarily, even when the battery is fully charged. Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged. Always dispose of batteries according to local regulations. Please recycle. Do not dispose as household waste.

BATTERY CAUTION: Do not disassemble, short circuit, or expose to fire or high temperature. Properly connect specified devices. Recycle battery according to local, state and national regulations.

