

billboard

TRUE WIRELESS EARBUDS



 
 
 
 
USER MANUAL

INTRODUCTION

Thank you for purchasing the Billboard® True Wireless Earbuds. For best use of this device, we recommend carefully reading this user manual and keeping it for your records.


Package contains:

- a. Wireless Two Earbuds
- b. Charging case
- c. USB-C charging cable
- d. User manual

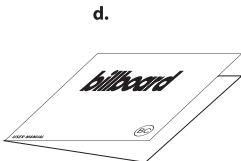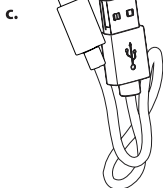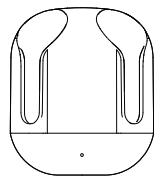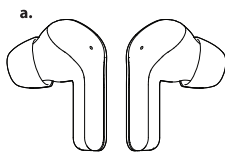

Bluetooth Pairing

 1. Power the earbuds ON. The LED indicators on both earbuds will FLASH BLUE. After a few seconds, a voice will be heard, indicating that the earbuds have connected to each other. **If the earbuds don't connect to each other, see the troubleshooting section at the bottom of this page.**
2. Open your device's Bluetooth menu and select **BB-BT-EB** when it appears.
3. Another voice will be heard, indicating that the earbuds are successfully connected to your device. The LED indicator on the earbuds will flash BLUE every 5s.

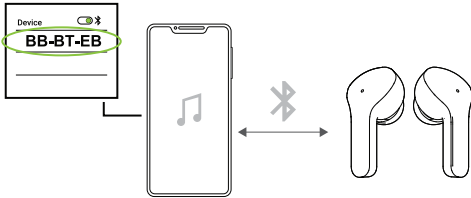

Trouble Pairing the Earbuds ? Try placing the earbuds back into their charging case, and then removing them again at the same time. They should automatically connect to each other.

Media Playback

Make sure the earbuds are charged and properly connected to your Bluetooth-enabled device.

Playback, volume and phone functions can be controlled with your paired device or with the earbuds, as indicated below:

Controlling Playback

- **Tap** the **[Multi]** button on either earbud to play, pause, and resume audio playback.
- **2xTap** the Left earbud's **[Multi]** button to skip to the **next** track.
- **2xTap** the Right earbud's **[Multi]** button to skip to the **previous** track.

Adjusting the Volume

- **3xTap** the Left earbud's **[Multi]** button to **increase** volume.
- **3xTap** the Right earbud's **[Multi]** button to **decrease** volume.



Phone Calls

- **Press** the **[Multi]** button on either earbud to **answer** an incoming phone call. **Press** again to **end** the phone call.
- **Long-Press** the **[Multi]** button on either earbud to **reject** an incoming phone call.

Activating Voice Assistant

 
If you have a voice assistant on your paired device, you can activate it using the controls on the earbuds or the controls on your device.

- **Long-Press (1s)** either **[Multi]** button to **activate** the voice assistant.
- **Long-Press (1s)** either **[Multi]** button to **close** the voice assistant.

Storage & Maintenance

When not using the earbuds, it is recommended that they are stored in the charging case and placed in a safe, dry location, away from sources of water, light, heat, and dust. They are best stored in an airtight box or bag (not included).

If the earbuds or case are dirty, wipe gently with a clean microfiber cloth. Do not clean with water or any sort of soap or detergent.

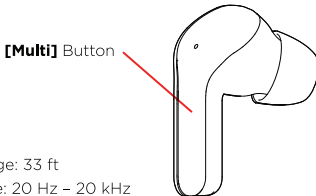

Specifications

TWS Earbuds

 
Bluetooth Range: 33 ft
Freq. Response: 20 Hz – 20 kHz
Total Play Time: Up to 15 hours*
Earbud Battery Capacity: 30 mAh

*Up to 4 hours on a single charge, plus additional charges provided by the case, Varies depending on settings and usage,


Charging Case

Charging Case Battery Capacity: 300 mAh

Location of Controls

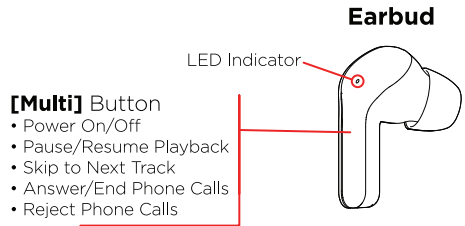

Bottom of Case

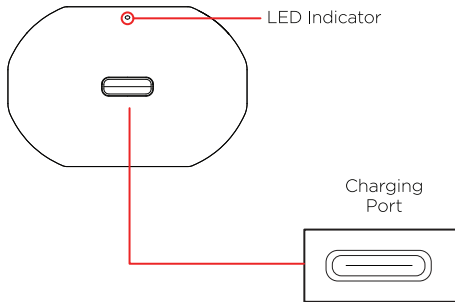 

Charging the Case

Insert the small connector of the included USB Type-C charging cable into the charging port on the charging case. Insert the larger connector into the USB port on a computer, or a 5V/1A USB adapter (not included) and plug into an electrical outlet.

 
The LCD indicator on the charging case will FLASH while the earbuds are charging and read **"OK"** when fully charged.

A tone will be heard when the earbuds are low on battery, indicating that they need to be recharged.

Charging the Earbuds

Use the included charging case to protect and charge your earbuds.


To charge the earbuds, place the earbuds into the correct earbud charging ports. The earbuds will automatically power OFF and begin charging. The earbuds' LED indicators will turn RED while charging and turn OFF when fully charged.

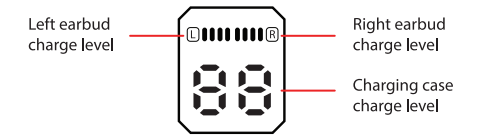

Powering On/Off

- **Charge the case and earbuds fully before using.**
- Remove the earbuds from the case to automatically power them ON.
- When both earbuds are powered ON at the same time they will automatically pair to each other after a few seconds, and a voice will be heard indicating that they are connected.
- **Long-Press** the **[Multi]** button to manually power the earbuds ON/OFF.

 Note: The earbuds will automatically power OFF if they are not paired to a Bluetooth device after 5 minutes, or if the paired device is out of Bluetooth range (10 m / 33 ft) for 5 minutes.

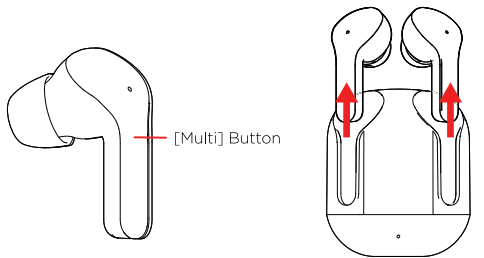

Device Safety

- Your True Wireless Earbuds have internal rechargeable batteries. Improper usage may result in the Earbuds becoming hot, ignite or burst and cause injury if exposed to conditions of abuse.
- Do not disassemble, throw away or damage the True Wireless Earbuds.
- Store the True Wireless Earbuds in a dry place, keeping them away from damp corrosive materials and environments such as salt air.
- Keep the True Wireless Earbuds away from direct sunlight, fire and high voltage equipment. Do not store the True Wireless Earbuds inside a car during hot weather. Remember a closed car acts as a green house allowing the inside to reach high temperatures.
- The True Wireless Earbuds are not a toy. Please keep them out of the reach of young children.
- Please do not discard the True Wireless Earbuds. Consult your local waste collection agency for proper disposal or recycling methods. You may also contact "Call2Recycle" at 877-273-2925 or online at "call2recycle.org" for a battery recycling drop off location near you.

Additional information.
Make sure the earbuds are paired before use and the Bluetooth function is activated on your phone. Make sure the earbuds are charged before use. Safety use of the lithium battery The lithium batteries inside these products or not removable, do not attempt to remove these batteries.




Battery Information

Your earbuds are powered by a rechargeable batteries. The full performance of new batteries is achieved only after two to three complete charge and discharge cycles. The batteries can be charged and discharged hundreds of times, but it will eventually wear out.

- Do not leave a fully charged earbuds connected to a charger, overcharging may shorten their lifetime. If left unused, fully charged earbud batteries will lose their charge over time.
- Never use any charger that is damaged.
- Leaving the device in hot or cold places will reduce the capacity and lifetime of the batteries. Optimal temperature for the batteries is between 59°F and 77°F. A device with a hot or cold batteries may not work temporarily, even when the batteries are fully charged.
- Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged. Always dispose of batteries according to local regulations. Please recycle. Do not dispose as household waste.

Manufactured by: ESI Cases & Accessories
One Gateway Center, Suite 2600 Newark, NJ 07102
TechSupport@ESICellular.com
All other trademarks are property of their respective companies.

© Billboard Media, LLC Billboard and the Billboard logo are registered trademarks of Billboard IP Holdings, LLC. Used under license.

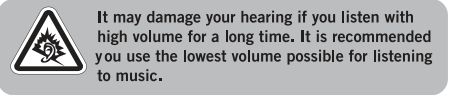

FCC Information

FCC ID: 2AML6KR240A

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received; including interference that may cause undesired operation. Federal Communications Commission (FCC) Statement This Equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment. Tested to comply with FCC standard. FOR HOME OR OFFICE USE.

Warning:

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or conjunction with any other antenna or transmitter.

LIMITED WARRANTY

With receipt for proof of purchase, ESI Cases & Accessories, Inc., warrants to the first consumer purchaser that this product, when purchased from an authorized retailer and sold in its original packaging, will be free from defective workmanship and materials for one year from the date of purchase and agrees that it will, at its option, either repair the defect or replace the defective product or part thereof at no charge to the purchaser for parts and/or labor for the time period described.

This warranty does not apply to any appearance items of the product nor to the additional excluded item(s) set forth below nor at any product the exterior of which has been damaged or defaced which design or construction. The limited warranty described herein is in addition to an applicable law. ALL IMPLIED WARRANTIES INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE PERIOD FROM THE DATE OF ORIGINAL PURCHASE SET FORTH BELOW.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. Neither the sales personnel of the seller nor any other person is authorized to make any warranties other than those described herein or to extend the duration of any warranties beyond the time period described herein on the behalf of ESI Cases & Accessories, Inc.

The warranties described herein shall be the sole and exclusive warranties granted by ESI Cases & Accessories, Inc. and shall be the sole and exclusive remedy available to the purchaser corrections of defects, in the manner and for the period of time described herein, shall constitute complete fulfillment of all liabilities and responsibilities of ESI Cases & Accessories, Inc. to the purchaser with respect to the product and shall constitute full satisfaction of all claims, whether based on contract negligence, strict liabilities and responsibilities of ESI Cases & Accessories, Inc. be liable or in any way responsible, for any incidental or consequential damages, so the above exclusion may not apply to you. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

This warranty does not cover cables that have become frayed, cracked, or broken from use. The user should immediately replace this, or any, charge cable that has become frayed, cracked, or broken, as it may constitute a serious safety risk, including electrocution, if it is continued to be used.

Send product with \$11.95 shipping & handling fee to:
ESI Cases & Accessories
One Gateway Center, Suite 2600 Newark, NJ 07102
TechSupport@ESICellular.com

VENDOR: PLEASE ADD FCC ID

PLEASE ADD FCC INFORMATION

BB-BT-EB