


Front

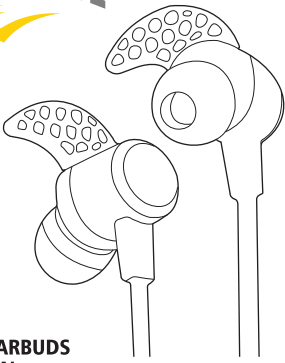

WIRELESS EARBUDS
USER MANUAL

For use with Bluetooth® enabled devices




Wireless Earbuds

Thank you for purchasing Everlast® Wireless Earbuds.
For the best use of this device we recommend carefully
reading this user manual and keeping it for your records.

Charging Time: Up to 2 hours
In Use Time: 4 Hours
Standby Time: Up to 120 hours
Max Distance Used: Up to 33ft
Bluetooth Version: V4.2

- Package contains
a. Wireless Earbuds
b. USB charging cable
c. User manual
d. 2 pair extra ear cushions

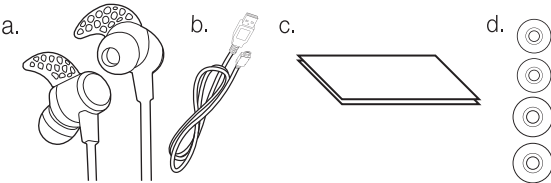

FCC Information

This device complies with Part 15 of the FCC rules.
Operation is subject to the following two conditions: (1) this device may not cause
harmful interference, and (2) this device must accept any interference received;
including interference that may cause undesired operation.
Federal Communications Commission (FCC) Statement
This Equipment has been tested and found to comply with the limits for a Class B
digital device, pursuant to Part 15 of the FCC rules. These limits are designed to
provide reasonable protection against harmful interference in a residential
installation. This equipment generates, uses and can radiate radio frequency
energy and, if not installed and used in accordance with the instructions, may
cause harmful interference to radio communications. However, there is no
guarantee that interference will not occur in a particular installation. If this
equipment does cause harmful interference to radio or television reception, which
can be determined by turning the equipment off and on, the user is encouraged to
try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the
receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
Warning: Changes or modifications to this unit not expressly approved by the party
responsible for compliance could void the user authority to operate the equipment.
Tested to comply with FCC standard. FOR HOME OR OFFICE USE.

FCC ID:2AML6KR301

Warning :

This equipment complies with FCC RF radiation exposure limits set forth for an
uncontrolled environment. This device and its antenna(s) must not be co-located or
conjunction with any other antenna or transmitter.

Battery information

Your device is powered by a rechargeable battery. The full performance of a new battery
is achieved only after two to three complete charge and discharge cycles. The battery
can be charged and discharged hundreds of times, but it will eventually wear out.

Do not leave a fully charged battery connected to a charger, overcharging may shorten its
lifetime. If left unused, a fully charged battery will lose its charge over time.
Never use any charger that is damaged.
Leaving the device in hot or cold places will reduce the capacity and lifetime of the
battery. Optimal temperature for the battery is between 15°C and 25°C (59°F and 77°F).
A device with a hot or cold battery may not work temporarily, even when the battery is
fully charged.
Do not dispose of batteries in a fire as they may explode. Batteries may also explode if
damaged. Always dispose of batteries according to local regulations. Please recycle. Do
not dispose as household waste.




BATTERY CAUTION: Do not disassemble, short
circuit, or expose to fire or high temperature.
Properly connect specified devices. Recycle battery
according to local, state and national regulations.

Bluetooth® is a registered trademark of Bluetooth SIG, Inc.
All other trademarks are property of their respective companies.



It may damage your hearing if you listen with
high volume for a long time. It is recommended
you use the lowest volume possible for listening
to music.

Back

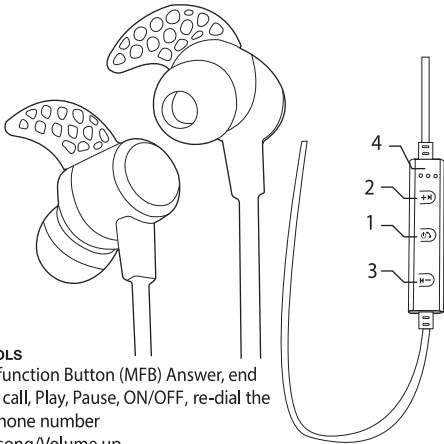

CONTROLS

1. Multifunction Button (MFB) Answer, end
reject call, Play, Pause, ON/OFF, re-dial the
last phone number
2. Next song/Volume up
3. Previous song/Volume down
4. Microphone

PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE USING YOUR WIRELESS EARBUDS
KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

Your Wireless Earbuds has an internal rechargeable battery. Improper usage may result in
the Wireless Earbuds becoming hot, ignite or burst and cause injury if exposed to conditions
of abuse. Be sure to follow the safety warnings listed below:
1. Do not disassemble, throw away or damage the Wireless Earbuds.
2. Store the Wireless Earbuds in a dry place, Keeping it away from damp corrosive materials
and environments such as salt air.
3. Keep the Wireless Earbuds away from direct sunlight, fire and high voltage equipment. Do
not store the Wireless Earbuds inside a car during hot weather. Remember a closed car acts
as a green house allowing the inside temperature to possibly reach over 200F.
4. The Wireless Earbuds is not a toy. Please keep it out of the reach of young children.
5. Please do not discard the Wireless Earbuds. Consult your local waste collection agency for
proper disposal or recycling methods. You may also contact "Call2Recycle" at 877-273-2925
or online at "call2recycle.org" for a battery recycling drop off location near you.

Charging the battery

This device has an internal, rechargeable battery.

1. Plug the charger cable into the earbuds.
2. Connect the charger to a USB power source. The red indicator light will display during charging.
If charging does not start, disconnect the charger plug it in again, and retry. Charging the battery fully may
take up to 2 hours.
3. When the battery is fully charged, the red indicator light will turn off. Disconnect the charger from the
USB power source and the earbuds. The fully charged battery has power for up to 4 hours of talk-time or up
to 120 hours of standby time. However, the talk and standby times may vary when used with different
devices, settings, and environments.

2. Instruction

■ Key Function

Power switch	To turn the power on, hold the Multifunction Button for 2 seconds until the LED light flashes blue and red. To turn the power off, hold the Multifunction Button for seconds until power off.
Pairing to Device	Power on the wireless earbuds , hold Multifunction Button on control bar 2 seconds, earbuds will enter pairing mode. Activate the Bluetooth® feature on your device, and set the device to search for wireless devices.(See the User Manual for your device) The earbuds will show on your device as EV-BT-EB.(If pass code is requested enter 0000) If the pair is successful, the earbuds's LED indicator will flash blue every 4 seconds. Once the earbuds has paired with your device, no password will be need to reconnect. If not paired, the earbuds will turn off automatically after 3 minutes.
Receive Hang up phone call	Press Multifunction Button to receive phone call, press again to end phone call, Press twice to re-dial the last phone number, Press and hold for 2 seconds to decline phone call.
Play Pause	In music mode, press once to pause, and again to play, (music will automatically pause when device receives phone call and will continue once call ends)
Next Song	In music mode, press the + button to play next track
Previous song	In music mode, press the - button press to play previous track
Volume Increase	Press and hold the + button to increase volume
Volume Decrease	Press and hold the - button to decrease volume

LIMITED WARRANTY

ESI Cases & Accessories, Inc., warrants to the first consumer purchaser that this product, when
shipped in its original container to the original purchaser will be free from defective workmanship and
materials for one year and agrees that it will, at its option, either repair the defect and replace the
defective product or part thereof at no charge to the purchaser for parts or labor for the time periods
described.

This warranty does not apply to any appearance items of the product nor to the additional
excluded item(s) set forth below nor at any product the exterior of which has been damaged or
defaced which design or construction. The limited warranty described herein is in addition to an
applicable law. ALL IMPLIED WARRANTIES INCLUDING THE WARRANTIES OF MERCHANTABILITY AND
FITNESS FOR USE ARE LIMITED TO THE PERIOD FROM THE DATE OF ORIGINAL PURCHASE SET FORTH
BELOW.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation
may not apply to you. Neither the sales personnel of the seller nor any other person is authorized to
make any warranties other than those described herein or to extend the duration of any warranties
beyond the time period described herein on the behalf of ESI Cases & Accessories, Inc.

The warranties described herein shall be the sole and exclusive warranties granted by ESI Cases &
Accessories, Inc. and shall be the sole and exclusive remedy available to the purchaser corrections of
defects, in the manner and for the period of time described herein, shall constitute complete
fulfillment of all liabilities and responsibilities of ESI Cases & Accessories, Inc. to the purchaser with
respect to the product and shall constitute full satisfaction of all claims, whether based on contract
negligence, strict liabilities and responsibilities of ESI Cases & Accessories, Inc. be liable or in any way
responsible, for any incidental or consequential damages, so the above exclusion may not apply to
you. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS,
WHICH VARY FROM STATE TO STATE.

Send product with \$11.95 shipping & handling fee to:
ESI Cases & Accessories Tech Support: (212) 883-8838
44 East 32nd Street TechSupport@ESICellular.com
New York, NY 10016