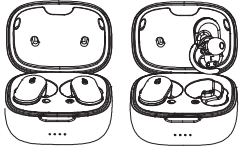 
 
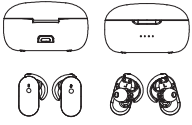 


Front

Back

 billboard® TRUE WIRELESS SECURE FIT EARPONES BC TWS function supported (Pair 2 earphones to play as one) USER MANUAL	INSTRUCTION GUIDE  Turn on and pairing 1. The TWS will turn on automatically once it is removed from charging case. It will blink alternately red and blue indicates that it is in pairing mode. 2. Power OFF: Long press the Multifunction button for 3 seconds to turn off (both sides of earbuds will turn off simultaneously if they are still paired). 3. Pairing: When the TWS On, both sides of the earbuds will automatically self pair. Once paired, one side of the earbuds will flash blue and not alternately to seek for Bluetooth device. 4. Connect: Once the TWS is successfully connected to your Bluetooth device, the voice will tell you prompt. 5. SFR: Long press either one side of the earbuds until you hear a "Bleep" sound, which indicates the activation of SFR.	Bluetooth Pairing: Step 1: The earbuds are now ready to get paired with your Bluetooth device via the Bluetooth menu in your smartphone or another Bluetooth device. Step 2: Simply open up the Bluetooth function on your phone device, select the pairing name "BB-BT-EB" from the list of Bluetooth devices found, pair your earbuds with your phone. 	FCC Information The device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. FCC ID: 2AM16KR309 This Equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment. Tested to comply with FCC standard, FOR HOME OR OFFICE USE. Warning: This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or conjunction with any other antenna or transmitter.
WIRELESS EARPONES Thank you for purchasing these Billboard® True Wireless Earphones. For best use of this device, we recommend carefully reading this user manual and keeping it for your records. Package contains a. Charging Case b. TWS Earphones c. USB charging cable d. User manual 	 6. Music: While playing music, single press either one side of the earbuds to pause/resume the music. Press twice left earbuds button to advance to next track. Press twice right earbuds button to back to previous track. 7. Call controls: While receiving incoming calls, short press either one side of the earbuds once to accept call. Short press again to end call. Long press to reject incoming call. Press thrice to reject. - Others: 1) Support call communication from the master earbuds. 2. If it turn off automatically in a few minutes once it is not used. 8. Charging: 1) Make the corresponding L and R letters of both earbuds into the charging case to recharge the TWS. 2. The TWS will auto power off and start charging. When charging, earbuds light RED. When they are fully charged, earbuds light OFF. 9. There are 4 LED indicators on the charging case. The indicator blinks white when it is charging and flash a solid white light when it is fully charged. Each indicator represents 25% of battery volume.	Battery information Your device is powered by a rechargeable battery. The full performance of a new battery is achieved only after two to three complete charge and discharge cycles. The battery can be charged and discharged hundreds of times, but it will eventually wear out. Do not leave a fully charged battery connected to a charger, overcharging may shorten its lifetime. If left unused, a fully charged battery will lose its charge over time. Never use any charger that is damaged. Leaving the device in hot or cold places will reduce the capacity and lifetime of the battery. Optimal temperature for the battery is between 15°C and 25°C (59°F and 77°F). A device with a hot or cold battery may not work temporarily, even when the battery is fully charged. Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged. Always dispose of batteries according to local regulations. Please recycle. Do not dispose as household waste.  RECYCLE 1-800-822-3881 WARNING: Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged. Always dispose of batteries according to local regulations. Please recycle. Do not dispose as household waste. BATTERY CAUTION: Do not disassemble, short circuit, or expose to fire or high temperature. Properly connect specified devices. Recycle battery according to local, state and national regulations. It may damage your hearing if you listen with high volume for a long time. It is recommended you use the lowest volume possible for listening to music.	LIMITED WARRANTY EQ Cases & Accessories, Inc. warrants to the first consumer purchaser that this product, when shipped in its original container to the original purchaser, will be free from defective workmanship and materials for one year and agrees that, with its option, either repair the defect and replace the defective product or part thereof at no charge to the purchaser for parts or labor for the time periods described. This warranty does not apply to any appearance items of the product nor to the additional excluded items set forth below nor to any products the exterior of which has been damaged or defaced which design or construction. The limited warranty described herein is in addition to an applicable law. ALL IMPLIED WARRANTIES INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE PERIOD FROM THE DATE OF ORIGINAL PURCHASE SET FORTH BELOW. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. Neither the salesperson of the seller nor any other person is authorized to make any warranties other than those described herein or to extend the duration of any warranties beyond the time period described herein on the behalf of EQ Cases & Accessories, Inc. The warranties described herein shall be the sole and exclusive warranties granted by EQ Cases & Accessories, Inc. and shall be the sole and exclusive remedy available to the purchaser in connection with defects, in the manner and for the period of time described herein, shall constitute complete fulfillment of all liabilities and responsibilities of EQ Cases & Accessories, Inc. to the purchaser with respect to the product and shall constitute full satisfaction of all claims, whether based on contract negligence, strict liability and responsibilities of EQ Cases & Accessories, Inc. be liable in any way responsible for any incidental or consequential damages, to the above exclusion may not apply to you. THE WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE. This warranty does not cover cables that have become frayed, cracked, or broken from use. The user should immediately replace this, or any, charge cable that has become frayed, cracked, or broken, as it may constitute a serious safety risk, including electrocution, if it is continued to be used. Send product with \$11.95 shipping & handling fee to: Manufactured by EQ Cases & Accessories, 44 East 23rd Street New York, NY 10016 Tech Support: (212) 483-4838 https://eiscall.com techsupport@eq-cases.com

PLEASE FOLLOW DIE CUT & FOLD LINES

FOLD CUT